



80000ST10028A Rev. 27 - 2022-05-11





APPLICABILITY TABLE

PRODUCTS	Platform Version ID	Technology		
GL865 SERIES				
GE865-QUAD	10			
GE864 V2 SERIES	10			
GL868-DUAL				
GE910 SERIES	13	2G		
GE910-QUAD-V3				
GE866-QUAD	47			
GL865 V3 SERIES	16			
GL868-DUAL V3				
HE910 SERIES				
UE910 SERIES	40	3G		
UL865 SERIES	12			
UE866 SERIES				
LE910 Cat1 SERIES	00			
LE910 V2 SERIES	20			
LE866 SERIES	22			
ME866A1 SERIES	- 23			
LE910Cx SERIES	25	/0		
ME910C1 SERIES	20	4G		
ML865C1 SERIES	30			
ME310G1 SERIES				
ME910G1 SERIES	37			
ML865G1 SERIES				





Note: Platform Version ID is a reference used in the document to identify a series of modules; each module is named with the serial name followed by a suffix (series name-suffix). In addition, Platform Version ID is used in the tag of the different SW versions, e.g. 10 for SW version 10.xx.xxx, 13 for SW version 13.xx.xxx, and so on.



CONTENTS

APPLICA	BILITY TABLE	2
CONTENT	·S	4
AT COMM	ANDS LIST	13
1.	INTRODUCTION	14
1.1.	Scope	14
1.2.	Audience	14
1.3.	Contact Information, Support	14
1.4.	Symbol Convention	15
1.5.	Related Documents	16
2.	PRELIMINARY INFORMATION	17
3.	IP EASY FEATURES	18
4.	2G/3G MODULES	21
4.1.	Context Types	21
4.1.1.	PDP Context Setting, +CGDCONT Command	21
4.1.2.	Example 2G	21
4.1.3.	Example 3G	22
4.2.	PDP Context Activation, #SGACT Command	22
4.2.1.	Max Number of Active PDP Contexts	24
4.2.2.	Automatic Activation/Reactivation, #SGACTCFG Command	27
4.2.3.	Abort Context Activation, #SGACTCFGEXT Command	27
4.2.4.	Authentication Setting, #SGACTAUTH Command	27
4.2.5.	Examples	28
4.2.5.1.	PDP Contexts and Sockets Bindings	28
4.2.5.2.	PDP Context Activation/Reactivation	30
4.3.	PDP Context Activation, +CGACT Command	30
4.4.	IP Address Information, #CGPADDR Command	31
4.5.	QoS Setting (2G/3G)	33
4.5.1.	Minimum QoS Setting, +CGQMIN Command	33
4.5.1.1.	Examples 2G	33





4.5.2.	Required QoS Setting, +CGQREQ Command	35
4.6.	QoS Setting (3G)	36
4.6.1.	Minimum QoS Setting, +CGEQMIN Command	36
4.6.2.	Required QoS Setting, +CGEQREQ Command	37
5.	4G MODULES	38
5.1.	Default EPS Bearer at Power ON	38
5.2.	PDP Context Setting, +CGDCONT Command	40
5.2.1.	Platform Version ID 20	40
5.2.1.1.	Modules: LE910 Series	41
5.2.1.2.	Modules: LE910-SV1, -SVL, SV V2	41
5.2.2.	Platform Version ID 23	42
5.2.2.1.	Modules: LE866-SV1, ME866A1-NV	43
5.2.2.2.	Modules: LE866A1-NA, -KK, -JS, -KS, ME866A1-NA	44
5.2.3.	Platform Version ID 25	44
5.2.3.1.	Modules: LE910Cx Series	45
5.2.4.	Platform Version ID 30, 37	45
5.3.	Establish a Default EPS Bearer	45
5.4.	PDP Context Activation, #SGACT Command	46
5.4.1.	Max Number of Active PDP Contexts	47
5.4.2.	Platform Version ID 20	47
5.4.2.1.	Modules: LE910 Series	48
5.4.2.2.	Modules: LE910-SV1, -SVL, SV V2	48
5.4.3.	Platform Version ID 23, 25	48
5.4.3.1.	Platform Version ID 23	49
5.4.3.2.	Platform Version ID 23, 25	49
5.4.4.	Platform Version ID 30, 37	49
5.5.	IP Address Information, #CGPADDR Command	50
5.6.	Change a Default EPS Bearer	50
5.7.	Dedicated EPS Bearer	52
5.8.	Multiple PDN, #DUALAPN Command	53
5.8.1.	Platform Version ID 20	53
5.8.1.1.	Modules: LE910 Series	53



5.8.1.2.	Examples on #DUALAPN=0 Mode	54
5.8.1.3.	Examples on #DUALAPN=1 Mode	57
5.8.2.	Platform Version ID 30, 37	61
5.8.2.1.	Platform Version ID 30, 37 - Example	61
5.9.	Authentication Setting, #PDPAUTH Command	62
5.9.1.	Platform Version ID 20 and 25	62
5.9.1.1.	Modules: LE910 and, LE910Cx Series	62
5.9.2.	Platform Version ID 30, 37	63
5.9.2.1.	Platform Version ID 30, 37 - Example	63
6.	OUTGOING SOCKETS IN ONLINE MODE	65
6.1.	Sockets Configuration, #SCFG Command	65
6.1.1.	2G/3G Modules	65
6.1.2.	4G Modules	66
6.1.2.1.	Platform Version ID 20	66
6.1.2.2.	Platform Version ID 23	69
6.1.2.3.	Platform Version ID 30, 37	70
6.2.	Open a Socket, #SD Command	71
6.2.1.	Example on Opening & Suspension, (2G/3G)	71
6.3.	Pending Data, #PADCMD, #PADFWD Commands	73
6.4.	Resume a Connection, #SO Command	74
6.5.	Close a Connection, #SH, #SLASTCLOSURE Commands	75
6.6.	TCP/IP Options Configuration	76
6.6.1.	Reassemble TCP Packets, #TCPREASS Command (2G)	76
6.6.2.	Max TCP Payload Size, #TCPMAXDAT Command (2G)	76
6.6.3.	#BASE64 Command	76
7.	INCOMING SOCKETS IN ONLINE MODE	78
7.1.	Accept an Incoming Connection, #SA Command	79
7.2.	Check the Socket State, #SS Command	80
7.3.	Open UDP Connection, #SLUDP Command	80
7.4.	Firewall Setting, #FRWL Command	80
7.5.	Examples	81
7.5.1.	Modules in Server and Client Configurations	81





8.	SOCKET CONNECTION IN COMMAND MODE	84
8.1.	Open a Socket, #SD Command	84
8.2.	Accept an Incoming Connection, #SA Command	84
8.3.	Extended Socket Parameters Configuration	85
8.3.1.	#SCFGEXT Command	85
8.3.2.	#SCFGEXT2 Command	86
8.3.2.1.	2G modules	86
8.3.2.2.	3G/4G modules	86
8.4.	Send Data, #SSEND and #SSENDEXT Commands	86
8.5.	Receive Data, #SRECV Command	87
8.6.	Socket Information, #SI Command	88
8.7.	Examples	88
8.7.1.	Switching from COMMAND to ONLINE Mode and Back	88
8.7.2.	Accept a Socket Connection in COMMAND Mode	89
8.7.3.	SRING Unsolicited Mode: Normal	90
8.7.4.	SRING Unsolicited Mode: Data Amount	91
8.7.5.	SRING Unsolicited Mode: Data View	92
8.7.6.	SRING Unsolicited Mode: Data view UDP	93
9.	MULTI-SOCKET AND PROTOCOL SERVICE SOCKETS	95
9.1.	2G/3G Modules	95
9.2.	4G Modules	96
9.2.1.	#PROTOCOLCFG Command	96
9.2.2.	Platform Version ID 20	96
9.2.2.1.	Modules: LE910 Series	96
9.2.2.2.	Modules: LE910-SV1, -SVL, SV V2	98
9.2.3.	Platform Version ID 25	100
9.2.3.1.	Modules: LE910Cx	100
10.	HTTP PROTOCOL	102
10.1.	#HTTPCFG Command	102
10.1.1.	2G Modules	102
10.1.2.	3G Modules	103
10.1.3.	4G Modules	105



10.1.3.1.	Platform Version ID 20	105
10.1.3.2.	Platform Version ID 23	106
10.1.3.3.	Platform Version ID 25	106
10.1.3.4.	Platform Version ID 30, 37	106
10.2.	#HTTPQRY: GET, HEAD, DELETE	107
10.3.	#HTTPSND: POST, PUT	107
10.4.	Examples	108
10.4.1.	GET Command (2G)	108
10.4.2.	POST Command (2G)	109
10.4.3.	PUT Command (2G)	110
10.4.4.	HTTP Client with #SD	111
11.	SMTP PROTOCOL	113
11.1.	2G Modules	113
11.2.	3G Modules	114
11.3.	4G Modules	114
11.3.1.	Platform Version ID 20, 23	114
11.3.2.	Platform Version ID 25	115
11.3.3.	Platform Version ID 30, 37	115
11.4.	E-mail Sending, with no Attachment	115
11.5.	E-mail Sending, with Attachment	115
11.6.	Examples	116
11.6.1.	With no Attachment	116
11.6.2.	With Attachment	117
11.6.3.	Sending with #SD	118
11.6.4.	Receiving with #SD	119
12.	FTP PROTOCOL	121
12.1.	2G/3G Modules	121
12.2.	4G Modules	122
12.3.	Examples	123
12.3.1.	Open Six Sockets and the FTP Connection	123
12.4.	FTP Time Out Setting, #FTPTO Command	125
12.5.	FTP Transfer Type Setting, #FTPTYPE Command	126






12.6.	FTP Uploading, #FTPPUT, #FTPAPPEXT Command	126	
12.7.	#FTPSIZE, #FTPAPP Commands	126	
12.8.	Examples	127	
12.8.1.	Data Uploading in ONLINE Mode	127	
12.8.2.	Data Uploading in COMMAND Mode	129	
12.9.	FTP Downloading	130	
12.9.1.	Downloading in ONLINE Mode	130	
12.9.2.	Downloading in COMMAND Mode	130	
12.10.	FTP Downloading Restart	131	
12.11.	Examples	131	
12.11.1.	File Downloading in ONLINE Mode	131	
12.11.2.	File Downloading in COMMAND Mode	133	
12.11.3.	FTP and 4G Modules	134	
13.	MQTT PROTOCOL	138	
13.1.	MQTT Client Initialization, #MQEN Command	138	
13.2.	MQTT Client Configuration Commands	139	
13.2.1.	#MQCFG Command	139	
13.2.2.	#MQCFG2 Command	140	
13.2.3.	#MQWCFG Command	140	
13.2.4.	#MQTCFG Command	141	
13.3.	MQTT Client Connection Commands	141	
13.3.1.	#MQCONN Command	141	
13.3.2.	#MQDISC Command	142	
13.4.	Example	142	
13.4.1.	MQTT Client Connection Unsecured	142	
13.5.	MQTT Operations - Publish, Subscribe, and Unsubscrib	e Commands	144
13.5.1.	#MQPUBS Command	144	
13.5.2.	#MQSUB Command	145	
13.5.3.	#MQUNS Command	145	
13.6.	MQTT Publish Read	146	
13.6.1.	#MQRING URC	146	
13.6.2.	#MQREAD Command	146	



13.7.	Example	147
13.7.1.	Publish, Subscribe and Unsubscribe Operations	147
14.	PING PROTOCOL	151
14.1.	2G/3G Modules	151
14.2.	4G Modules	152
15.	EASY GSM: IP OVER CSD	154
15.1.	GSM Context Setting	154
15.2.	GSM Context Activation	155
15.3.	Examples	155
15.3.1.	GSM/PDP Contexts & FTP Protocol	155
15.3.2.	GSM Context & +COPS=? Command	158
15.3.3.	HTTP Client with #SD	160
15.3.4.	FTP File Uploading	161
15.3.5.	E-mail with no Attachment	163
15.3.6.	Modules in Server and Client Configuration	164
16.	DIALUP CONNECTION	167
16.1.	Examples	167
16.1.1.	Start PPP Protocol	167
16.1.2.	Dial-up Using <cid>=1 by default (2G)</cid>	168
16.1.3.	Dial-up Using <cid>=1 by default (3G)</cid>	169
16.1.4.	4G Module	170
16.1.4.1.	Dial-up & #DUALAPN Command (Platform Version ID 20)	170
16.1.4.2.	Dial-up & #DUALAPN Command (Platform Version ID 20)	172
16.1.4.3.	Dial-up Command, Platform Version ID 25, 30, 37	174
17.	APPENDIX	175
17.1.	IPv6 Protocol	175
17.1.1.	2G Modules	175
17.1.2.	3G Modules	176
17.1.3.	4G Modules	176
17.2.	IPv4, IPv6, and Dual-Stack	176
	11 V4, 11 VO, and Dual-Stack	170

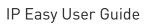



19.	GLOSSARY	194
18.3.	Safety Recommendations	192
18.2.6.	Waiver of Liability	192
18.2.5.	3rd Party Rights	192
18.2.4.	Trademarks	191
18.2.3.	High Risk Materials	191
18.2.2.	Copyrighted Materials	191
18.2.1.	License Agreements	191
18.2.	Usage and Disclosure Restrictions	191
18.1.2.	Computer Software Copyrights	190
18.1.1.	Copyrights	190
18.1.	Copyrights and Other Notices	190
18.	PRODUCT AND SAFETY INFORMATION	190
17.8.	Obsolete Commands	188
17.7.	#NWMODE Command	186
17.6.2.	Modules: LE910-SV1, -SVL, SV V2	185
17.6.1.	Modules: LE910 Series	185
17.6.	#MBIMCFG Command	185
17.5.2.	#NCM Command, Mode=2	183
17.5.1.	#NCM Command, Mode=1	181
17.5.	#NCN Command	181
17.4.6.	#FRWLIPV6 Command & IPV6 Notation	180
17.4.5.	#DNS Command & IPV6 Notation	180
17.4.4.	#PING Command & IPV6 Notation	180
17.4.3.	#FTPOPEN Command & IPV6 Notation	179
17.4.2.	#SD Command & IPV6 Notation	179
17.4.1.	+CGDCONT Command & IPV6 Notation	179
17.4.	Examples	179
17.3.1.	+CGPIAF Command	178
17.3.	IPv6 Notation	178
17.2.2.	3G/4G Modules	177



195



AT Commands List

The following list, organized in alphabetical order, shows the AT commands covered by this User Guide. The number close to each command indicates the page of the first AT command occurrence.

AT#BASE64	78	AT#MQCFG	145	AT#SI	91
AT#CEERNET	56	AT#MQCFG2	146	AT#SKIPESC	78
AT#CGPADDR	32	AT#MQCONN	148	AT#SL	80
AT#DNS	188	AT#MQDISC	148	AT#SLASTCLOSURE	77
AT#DUALAPN	54	AT#MQEN	144	AT#SLUDP	82
AT#EADDR	122	AT#MQPUBS	151	AT#SMTPCFG	118
AT#EMAILD	121	AT#MQREAD	153	AT#SMTPCL	121
AT#EPASSW	122	AT#MQSUB	151	AT#S0	75
AT#ESMTP	122	AT#MQTCFG	147	AT#SRECV	90
AT#EUSER	122	AT#MQUNS	152	AT#SS	82
AT#FRWL	83	AT#MQWCFG	147	AT#SSEND	90
AT#FTPAPP	133	AT#NCM	47	AT#SSENDEXT	90
AT#FTPAPPEXT	132	AT#NWMODE	179	AT#TCPMAXDAT	77
AT#FTPCLOSE	128	AT#PADCMD	74	AT#TCPREASS	77
AT#FTPGET	136	AT#PADFWD	75	AT+CGACT	32
AT#FTPGETPKT	136	AT#PDPAUTH	63	AT+CGATT	30
AT#FTPOPEN	127	AT#PING	157	AT+CGAUTH	64
AT#FTPPUT	132	AT#PROTOCOLCFG	100	AT+CGCONTRDP	40
AT#FTPPWD	138	AT#SA	81	AT+CGDCONT	22
AT#FTPREST	137	AT#SCFG	19	AT+CGPADDR	55
AT#FTPT0	131	AT#SCFGEXT	88	AT+CGPIAF	186
AT#FTPTYPE	132	AT#SCFGEXT2	89	AT+CGQMIN	34
AT#GSMCONT	22	AT#SD	32	AT+CGQREQ	36
AT#HTTPCFG	106	AT#SGACT	34	AT+CMEE	26
AT#HTTPQRY	111	AT#SGACTAUTH	28	AT+COPS	55
AT#HTTPRCV	113	AT#SGACTCFG	28	AT+WS46	176
AT#HTTPSND	112	AT#SGACTCFGEXT	28	ATD	47
AT#ICMP	157	AT#SH	76		



1. INTRODUCTION

1.1. Scope

This document illustrates the set of AT commands used to manage IP Easy features. Reading these pages, it is suggested to refer to the AT Command Reference Guide according to the product you are using (2G/3G/4G). The present guide describes the use of the AT commands through examples.

1.2. Audience

The reader is expected to have experience in 2G/3G/4G technologies as well as in Telit's AT Commands interface.

1.3. Contact Information, Support

For general contact, technical support services, technical questions, and reports of documentation errors contact Telit Technical Support at:

- TS-EMEA@telit.com
- TS-AMERICAS@telit.com
- TS-APAC@telit.com
- TS-SRD@telit.com
- TS-ONEEDGE@telit.com

Alternatively, use:

https://www.telit.com/contact-us

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

https://www.telit.com

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates the user feedback on our information.



1.4. Symbol Convention



Danger: This information MUST be followed or catastrophic equipment failure or personal injury may occur.



Warning: Alerts the user on important steps about the module integration.



Note/Tip: Provides advice and suggestions that may be useful when integrating the module.



Electro-static Discharge: Notifies the user to take proper grounding precautions before handling the product.

Table 1: Symbol Conventions

All dates are in ISO 8601 format, that is. YYYY-MM-DD.



1.5. Related Documents

- [1] AT Commands Reference Guide, 80000ST10025a
- [2] Telit 3G Modules AT Commands Reference Guide, 80378ST10091A
- [3] Telit's Modules Software User Guide, 1vv0300784
- [4] LE910 V2 Series AT Commands Reference Guide, 80446ST10707A
- [5] SSL/TLS Users Guide, 1vv0300989
- [6] Telit CMUX Implementation User Guide, 1vv0300994
- [7] Telit 3G Modules Ports Arrangements User Guide, 1vv0300971
- [8] GE910 Series Ports Arrangements User Guide, 1vv0301049
- [9] LE910 V2, LE910 Cat1 NCM Protocol User Guide, 1vv0301246
- [10] LE910 V2, LE910 Cat1 Ports Arrangements User Guide, 1vv0301252
- [11] LE/ME 866 Series AT Commands Reference Guide, 80471ST10691A LE866-SV1/LE866A1-NA AT Commands Reference Guide, 80471ST10691A
- [12] LE866, ME866A1 Ports Arrangements User Guide, 1vv0301469
- [13] LE910Cx AT Commands Reference Guide, 80502ST10950A
- [14] ME910C1/ML865C1 AT Commands Reference Guide, 80529ST10815A
- [15] ME310G1/ME910G1/ML865G1 AT Commands Reference Guide, 80617ST10991A



2. PRELIMINARY INFORMATION

The AT commands covered by this guide are not described with an exhaustive list of their parameters and their related meanings, the guide gives more space to examples describing the major concepts about the IP Easy features.



Warning: To get information on AT commands syntax and related parameters, refer to the AT Command Reference Guide according to the module you are using, see section 1.5 Related Documents.



3. IP EASY FEATURES

Telit modules provide a set of communication features accessible to the user through AT commands. This environment is a software layer based on the TCP/IP protocol stack and a set of AT commands: it is called IP Easy. Using these AT commands, the user device, connected through a serial line to the Telit module, exchanges data with a remote device on the Internet network, refer to Figure 1. Telit module establishes a connection over a radio interface using its internal TCP/IP protocol stack, and exchanges TCP/IP packets with the remote device. In this scenario, the user device does not need an own TCP/IP protocol stack.

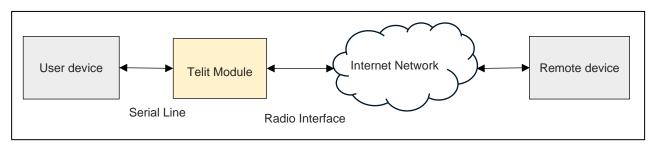


Figure 1: PSD Connection

IP Easy environment provides the following features:

Multi-socket environment.

It supports up to N sockets, the N value depends on the module you are using. To know the N value, use the AT#SCFG=? Test command. The N socket connections can be distributed over the available physical ports, as shown in Figure 2 and Figure 3.

The AT Commands Interfaces (AT Parsers: ATO, AT1, AT2) can work in COMMAND mode or ONLINE mode. In COMMAND mode, the user can send AT commands which are parsed by the AT parser, and, on the same physical line, the user receives the AT commands responses.

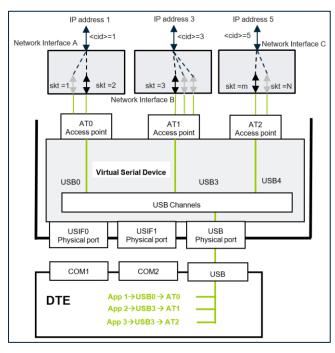


Figure 2: Example of Ports Config. and Skt Distribution



In ONLINE mode, the data entered by the user are forwarded on the current connection toward the remote host. The data sent by the remote host are forwarded, on the same physical line, to the user.

You can use the #PORTCFG command to manage the physical port configuration of the module. In Figure 2 and Figure 3 the gray rows indicate sockets that are open, working in the background, and not exchanging data with the user. The black rows indicate the sockets that currently are exchanging data with the user.

The Figure 3 shows an example using the #PORTCFG command and the CMUX tool (VC1, VC2, VC3):

- App 1 connected on VC1/AT0 manages two sockets. The picture shows the time interval in which socket=1 is suspended, and socket=2 is exchanging data with the user through AT0 Interface.
- App 2 connected on VC2/AT1 manages two sockets. The picture shows the time interval in which socket=4 is suspended, and socket=3 is exchanging data with the user through AT1 Interface. Note that the sockets belong to two different Network Interfaces, and the Network Interface can manage multiple sockets.
- App 3 connected on VC3/AT2 manages two sockets. The picture shows the time interval in which socket=5 is suspended, and socket=N is exchanging data with the user through AT2 Interface.

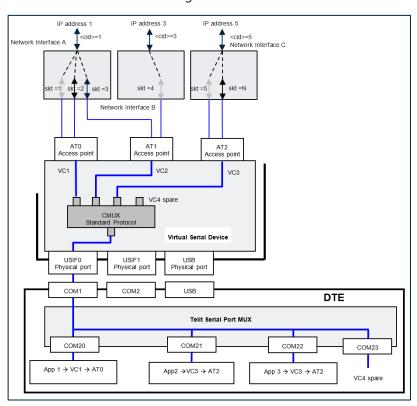


Figure 3: Example of CMUX and Socket Distribution



To have information on CMUX tool refer to document [6] and on #PORTCFG command refer to documents [7], [8], [10], [13], [14] or [15] according to the module used.

PDP context number activated at the same time

The max number of the PDP context that can be defined (+CGDCONT command), and the max number of PDP contexts that can be activated at the same time (#SGACT command) depend on the module you are using. For each active PDP context, the network assigns to the module an IP address, see Figure 2 and Figure 3.

Socket suspension/resumption

The ONLINE mode can be suspended with the escape sequence (+++), and the AT Interface enters COMMAND mode. During COMMAND mode, the data received from the remote host are buffered in the socket buffer.

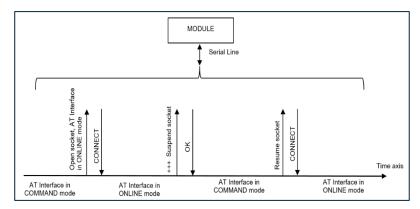


Figure 4: Switching from COMMAND to ONLINE mode

Data will be displayed on AT Interface after socket resumption (#S0 command), see examples in sections 8.7.1.

Simultaneous client Services

Multiple Multi-socket connections and simultaneous client Services, for example, FTP, can be opened. See example in section 12.3.1



4. 2G/3G MODULES

4.1. Context Types

The below table shows the context types provided by the 2G/3G modules. Two different AT commands are used to define PDP and GSM contexts, but only one command (#SGACT) activates them.

PDP Context Multi-Socket environment <cid>≠0</cid>	GSM Context Used in CSD connection Only <cid>=0</cid>		
AT+CGDCONT= <cid>, AT#SGACT=<cid>,1 Refer to next sections</cid></cid>	AT#GSMCONT=0, AT#SGACT=0,1 Refer to chapter 15		

Table 2: 2G/3G Context Types

4.1.1. PDP Context Setting, +CGDCONT Command

Use +CGDCONT command to define a PDP context. The command syntax is:

AT+CGDCONT =[<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp>

[,<h_comp>[,<pd1>[,...[,pdN]]]]]]]]

Here is an example of PDP context definition.

AT+CGDCONT= 1,"IP","Access_Point_Name","0.0.0.0",0,0

0K

Use the AT+CGDCONT=? test command to know the parameter ranges of the command.

To get parameters descriptions refer to documents [1] or [2], according to the module used.

4.1.2. Example 2G

Assume to use a module belonging to Platform Version ID 10, 13, 16. Type in the AT+CGDCONT=? test command to get the values of the supported parameters. The returned message shows the <cid> range: 1-5 of the PDP contexts.

AT+CGDCONT=?

+CGDCONT: (1-5),"IP",,,(0,1),(0,1)

+CGDCONT: (1-5),"IPV6",,,(0,1),(0,1)



4.1.3. Example 3G

Assume to use a module belonging to Platform Version ID 12. Type in the AT+CGDCONT=? test command to get the values of the supported parameters. The returned message shows the <cid> range: 1-5 of the PDP contexts.

AT+CGDCONT=?

+CGDCONT: (1-5),"IP",,,(0,1),(0,1)

+CGDCONT: (1-5),"IPV6"...(0,1),(0,1)

+CGDCONT: (1-5),"IPV4V6",,,(0,1),(0,1)

0K

4.2. PDP Context Activation, #SGACT Command

The #SGACT command activates/deactivates one of the PDP contexts defined with +CGDCONT command. The command syntax is:

AT#SGACT= <cid>,<stat>[,<userId>,<pwd>]

Use the AT#SGACT=? test command to get the supported <cid> values range.
To get parameters descriptions, refer to documents [1] or [2], according to the module used.

AT#SGACT=?

#SGACT: (0-5), (0,1) \leftarrow < cid> range: 0-5

0K

The <cid>=0 is reserved for the GSM context, refer to chapter 15.


The following table shows the five PDP contexts (identified by <cid>: 1-5) in not active state, and the default sockets/contexts binding configuration provided by the modules. Use the #SCFG command to manage the socket configuration, refer to section 6.1

IP Easy Multi- Socket <connld></connld>	<cid>=1 Not active</cid>	<cid>=2 Not active</cid>	<cid>=3 Not active</cid>	<cid>=4 Not active</cid>	<cid>=5 Not active</cid>
1	bound	/	/	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	bound	/	/	/
5	/	bound	/	/	/
6	/	bound	/	/	/

Table 3: 2G/3G Default Sockets/Contexts Binding Configuration & PDP State




AT#SGACT=<cid>,1 activates the PDP context identified by the <cid>, and creates a Network Interface, related to the <cid>, to use the TCP/IP protocol running on the module. The Network Interface is the connection between the IP address, assigned to the module by the network, and the internal structure of the module

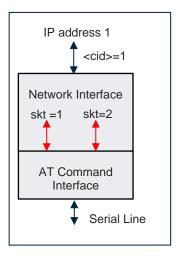


bind <cid>=1 to socket=1: AT#SCFG=1,1,... (see section 6.1)

bind <cid>=1 to socket=2: AT#SCFG=2,1,...
Activate <cid>=1: AT#SGACT=1,1

Note: the sockets are not open.

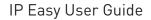




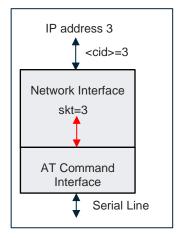

bind <cid>=3 to socket=3: AT#SCFG=3,3,...
Activate <cid>=3: AT#SGACT=3.1

Note: the sockets are not open.

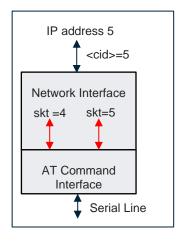

bind <cid>=5 to socket=4: AT#SCFG=4,5,... bind <cid>=1 to socket=2: AT#SCFG=5,5,... Activate <cid>=5: AT#SGACT=5,1

Note: the sockets are not open.

The command AT#SGACT=<cid>,0 deletes the PDP context and its Network Interface.

4.2.1. Max Number of Active PDP Contexts

As stated in chapter 3, the max number of the PDP contexts that can be defined (+CGDCONT command), and the max number of PDP contexts that can be activated at the same time (#SGACT command) depend on the module you are using.

This example shows how to check the max number of PDP contexts that can be activated at the same time by the module under test.

Assume to use the HE910 module. It supports up to three active PDP contexts, for each active PDP context the network assigns to the module an IP address. This is valid for all modules having Platform Version ID = 12.



Check the module type under test.

AT+CGMM

HE910

0K

Enable ERROR report in verbose format.

AT+CMEE=2

0K

Check the current PDP context configuration.

AT+CGDCONT?

+CGDCONT: 1,"IP"," Access_Point_Name ","",0,0

+CGDCONT: 2,"IP"," Access_Point_Name ","",0,0

+CGDCONT: 3,"IP"," Access_Point_Name ","",0,0

+CGDCONT: 4,"IP"," Access_Point_Name ","",0,0

+CGDCONT: 5,"IP"," Access_Point_Name ","",0,0

0K

Check the current Multi-sockets/PDP contexts configuration.

AT#SCFG?

#SCFG: 1,5,300,90,600,50

#SCFG: 2,5,300,90,600,50

#SCFG: 3,4,300,90,600,50

#SCFG: 4,3,300,90,600,50

#SCFG: 5,2,300,90,600,50

#SCFG: 6,1,300,90,600,50



Check if some PDP context is active. The following response shows that no PDP contexts are active.

AT#SGACT?

#SGACT: 1,0

#SGACT: 2,0

#SGACT: 3,0

#SGACT: 4,0

#SGACT: 5,0

0K

Activate PDP context identified by <cid>=1.

AT#SGACT=1,1

#SGACT: 2.192.12.25

0K

Activate PDP context identified by <cid>=2.

AT#SGACT=2,1

#SGACT: 2.192.17.170

0K

Activate PDP context identified by <cid>=3.

AT#SGACT=3,1

#SGACT: 2.192.20.171

0K

Check which are the active PDP contexts.

AT#SGACT?

#SGACT: 1,1

#SGACT: 2,1

#SGACT: 3,1

#SGACT: 4,0

#SGACT: 5,0



Try to activate the fourth and fifth PDP context

AT#SGACT=4,1

+CME ERROR: activation failed

AT#SGACT=5.1

+CME ERROR: activation failed

4.2.2. Automatic Activation/Reactivation, #SGACTCFG Command

Use #SGACTCFG command to enable/disable the automatic activation/reactivation of the PDP context specified by the <cid> identifier. The PDP context is automatically activated after every:

- attach procedure
- network PDP context deactivation
- SIM removal

if at least one IP Easy socket has been configured to use the PDP context (see #SCFG). The command syntax is:

AT#SGACTCFG=<cid>,<retry>[,<delay>[,<urcmode>]]

To get parameters descriptions, refer to documents [1] or [2], according to the used module.

4.2.3. Abort Context Activation, #SGACTCFGEXT Command

Use #SGACTCFGEXT command to abort a context activation attempt. The command syntax is:

AT#SGACTCFGEXT=<cid>,<abortAttemptEnable>[,<unused>[,<unused>]]]

To get parameters descriptions, refer to documents [1] or [2], according to the module used.

4.2.4. Authentication Setting, #SGACTAUTH Command

Use the #SGACTAUTH command to set authentication. The command syntax is:

AT#SGACTAUTH=<type>

To get parameters descriptions, refer to documents [1] or [2], according to the module used.





4.2.5. Examples

4.2.5.1. PDP Contexts and Sockets Bindings

Check the sockets/PDP contexts binding configuration. Refer to section 6.1 to get more information on the #SCFG command. The following response shows the default configuration.

AT#SCFG?

#SCFG: 1,1,300,90,600,50

#SCFG: 2,1,300,90,600,50

#SCFG: 3,1,300,90,600,50

#SCFG: 4,2,300,90,600,50

#SCFG: 5,2,300,90,600,50

#SCFG: 6,2,300,90,600,50

0K

Before activating PDP contexts <cid>=3 and <cid>=4, bind the sockets <connId>=1 and <connId>=5 respectively to PDP contexts <cid>=3 and <cid>=4.

AT#SCFG = 1, 3, 300, 90, 600, 50

0K

AT#SCFG = 5, 4, 300, 90, 600, 50

0K

Check the new sockets/PDP contexts binding configuration.

AT#SCFG?

#SCFG: 1,3,300,90,600,50

#SCFG: 2,1,300,90,600,50

#SCFG: 3,1,300,90,600,50

#SCFG: 4,2,300,90,600,50

#SCFG: 5,4,300,90,600,50

#SCFG: 6,2,300,90,600,50



Assume that the PDP contexts has been set as shown below.

AT+CGDCONT?

+CGDCONT: 3,"IP","Access_Point_Name ","0.0.0.0",0,0

+CGDCONT: 4,"IP","Access_Point_Name","0.0.0.0",0,0

0K

Check if the module is attached.

AT+CGATT?

+CGATT: 1 ← the module is attached.

0K

AT#SGACT = 3,1 ← activate the PDP context 3

#SGACT: 31.157.55.95

OK

AT#SGACT = 4,1 ← activate the PDP context 4

#SGACT: 31.159.34.186

0K

On success, the #SGACT command returns the IP address assigned to the module by the network. The user application can use the just received IP address for its targets. The PDP context deactivation frees the network resources.

The below table shows the new PDP contexts configuration.

IP Easy Multi- Socket <connld></connld>	<cid>=1 Not active</cid>	<cid>=2 Not active</cid>	<cid>=3 Active</cid>	<cid>=4 Active</cid>	<cid>=5 Not active</cid>
1	/	/	bound	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	bound	/	/	/
5	/	/	/	bound	/
6	/	bound	/	/	/

Table 4: Example of PDP Contexts Configuration



4.2.5.2. PDP Context Activation/Reactivation

Set activation/reactivation of PDP context <cid>=1, with 3 attempts.

AT#SGACTCFG=1,3

0K

Before using the #SGACTCFG command, the <cid> must be connected to a socket, see AT#SCFG? read command

4.3. PDP Context Activation, +CGACT Command

The +CGACT command activates a PDP context defined by the +CGDCONT command, but the PDP context cannot be used with Multi-socket commands. Therefore, if you try to open a socket with #SD, you get an error message indicating "context not opened".



Warning: It is recommended to use the command #SGACT instead of the command +CGACT.

Example:

Enable ERROR report in verbose format.

AT+CMEE=2

0K

Check the sockets/PDP contexts binding configuration.

AT#SCFG?

#SCFG: 1,1,300,90,600,50

#SCFG: 2,2,300,90,600,50

#SCFG: 3,2,300,90,600,50

#SCFG: 4,2,300,90,600,50

#SCFG: 5,2,300,90,600,50

#SCFG: 6,2,300,90,600,50

0K

Check the PDP contexts state.

AT#SGACT?

#SGACT: 0,0





#SGACT: 1,0

#SGACT: 2,0

0K

Activate the PDP context identified by <cid>=1.

AT+CGACT=1,1

0K

AT#SGACT?

#SGACT: 0,0

#SGACT: 1,1

#SGACT: 2,0

0K

Open the connection.

AT#SD=1,0,20510,"server_address",0,0,1

+CME ERROR: context not opened

4.4. IP Address Information, #CGPADDR Command

Once activated the PDP or GSM (refer to chapter 15 Easy GSM: IP OVER CSD) context, to get the IP address assigned by the network to the module, use the #CGPADDR command. If no <cid> are specified, it reports the addresses for all activated contexts.

- <cid>=0 identifies the GSM context
- <cid>=1-5 identify PDP contexts

AT#CGPADDR= [<cid>[.<cid>[....]]]

To get parameters descriptions refer to documents [1] or [2] according to the used module.



Check the defined PDP contexts.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access Point Name","0.0.0.0",0,0

+CGDCONT: 2,"IP","Access Point Name","0.0.0.0",0,0

+CGDCONT: 3,"IP","Access_Point_Name","0.0.0.0",0,0

+CGDCONT: 4,"IP","Access_Point_Name","0.0.0.0",0,0

+CGDCONT: 5,"IP","Access_Point_Name","0.0.0.0",0,0

0K

Check the defined GSM context.

AT#GSMCONT?

#GSMCONT: 0,"IP","ISP_phone_number"

0K

Use AT#CGPADDR=? test command to check which <cid> are defined.

AT#CGPADDR=?

#CGPADDR: (0,1,2,3,4,5)

0K

Remove GSM context identified by <cid>=0

AT#GSMCONT=0

0K

Remove PDP context identified by <cid>=3

AT+CGDCONT=3

0K

Use AT#CGPADDR=? test command to check the new group of defined <cid>.

AT#CGPADDR=?

#CGPADDR: (1,2,4,5)



Define GSM context. Refer to chapter 15.

AT#GSMCONT=0,"IP","ISP_phone_number"

0K

Activate the GSM context. The command returns the IP address assigned by the network to the module.

AT#SGACT = 0.1

#SGACT: "10.137.93.60"

0K

Get the IP address associated with the GSM context.

AT#CGPADDR = 0

#CGPADDR: 0,"10.137.93.60"

0K

4.5. QoS Setting (2G/3G)

4.5.1. Minimum QoS Setting, +CGQMIN Command

Use the +CGQMIN command to specify the minimum QoS profile under which the 2G connection quality is no longer acceptable, and the connection will be terminated. The command syntax is:

AT+CGQMIN=[<cid>[,cid>[,cedence>[,<delay>[,<reliability>[,peak>[,<mean>]]]]]]

Refer to documents [1] or [2] to get parameters descriptions. In addition, refer to standards 3GPP TS 27.007, 3GPP TS 23.107, and 3GPP TS 03.60 (Release 1998).

NOTE:

- I. The +CGQMIN command can modify the 3G QoS according to 3GPP 23.107.
- II. If the minimum requirements are too high, PDP activation could be impossible due to the lack of network resources needed to guarantee the required QoS. In this case, the minimum quality requirements must be reduced. It is suggested to use the default setting values.

4.5.1.1. Examples 2G

Here are two examples.



Example 1

Assume to use a module belonging to Platform Version ID 16. Suppose that the PDP context has been already defined and identified by <cid>=1. Now, bind the PDP context <cid>=1 to the desired minimum QoS profile.

0K

Use AT+CGQMIN=? test command to check the supported value of the PDP type and the values ranges of all other parameters. Currently is supported only by the "IP" Packet Data Protocol type.

AT+CGQMIN=?

+CGQMIN: "IP",(0-3),(0-4),(0-5),(0-9),(0-18,31)

0K

Example 2

Assume to use a module belonging to Platform Version ID 16.

Check the already defined PDP contexts.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0

+CGDCONT: 2,"IP","Access_Point_Name","",0,0

+CGDCONT: 3,"IP","Access_Point_Name","",0,0

0K

Check the QoS of the defined PDP contexts.

AT+CGQMIN?

+CGQMIN: 1,0,0,0,0,0

+CGQMIN: 2,0,0,0,0,0

+CGQMIN: 3,0,0,0,0,0

0K

Remove the PDP context <cid>=2.

AT+CGDCONT=2





Check the remained PDP contexts.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0

+CGDCONT: 3,"IP","Access Point Name","",0,0

0K

Check the QoS of the remained PDP contexts

AT+CGQMIN?

+CGQMIN: 1,0,0,0,0,0

+CGQMIN: 3,0,0,0,0,0

0K

4.5.2. Required QoS Setting, +CGQREQ Command

This Use the +CGQREQ command to specify the required QoS profile to the 2G network. The QoS profile will be used when the PDP context is activated. The command syntax is:

AT+CGQREQ =[<cid>[,cedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]]]

Refer to documents [1] or [2] to get parameters descriptions. In addition, refer to standards 3GPP TS 27.007, 3GPP TS 23.107, 3GPP TS 03.60 (Release 1998).



Note: The +CGQREQ command can modify the 3G QoS according to 3GPP 23.107.

It is suggested to use the default setting values.

Check the requested QoS of the defined PDP contexts.

AT+CGQREQ?

+CGQREQ: 1,0,0,0,0,0

+CGQREQ: 3,0,0,0,0,0

0K

Modify the requested QoS bound to PDP context <cid>=1

AT+CGQREQ= 1,1,0,0,0,31



Check the requested QoS of the defined PDP contexts

AT+CGQREQ?

+CGQREQ: 1,1,0,0,0,31

+CGQREQ: 3,0,0,0,0,0

0K

Test command returns the supported value of the PDP type and the values ranges of all other parameters. Currently is supported only by the "IP" PDP type.

AT+CGQREQ=?

+CGQREQ: "IP",(0-3),(0-4),(0-5),(0-9),(0-18,31)

0K

4.6. **QoS Setting (3G)**

4.6.1. Minimum QoS Setting, +CGEQMIN Command

Use the +CGEQMIN command to specify the minimum QoS profile under which the 3G connection quality is not anymore acceptable, and the connection will be terminated. To have information on command syntax and parameters values refer to document [2]. In addition, refer to standards 3GPP TS 27.007, 3GPP TS 23.107, and 3GPP TS 03.60 (Release 1998).

AT+CGEQMIN=[<cid>[,<Traffic class>[,<Maximum bitrate UL>

[,<Maximum bitrate DL>[,<Guaranteed bitrate UL>

[,<Guaranteed bitrate DL>[,<Delivery order>

[,<Maximum SDU size>[,<SDU error ratio>

[,<Residual bit error ratio>[,<Delivery of erroneousSDUs>

[,<Transfer delay>[,<Traffic handling priority>

[,<Source statisticsdescriptor>

[,<Signallingindication>]]]]]]]]]]]]





Note:



- 1. The +CGEQMIN command can modify the 2G QoS according to 3GPP 23.107.
- 2. If the minimum requirements are too high, PDP activation could be impossible due to the lack of the network resources needed to guarantee the required QoS. In this case, the minimum quality requirements must be reduced. It is suggested to use the default setting values.

4.6.2. Required QoS Setting, +CGEQREQ Command

Use the +CGEQREQ command to specify the required QoS profile to the 3G network. The QoS profile is used when the PDP context is activated. To have information on command syntax and parameters values refer to document [2]. In addition, refer to standards 3GPP TS 27.007, 3GPP TS 23.107, and 3GPP TS 03.60 (Release 1998).

AT+CGEQREQ=[<cid>[,<Traffic class>[,<Maximum bitrate UL>

[,<Maximum bitrate DL>[,<Guaranteed bitrate UL>

[,<Guaranteed bitrate DL>[,<Delivery order>

[.<Maximum SDU size>[.<SDU error ratio>

[,<Residual bit error ratio>

[,<Delivery of erroneousSDUs>[,<Transfer delay>

[,<Traffic handling priority>[,<Source statisticsdescriptor>

[,<Signallingindication>]]]]]]]]]]]]

Note:



- 1. The +CGEQREQ command can modify the 2G QoS according to 3GPP 23.107.
- 2. It is suggested to use the default setting values.



5. 4G MODULES

In GPRS and 3G networks, the data session is established using the Packet Data Protocol (PDP) Context procedure. Before the PDP context is established, the module performs the attach procedure, which communicates to the network that the module is powered on. After the attach procedure is completed, the module can do the first PDP Context procedure that will establish the data session and allocate an IP address to the module. This PDP Context will have a QoS associated with it, based on the current needs. If the module needs to have multiple data sessions, it will do a second PDP Context activation. In LTE (4G) modules there are two types of data session setups.

Default Evolved Packet System (EPS) Bearer

When the module attaches to the network at power on, it will be assigned the needed default bearer that remains if module is attached. The default bearer will only support a nominal QoS (non-GBR bearer), but that should be enough for services not requiring GBR. Module can have an additional default bearer as well. Each default bearer comes with a separate IP address. When the module needs to establish a service with a required QoS, a dedicated bearer will be established. This will have the QoS requirements needed for the service.

Dedicated Evolved Packet System (EPS) Bearer

Dedicated bearer is created when the requested service cannot be fulfilled through the default bearer. Some services require a high level of QoS like VoIP, video, and so on. In this case, a dedicated bearer will be established with required QoS (can be GBR or non-GBR). A dedicated bearer does not require a separate IP address, only an additional default bearer needs an IP address therefore dedicated bearer is always linked to one of the default bearers established previously. It is possible to activate in dynamic mode or contextually at the default bearer one or more bearers dedicated to specific services.

5.1. Default EPS Bearer at Power ON

Assume to use the module LE910-EU1 (Platform Version ID 20). The following example shows that the PDP context <cid>=1 has not defined the Access Point Name (default configuration). During the attach procedure, the network assigns to the module the Default EPS Bearer that supports the services provided by the used Network Operator.

On the right side, for comparison, is also used a module having the Platform Version ID 13.



Power on the LE910-EU1 module (4G).	Power on a GE910-QUAD module (2G).
By default, the PDP context <cid>=1 has not defined APN.</cid>	By default, the PDP context <cid>=1 is not defined.</cid>
AT+CGDCONT?	AT+CGDCONT?
+CGDCONT: 1,"IPV4V6","","",0,0	OK
OK	
When the network recognizes the attach request with a not defined APN, the network assigns to <cid>=1 its Default EPS Bearer. The module is 4G attached.</cid>	
AT+CGATT?	The module is GPRS attached (2G).
+CGATT: 1	AT+CGATT?
ОК	+CGATT: 1
	OK
After the Attach procedure, the <cid>=1</cid>	
identifies the Default EPS Bearer assigned by the network, and it is automatically	
activated.	After the attached procedure, no PDP
AT+CGACT?	Contexts are active.
+CGACT: 1,1	AT+CGACT?
OK	OK

Power on the LE910-EU1 module (4G) - continued

List the dynamic parameters regarding the Default EPS Bearer assigned by the network and associated to <cid>=1 context identifier.

AT+CGCONTRDP=1

+CGCONTRDP:

1, cid

5, bearer_id

"APN_Assegned_by_Network", APN

"10.178.43.36.255.0.0.0", ip_addr and subnet_mask

"10.178.43.37", gw_addr



Power on the LE910-EU1 module (4G) - continued				
"213.230.129.10",	DNS_prim_addr			
"0.0.0.0",	DNS_sec_addr			
"0.0.0.0",	P_CSCF_prim_addr			
"0.0.0.0"	P_CSCF_sec_addr			
OK				

Note:

1. The services (for example: IMS, Internet, and so on) provided by the Default EPS Bearer depend on the Network Operator.



2. When the PDP context identified by <cid>=1 is set with user APN, it is used by the module during the 4G attachment and data connection procedures. Some Network Operators could not allow the 4G attachment when a user APN is used, therefore the network forces a detach procedure. If this happens, it is recommended to set the user APN on a PDP context identified by a <cid> different from 1 and keep on <cid>=1 the empty APN. To define a user APN, refer to section 5.5.



Note: It is suggested to leave <cid>=1 to the Network Operator activities (attach procedure, IMS registration, ...), and use for own activities the others available <cid>.

At module power on, some Network Operators provide an APN that supports the internet.

5.2. PDP Context Setting, +CGDCONT Command

5.2.1. Platform Version ID 20

Use the +CGDCONT command to define a PDP context according to the note II of section 5.1. To get information on the command syntax and its parameters refer to document [4].



AT+CGDCONT=[<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp> [,<h_comp>[,<IPv4AddrAlloc>[,<emergency_indication> [,<P-CSCF_discovery>[,<IM_CN_Signalling_Flag_Ind>]]]]]]]]]

Refer to document [4].

5.2.1.1. Modules: LE910 Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA,-EU V2, AU V2

Use the AT+CGDCONT=? test command to get the range of the supported values. <cid>

range: 1-15.

AT+CGDCONT=?

+CGDCONT: (1-15),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-15),"IPV6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-15),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

0K

Use the AT+CGDCONT? read command to get the current PDP contexts configurations. The following is the default configuration.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0

0K

This module provides a set of 15 <cid> (1-15). By default, the <cid>=1 is dedicated to the Default EPS Bearers. For more information about the socket/PDP context binding, refer to section 6.1.2.1.1.

5.2.1.2. Modules: LE910-SV1, -SVL, SV V2

Use the AT+CGDCONT=? test command to get the ranges of the supported values. <cid>range: 1-6.

AT+CGDCONT=?

+CGDCONT: (1-6),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-6),"IPV6"...0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-6),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

0K



Use the AT+CGDCONT? read command to get the current PDN connections configurations. The following is the default configuration.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","vzwims","",0,0 Service: IMS

+CGDCONT: 2,"IPV4V6","vzwadmin","",0,0 Service: ADMIN

+CGDCONT: 3,"IPV4V6","vzwinternet","",0,0 Service: INTERNET

+CGDCONT: 4,"IPV4V6","vzwapp","",0,0 Unused

+CGDCONT: 5,"IPV4V6","vzw800","",0,0 Unused

+CGDCONT: 6,"IPV4V6","vzwclass6","",0,0 Service: INTERNET

0K

For PDN connections identified by <cid>=1 and <cid>=2, PDP Type and APN name cannot be changed. Refer to the following example.

Enable error report in verbose format.

AT+CMEE=2

0K

Try to change PDP Type and APN name

AT+CGDCONT=1,"IP","Access_Point_Name"

+CME ERROR: operation not allowed

Try to change PDP Type and APN name

AT+CGDCONT=2,"IP","Access_Point_Name"

+CME ERROR: operation not allowed

For more information about the socket/PDN context binding, refer to section 6.1.2.1.2.

5.2.2. Platform Version ID 23

Use +CGDCONT command to define a PDN connection according to the note II of section 5.1. To get information on the command syntax and its parameters refer to document [11].

AT+CGDCONT=[<cid>[,<PDP_type>[,<APN>]]]

IP Easy User Guide



Refer to document [11].

5.2.2.1. Modules: LE866-SV1, ME866A1-NV

Use the AT+CGDCONT=? test command to get the range of the supported values. <cid>range is 1-4.

AT+CGDCONT=?

+CGDCONT: (1-4),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-4),"IPV6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-4),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

0K

Use the AT+CGDCONT? read command to get the current PDN connections configuration. The following is the default configuration.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","vzwims","",0,0,0,0,1,0 Service: IMS

+CGDCONT: 2,"IPV4V6","vzwadmin","",0,0 Service: ADMIN

+CGDCONT: 3,"IPV4V6","vzwinternet","",0,0 Service: INTERNET

0K

For PDN connections identified by <cid>=1 and <cid>=2, PDP Type and APN name cannot be changed. Refer to the following example.

Enable error report in verbose format.

AT+CMEE=2

ΩK

Try to change PDP Type and APN name

AT+CGDCONT=1,"IP","Access_Point_Name"

+CME ERROR: operation not allowed

Try to change PDP Type and APN name

AT+CGDCONT=2,"IP","Access_Point_Name"

+CME ERROR: operation not allowed



For more information about the socket/PDN connection binding, refer to section 6.1.2.2.1

5.2.2.2. Modules: LE866A1-NA, -KK, -JS, -KS, ME866A1-NA

Use the AT+CGDCONT=? test command to get the range of the supported values.

AT+CGDCONT=?

- +CGDCONT:
- +CGDCONT:

.....

0K

Use the AT+CGDCONT? read command to get the current PDN connections configuration.

AT+CGDCONT?

+CGDCONT:

ΩK

Assume to use the LE866A1-NA module

AT+CGDCONT=?

- +CGDCONT: (1-5),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)
- +CGDCONT: (1-5),"IPV6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)
- +CGDCONT: (1-5),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

0K

Use the AT+CGDCONT? read command to get the current PDN connections configuration.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","broadband","",0,0

← default APN

0K



Note: By default, modules LE866A1-NA, -KK, -JS, -KS, and ME866A1-NA support the Internet Service on <cid>=1.

5.2.3. Platform Version ID 25

Use the +CGDCONT command to define a PDP context. The command syntax is:



To get parameters descriptions, refer to documents [13].

5.2.3.1. Modules: LE910Cx Series

Here is an example of a PDP context definition.

Use the AT+CGDCONT=? test command to know the parameter ranges of the command. Here are two examples.

Assume to use a module belonging to Platform Version ID 25. Type in the AT+CGDCONT=? test command to get the values of the supported parameters. The returned message shows the <cid> range: 1-24 of the PDP contexts.

AT+CGDCONT=?

```
+CGDCONT: (1-24),"IP",,,(0-2),(0-4),(0-1),(0-1)
+CGDCONT: (1-24),"PPP",,,(0-2),(0-4),(0-1),(0-1)
+CGDCONT: (1-24),"IPV6",,,(0-2),(0-4),(0-1),(0-1)
+CGDCONT: (1-24),"IPV4V6",,,(0-2),(0-4),(0-1),(0-1)
```

0K

5.2.4. Platform Version ID 30, 37

Use the +CGDCONT command to define a PDP context. The command syntax is:

AT+CGDCONT=[<cid>[,<PDP_type>[,<APN>[,<PDP_addr>[,<d_comp>[,<h_comp> [,<IPv4AddrAlloc>[,<emergencyIndication>]]]]]]]]

To have detailed information about the +CGDCONT parameters refer to the user guides [14] and [15] in accordance with the module used.

5.3. Establish a Default EPS Bearer

This section lists shortly the commands used to establish a Default EPS Bearer. They will be described in the next sections.

AT+CGACT

Establishes a Default EPS Bearer. If the module is not attached, it does the attach procedure and then activates the Default EPS Bearer, does not create the Network Interface. See sections 4.3, and 16.5.1.



AT#SGACT

Establishes a Default EPS Bearer and opens a Network Interface to use the TCP/IP protocol running on the module, refer to sections 5.4.

ATD

Establishes a Default EPS Bearer. It provides a dialup connection, the PPP protocol is used to exchange data between the PC (user device) and the module, and the TCP/IP stack is running on the PC, see examples in section 15.1.

AT#NCM (in mode = 2)

Establishes a Default EPS Bearer, refer to section 17.5.

AT#MBIMCFG

Use this command to select the <cid> that will be used by the MBIM tool running, for example, on the Windows PC. The MBIM tool provides a "button" to establish the connection.

Warning:

Platform Version ID 20:



AT#SGACT, AT+CGACT, ATD, NCM, and NBIM cannot use the same <cid> at the same time. The commands are mutually exclusive.

Platform Version ID 23 and 25: AT#NCM and AT#MBIMCFG are not supported.

5.4. PDP Context Activation, #SGACT Command

The #SGACT command activates/deactivates PDP contexts defined with the +CGDCONT command. The #SGACT establishes a Default EPS Bearer and opens a Network Interface to use the TCP/IP stack running on the module. If the <cid> used by the #SGACT command is already active (as the result of the default bearer context activation procedure that can be part of the attach procedure, see next paragraph), the command opens only a Network Interface, see section 12.11.3.

During the attach procedure, the network automatically assigns to the module an APN, supporting some services, and an IP address. The module identifies these parameters with <cid>=1 identifier. This operation, at the user level, is equivalent to enter manually the command AT+CGACT=1,1, which establishes a Default EPS Bearer, and does not create a Network Interface associated with <cid>=1. It is the responsibility of the user to



use the assigned address for a service (IMS, data traffic, and so on) in accordance with the assigned APN, see the example in section 12.11.3.

The below figure shows the concepts described above.

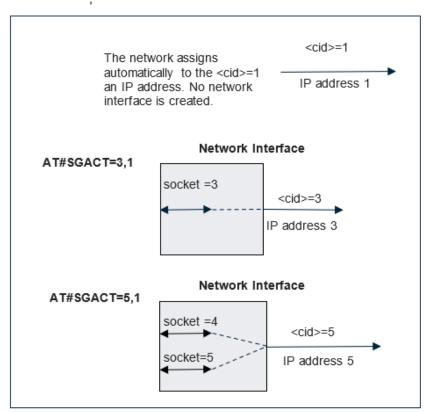


Figure 5: Assigned APN and Network Interfaces

5.4.1. Max Number of Active PDP Contexts

As stated in chapter 3, the max number of the PDP context that can be defined (+CGDCONT command), and the max number of PDP contexts that can be activated at the same time (#SGACT comm/and) depend on the module you are using.

The example in section 4.2.1 shows a guideline, also for 4G modules, to check the max number of PDP contexts that can be activated at the same time.

5.4.2. Platform Version ID 20

The #SGACT command activates/deactivates PDP contexts defined with +CGDCONT command. To get information on the command syntax and its parameters refer to document [4].

AT#SGACT= <cid>,<stat>[,<userId>,<pwd>]

Use the AT#SGACT=? test command to know the parameters ranges of the command supported by the module that you are using. See next sections.



5.4.2.1. Modules: LE910 Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA, -EU V2, AU V2

Type in the AT+SGACT=? test command to get the <cid> parameter values range.

AT#SGACT=?

#SGACT: (0-15),(0,1)

0K

The return message shows the <cid> range: 0-15.

<cid>= 0 is reserved for GSM context, refer to chapter 15. <cid>= 1 ÷ 15 are used for PDP contexts, see Table 14.

Type in the AT#GSMCONT=? test command to verify the GSM context configuration.

AT#GSMCONT=?

#GSMCONT: 0,"IP",

0K

5.4.2.2. Modules: LE910-SV1, -SVL, SV V2

Type in the AT+SGACT=? test command to get the supported <cid> parameter values range.

AT#SGACT=?

#SGACT: (0-15),(0,1)

0K

The returned message shows the <cid> range: 0-15.

<cid>= 0 is not used.

<cid>= 1-15 are used for PDP contexts, see Table 15.

5.4.3. Platform Version ID 23, 25

The #SGACT command activates/deactivates the PDN connection defined with +CGDCONT command. To get information on the command syntax and its parameters refer to document [11] or [13].

AT#SGACT= <cid>,<stat>[,<userId>,<pwd>]





Use the AT#SGACT=? test command to know the parameters ranges of the command supported by the module that you are using.

5.4.3.1. Platform Version ID 23

5.4.3.1.1. Modules: LE866-SV1, ME866A1-NV

Type in the AT+SGACT=? test command to get the <cid> parameter values range.

AT#SGACT=?

#SGACT: (1-4),(0,1)

0K

The return message shows the <cid> parameter values range: 1-4, see Table 15.

5.4.3.2. Platform Version ID 23, 25

5.4.3.2.1. Modules: LE866A1-NA, -KK, -JS, -KS, ME866A1-NA, LE910Cx

Type in the AT+SGACT=? test command to get the <cid> parameter values range.

AT#SGACT=?

#SGACT:

0K

Assume to use the LE866A1-NA module.

AT#SGACT=?

#SGACT: (1-5),(0,1)

0K

5.4.4. Platform Version ID 30, 37

The #SGACT command activates/deactivates the PDN connection defined with +CGDCONT command. To get information on the command syntax and its parameters refer to documents [14] and [15].

AT#SGACT=<cid>,<stat>[,<userId>[,<pwd>]]

Use the AT#SGACT=? test command to know the parameters ranges of the command supported by the module that you are using.



5.5. IP Address Information, #CGPADDR Command

Use #CGPADDR= command to verify the IP address assigned by the network to the modules after the PDP contexts activations.

AT#CGPADDR= [<cid>[,<cid>[,...]]]

To get parameters descriptions refer to documents [4], [11], [13], [14] or [15], according to the module used.

5.6. Change a Default EPS Bearer

Following these steps, you can substitute the Default EPS Bearer, assigned automatically to the <cid=1> by the Network Operator, with a user PDP Context defined through the +CGDCONT command.

Set up the user PDP Context identified by <cid>=1. AT+CGDCONT=1,"IP","Access Point Name" 0K

Check the setting of the user PDP Context.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0 0K

Detach the module from the network.

AT+CGATT=0

0K

Attach the module. The new PDP Context associated to <cid>=1 is activated.

APN

AT+CGATT=1

0K

Check the dynamic parameters of the PDP context assigned by the Network Operator in response to the user-defined PDP context.

AT+CGCONTRDP=1

+CGCONTRDP:

1, cid bearer id "Access Point Name.....",

"2.192.4.65.255.0.0.0", ip_addr and subnet_mask

"2.192.4.66", gw addr

"10.207.43.46", DNS prim addr

"0.0.0.0". DNS sec addr P_CSCF_prim_addr "0.0.0.0",





"0.0.0.0" OK

P_CSCF_sec_addr



Note: To get parameters descriptions refer to documents [4], [11], [13], [14] or [15], according to the module used.

The module saves the Default EPS Bearer parameters in NVM. At each reboot, the Protocol Stack uses them.

Now, reboot the module.

Check if the module is attached.

AT+CGATT?

+CGATT: 1

0K

Check the user-defined PDP context.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0

0K

Check the dynamic parameters of the PDP context assigned by the Network Operator in response of the user-defined PDP context.

AT+CGCONTRDP=1

+CGCONTRDP:

1,

5,

"Access_Point_Name.....",

"2.192.16.112.255.0.0.0",

"2.192.16.113",

"10.207.43.46",

"0.0.0.0", "0.0.0.0",

"0.0.0.0"

0K



Note: To get parameters descriptions refer to documents [4], [11], [13], [14] or [15], according to the module used.

Remove the PDP context defined by the user.

AT+CGDCONT=1



0K

The <cid>=1 context identifier is associated again with a not defined APN (default).

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0

0K



Warning: Platform Versions ID 30, 37: to restore the default APN values to "" use AT#FWSWITCH, or set AT+CGDCONT=1,"IPV4V6",""

The module saves the new configuration in NVM. At each reboot, the Protocol Stack uses it.

Now, reboot the module and verify the dynamic parameters of the PDP Context.

The <cid>=1 context identifier is automatically associated with the Default EPS Bearer assigned by the Network Operator in response to the not defined APN (see +CGDCONT? command).

AT+CGCONTRDP=1

+CGCONTRDP:

1,

5.

"APN_Assegned_by_Network",

"10.178.48.185.255.0.0.0",

"10.178.48.186",

"213.230.129.10".

"0.0.0.0", "0.0.0.0".

"0.0.0.0"

0K



Warning: Platform Version ID 25: AT+CGCONTRDP format is different. Only show the allocated information from the network, refer to document [13].

5.7. Dedicated EPS Bearer

As stated in chapter 5, some services like VoIP, video, and so on require a high level of QoS. In this case, a dedicated bearer will be established with the required QoS (can be

IP Easy User Guide



GBR or non-GBR). Generally, the dedicated bearer can be established either by the network or by the module.

Currently, Telit modules support only the dedicated bearer establishment started by the network side and accepted by the user through, for example, the +CGANS command.

5.8. Multiple PDN, #DUALAPN Command

5.8.1. Platform Version ID 20

5.8.1.1. Modules: LE910 Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA, -EU V2, AU V2

Suppose that the PDP contexts <cid>= 2 and <cid>= 3 have the same APN and PDP type. If the module tries to activate both contexts, the second activation could fail because the second PDN Connectivity Request returns an ERROR message. This happens when the 4G Network Operator does not support multiple Default EPS bearers on a single APN.

This could be a limitation for those user applications working with two different <cid> having the same APN and PDP type.

Telit has implemented the #DUALAPN command to provide backward compatibility for the user applications mentioned previously. For example, you can assign to <cid>=3 the same APN and PDP type already in use with <cid>=2. The module routes the <cid>=3 to the <cid>=2, the result is that both <cid> have the same IP address. See the examples in the following sub-sections. The command syntax is:

AT#DUALAPN=<mode>[,<UNUSED_1>[,<UNUSED_2>[,<UNUSED_3>]]]

Where

< **mode** > - mode:

0 - if the module tries to activate a PDP context having the same APN and PDP type used by another PDP context already in use, there is a "routing" to the PDP context already active. The IP address is the same, use the +CGPADDR command to check it. It is the default mode.

1 - if the module tries to activate a PDP context having the same APN and PDP type used by another PDP context already in use, the module could receive an ERROR message after the sending of the PDN Connectivity Request.





Warning: The #DUALAPN=0 mode does not allow the commands #SGACT, +CGACT, ATD, NCM, and NBIM to use simultaneously two different <cid> having the same APN and PDP type. Only one command at a time can work with a <cid> that uses an APN and a PDP type used also by another cid. See warning note in section 5.3.

To have information on command syntax and parameters values refer to document [4].

5.8.1.2. Examples on #DUALAPN=0 Mode

5.8.1.2.1. Defined APN

At power-on, assume that the PDP context identified by <cid>=1 uses "IP" and "Access_Point_Name", as shown below.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0 OK

Check if the module is registered on a 4G network.

AT+COPS?

+COPS: 0,0,"Network_Operator",7 $7 \leftarrow E-UTRAN$

0K

Check if the Default EPS Bearer is active

AT+CGCONTRDP=?

+CGCONTRDP: (1)

ΩK

Check the #DUALAPN mode.

AT#DUALAPN?

#DUALAPN: 0,0,0,0 \leftarrow 0 mode, default configuration

0K

If you assign to <cid>=2 the same APN and PDP type already in use with <cid>=1, the <cid>=2 is routed to the <cid>=1, according to #DUALAPN=0 mode (default). Therefore, the IP address of both <cid> will be the same, see the following AT commands sequence.

AT+CGDCONT=2,"IP","Access_Point_Name" OK

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0 +CGDCONT: 2,"IP","Access_Point_Name","",0,0



ΟK

Now, only the first context is active.

AT+CGPADDR=

+CGPADDR: 1,"2.192.16.194"

+CGPADDR: 2,""

0K

Activate the second context.

AT#SGACT=2.1

#SGACT: 2.192.16.194

0K

The command returns the error code identifying the network reject cause. If no error, the code is 0.

AT#CEERNET

#CEERNET: 0

0K

As stated before, both <cid> have the same IP address.

AT+CGPADDR=

+CGPADDR: 1,"2.192.16.194" +CGPADDR: 2,"2.192.16.194"

0K

5.8.1.2.2. Not Defined APN

At power on, assume that the PDP context identified by <cid>=1 uses a not defined APN, and a group of PDP contexts use the same APN and same PDP type as shown by the following command.

Check the current PDP contexts setting.

AT+CGDCONT?

- +CGDCONT: 1,"IPV4V6","","",0,0
- +CGDCONT: 2,"IP","Access_Point_Name","0.0.0.0",0,0
- +CGDCONT: 9,"IP","Access_Point_Name","0.0.0.0",0,0
- +CGDCONT: 13,"IP","Access_Point_Name","0.0.0.0",0,0
- +CGDCONT: 15,"IP","Access Point Name","0.0.0.0",0,0

0K

At power on, the context identifier <cid>=1 is automatically associated to the Default EPS Bearer assigned by the Network Operator in response of the not defined APN (see +CGDCONT? command).





```
AT+CGCONTRDP=1
+CGCONTRDP:
1,
5,
"APN_Assegned_by_Network",
"10.178.59.124.255.0.0.0",
"10.178.59.125",
"213.230.129.10",
"0.0.0.0","0.0.0.0",
"0.0.0.0"
```

Check the current binding between sockets and PDP contexts.

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,9,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,13,300,90,600,50 #SCFG: 6,15,300,90,600,50 OK

Check the #DUALAPN mode.

AT#DUALAPN?

#DUALAPN: 0,0,0,0 \leftarrow 0 mode, default configuration OK

Check which are the PDP contexts active.

AT#SGACT?

#SGACT: 1,0 #SGACT: 2,0 #SGACT: 9,0 #SGACT: 13,0 #SGACT: 15,0 OK

Activate PDP context <cid>=2.

AT#SGACT=2,1

#SGACT: 2.192.8.164

0K

Activate PDP context <cid>=9.

AT#SGACT=9.1

#SGACT: 2.192.8.164





ΟK

Activate PDP context <cid>=13. AT#SGACT=13,1

#SGACT: 2.192.8.164

0K

Activate PDP context <cid>=15.

AT#SGACT=15,1

#SGACT: 2.192.8.164

0K

AT+CGPADDR=

+CGPADDR: 1,"10.178.59.124"

+CGPADDR: 2,"2.192.8.164"

+CGPADDR: 9,"2.192.8.164"

+CGPADDR: 13,"2.192.8.164"

+CGPADDR: 15,"2.192.8.164"

0K

PDP contexts 2, 9, 13, 15 are using the same IP address, according to the #DUALAPN=0 mode.

5.8.1.3. Examples on #DUALAPN=1 Mode

5.8.1.3.1. Defined APN

At power on, assume that the PDP context identified by <cid>=1 uses "IP" and "Access_Point_Name", as shown below.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0

ΟK

Check if the module is registered on a 4G network.

AT+COPS?

+COPS: 0,0,"Network_Operator",7

 \leftarrow 7 = E-UTRAN

0K

Check if the Default EPS Bearer is active

AT+CGCONTRDP=?

+CGCONTRDP: (1)

0K

Set #DUALAPN=1 mode.





AT#DUALAPN=1

0K

Assigns to <cid>=2 the APN and PDP type associated to <cid>=1 already in use.

AT+CGDCONT=2,"IP","Access_Point_Name"

0K

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0 +CGDCONT: 2,"IP","Access_Point_Name","",0,0

0K

Only the first context is active.

AT+CGPADDR=

+CGPADDR: 1,"2.192.16.194"

+CGPADDR: 2,""

0K

Enable error report in verbose format.

AT+CMEE=2

0K

Activate the context <cid>=2. When a PDN Connectivity Request is sent, the command returns an ERROR.

AT#SGACT=2,1

+CME ERROR: activation failed

The command returns the error code identifying the network reject cause.

AT#CEERNET

#CEERNET: 55

0K

AT+CGPADDR=

+CGPADDR: 1,"2.192.16.194"

+CGPADDR: 2,""

0K

5.8.1.3.2. Not Defined APN

At power on, assume that the PDP context identified by <cid>=1 uses a not defined APN.

Enable error report in verbose format.

AT+CMEE=2

OK



Set #DUALAPN=1 mode.

AT#DUALAPN=1

OK

Check the current user-defined PDP contexts.

AT+CGDCONT?

```
+CGDCONT: 1,"IPV4V6","","",0,0
+CGDCONT: 2,"IP","Access_Point_Name","0.0.0.0",0,0
+CGDCONT: 9,"IP","Access_Point_Name","0.0.0.0",0,0
+CGDCONT: 13,"IP","Access_Point_Name","0.0.0.0",0,0
+CGDCONT: 15,"IP","Access_Point_Name","0.0.0.0",0,0
```

The context identifier <cid>=1 is automatically associated with the Default EPS Bearer assigned by the Network Operator in response of the not defined APN (see +CGDCONT? command).

AT+CGCONTRDP=1

```
+CGCONTRDP:
1,
5,
"APN_Assegned_by_Network",
"10.178.47.1.255.0.0.0",
"10.178.59.125",
"213.230.129.10",
"0.0.0.0", "0.0.0.0",
"0.0.0.0"
```

Check the current binding between sockets and PDP contexts.

AT#SCFG?

```
#SCFG: 1,1,300,90,600,50

#SCFG: 2,9,300,90,600,50

#SCFG: 3,1,300,90,600,50

#SCFG: 4,2,300,90,600,50

#SCFG: 5,13,300,90,600,50

#SCFG: 6,15,300,90,600,50

OK
```

Activate PDP context <cid>=2.

AT#SGACT=2,1

#SGACT: 2.192.18.18

0K





Activate PDP context <cid>=9.

AT#SGACT=9.1

+CME ERROR: activation failed

The command returns the error code identifying the network reject cause.

AT#CEERNET #CEERNET: 55

0K

Check which are the active PDP contexts. PDP context <cid>=1 is automatically activated during the attach procedure, but its right state is shown by the #SGACT command only if AT#SGACT=1,1 command is used, see the following AT commands sequence.

AT#SGACT?

#SGACT: 1,0

#SGACT: 2,1

#SGACT: 9,0

#SGACT: 13,0

#SGACT: 15,0

0K

AT#SGACT=1,1

#SGACT: 10.178.47.1

0K

AT#SGACT?

#SGACT: 1,1

#SGACT: 2,1

#SGACT: 9,0

#SGACT: 13,0

1130401.10,0

#SGACT: 15,0

0K

AT+CGPADDR=

+CGPADDR: 1,"10.178.47.1"

+CGPADDR: 2,"2.192.18.18"

+CGPADDR: 9,""

+CGPADDR: 13,""

+CGPADDR: 15,""

0K

AT+CGCONTRDP=2

+CGCONTRDP:

2,



```
6,
"Access_Point_Name.....",
"2.192.18.18.255.0.0.0",
"2.192.18.19",
"10.207.43.46",
"0.0.0.0",
"0.0.0.0",
"0.0.0.0"
```

5.8.2. Platform Version ID 30, 37

For Platform Version ID 30 #DUALAPN command is supported in the modem.

For Platform Version ID 37 it is not possible to set different <cid> (AT+CGDCONT)

with the same APN and PDP type. But if customization (AT#FWSWITCH) is such that on <cid>=1 empty APN is needed, after checking APN assigned by the network (AT+CGCONTRDP), it is possible to set the same APN on another <cid>=N. Then, it is possible to "activate" <cid>=N with AT#SGACT=N,1 and use the same IP address obtained during attach for <cid>=1.

5.8.2.1. Platform Version ID 30, 37 - Example

```
AT+CGCONTRDP=1
+CGCONTRDP:
1,
5,
"APN_Assigned_by_Network",
"10.178.47.1",
,
"192.168.100.43",
"192.168.100.44"
OK
```

AT+CGDCONT=2,"IP","APN_Assigned_by_Network"
OK

AT#SGACT=2,1 ← same IP address available for <cid>=1 and obtained during attach will be "activated".



5.9. Authentication Setting, #PDPAUTH Command

5.9.1. Platform Version ID 20 and 25

The #PDPAUTH command specifies PDP authentication parameters values for a PDP context identified by the (local) context identifier <cid>. To get information on the command syntax and its parameters refer to documents [4] or [13] according to the module used.

AT#PDPAUTH=<cid>,<auth type>,[< username>,[<password >]]

5.9.1.1. Modules: LE910 and, LE910Cx Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA, -EU V2, AU V2 and LE910Cx SERIES

At power on, assume that the context identifier <cid>=1 is assigned to a not defined APN.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0

0K

At power on, after the attach procedure, the context identifier <cid>=1 is automatically associated to the Default EPS Bearer assigned by the Network Operator in response of the not defined APN.

AT+CGCONTRDP=1

```
+CGCONTRDP:
```

1,

5,

"APN Assegned by Network",

"100.80.28.204.255.0.0.0", "100.80.28.205",

"80.201.237.239",

"0.0.0.0", "0.0.0.0",

"0.0.0.0"

0K

Set up the new PDP Context associated to <cid>=1.

AT+CGDCONT=1,"IPV4V6","Access_Point_Name" OK

Verify the entered PDP Context.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","Access_Point_Name","",0,0

0K



Set the PDP authentication parameters on context <cid>=1. AT#PDPAUTH=1,1,"UserName","PassWord"

0K

Detach the module from the network.

AT+CGATT=0

NΚ

Attach the module to the network, the new PDP Context is activated. It is the new Default EPS Bearer.

AT+CGATT=1

0K

Check the dynamic parameters of the PDP context assigned by the Network Operator in response of the user-defined PDP context.

AT+CGCONTRDP=1

```
+CGCONTRDP:

1,

5,

"Access_Point_Name.....",

"10.113.0.66.255.0.0.0",

"10.113.0.67", "8.8.4.4",

"0.0.0.0", "0.0.0.0",
```

5.9.2. Platform Version ID 30, 37

The +CGAUTH command allows the module to specify authentication parameters for a PDP context identified by the (local) context identification parameter <cid>, used during the PDP context activation and the PDP context modification procedures.

To get information on the command syntax and its parameters refer to documents [14] or [15] according to the module used.

AT+CGAUTH=<cid>,<auth_type>,<username>,<password>

5.9.2.1. Platform Version ID 30, 37 - Example

Set the PDP authentication parameters on context <cid>=1. AT+CGAUTH=1,1,"UserName","PassWord"
OK

Detach the module from the network.



AT+CGATT=0

0K

Attach the module to the network, the PDP Context is activated. It is the Default EPS Bearer.

AT+CGATT=1

0K

Check the dynamic parameters of the PDP context assigned by the Network Operator AT+CGCONTRDP=1

```
+CGCONTRDP:

1,

5,

"Access_Point_Name.....",

"10.113.0.66.255.0.0.0",

"10.113.0.67", "8.8.4.4",

"0.0.0.0", "0.0.0.0",

"0.0.0.0"
```



6. OUTGOING SOCKETS IN ONLINE MODE

6.1. Sockets Configuration, #SCFG Command

Use the #SCFG command to configure a socket belonging to the Multi-socket environment, the <connld> parameter identifies the socket. The Multi-socket environment provides N sockets, the N value depends on the module you are using. The configuration is saved in NVM, and the command syntax is:

AT#SCFG = <connId>,<cid>,<pktSz>,<maxTo>,<connTo>,<txTo>

To get parameters descriptions refer to documents [1] or [2] for 2G or 3G modules, and [4], [11], [13], [14] or [15] for 4G modules.

6.1.1. 2G/3G Modules

The below table shows the default sockets/contexts binding returned by the AT#SCFG? read command. The socket configuration cannot be modified when the socket is open.

IP Easy Multi- Socket <connld></connld>	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5</cid>
1	bound	/	1	1	/
2	bound	1	1	1	/
3	bound	/	/	/	/
4	/	bound	/	/	/
5	/	bound	/	/	/
6	/	bound	1	1	/

Table 5: 2G/3G Default Sockets/Contexts Binding Configuration

Example

Starting from the default configuration, bind the socket <connId>=2 to the PDP context <cid>=3.

AT#SCFG = 2, 3, 300, 90, 600, 50 OK

Check the new sockets/contexts binding.

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,3,300,90,600,50 #SCFG: 3,1,300,90,600,50





#SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50

0K

The below table shows the new sockets/contexts binding configuration.

IP Easy Multi- Socket <connld></connld>	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5</cid>
1	bound	1	1	1	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	bound	/	/	/
5	/	bound	/	1	/
6	1	bound	/	/	/

Table 6: 2G/3G Sockets/Contexts Binding Configuration

6.1.2. 4G Modules

6.1.2.1. Platform Version ID 20

6.1.2.1.1. Modules: LE910 Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA, -EU V2, AU V2

Use the AT#SCFG? read command to get the current socket/cid configurations. The following is the default configuration.

AT#SCFG?

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 #SCFG: 7,1,300,90,600,50 #SCFG: 8,1,300,90,600,50

#SCFG: 9,2,300,90,600,50 #SCFG: 10,2,300,90,600,50

0K



Use the AT#SCFG=? test command to get the range of the supported values. <cid> range is 0-15.

AT#SCFG=?

#SCFG: (1-10),(0-15),(0-1500),(0-65535),(10-1200),(0-264)

0K

Use the AT+CGDCONT=? test command to get the range of the supported values. <cid>range, identifying PDP contexts, is 1-15.

AT+CGDCONT=?

+CGDCONT: (1-15),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-15),"IPV6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

+CGDCONT: (1-15),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

0K

Use the AT+CGDCONT? read command to get the current PDP contexts configurations. The following is the default configuration.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0

0K

The below table summarizes how <cid> and sockets can be used.

Sockets	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5 - 15</cid>
Internal Sockets (not directly accessible to the user)	During the attach procedure, the network assigns to the module the Default EPS Bearer that supports the service provided by the used Network Operator. By default, is used <cid>=1 bound to an internal socket. See section 5.1.</cid>				
IP Easy Multi- Socket <connid></connid>	The user can bind time.	all <cid> to sockets</cid>	belonging to the Mu	lti-socket environm	ent, at the same
1 - 10					

Table 7: LE910-EU1, Network Operator Service & Multi-Socket



6.1.2.1.2. Modules: LE910-SV1, -SVL, SV V2

Use the AT#SCFG? read command to get the current socket/cid configurations. The following is the default configuration.

AT#SCFG?

```
AT#SCFG?
```

#SCFG: 1,3,300,90,600,50 #SCFG: 2,3,300,90,600,50 #SCFG: 3,3,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 #SCFG: 7,3,300,90,600,50

#SCFG: 8,3,300,90,600,50 #SCFG: 9,3,300,90,600,50 #SCFG: 10,3,300,90,600,50

0K

Use the AT#SCFG=? test command to get the range of the supported values. <cid> range is 0-15

AT#SCFG=?

```
#SCFG: (1-10),(0-1500),(0-65535),(10-1200),(0-264)
0K
```

Use the AT+CGDCONT=? test command to get the range of the supported values. <cid> range is 1-6.

AT+CGDCONT=?

```
+CGDCONT: (1-6),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)
+CGDCONT: (1-6),"IPV6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)
+CGDCONT: (1-6),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)
0K
```

Use the AT+CGDCONT? read command to get the current PDN contexts configurations. The following is the default configuration.

AT+CGDCONT?

```
Service: IMS
+CGDCONT: 1,"IPV4V6","vzwims","",0,0
+CGDCONT: 2,"IPV4V6","vzwadmin","",0,0
                                                 Service: ADMIN
+CGDCONT: 3,"IPV4V6","vzwinternet","",0,0
                                           Service: INTERNET
+CGDCONT: 4,"IPV4V6","vzwapp","",0,0
                                           Unused
+CGDCONT: 5,"IPV4V6","vzw800","",0,0
                                           Unused
+CGDCONT: 6,"IPV4V6","vzwclass6","",0,0
                                                 Service: INTERNET
```

0K

The below table summarizes how <cid> and sockets can be used.





Sockets	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4/5</cid>	<cid>=6</cid>	<cid>=7 - 15</cid>
Internal Sockets (not directly accessible to the user)	By default, <cid>=1 is used for IMS Service assigned by the Network Operator and is bound to an internal socket.</cid>	By default, <cid>=2 is used for ADMIN Service assigned by the Network Operator and is bound to an internal socket.</cid>	By default, <cid>=3 is used for INTERNET Service assigned by the Network Operator and is bound to an internal socket.</cid>	Unused	By default, <cid>=6 is used for INTERNET Service assigned by the Network Operator and is bound to an internal socket.</cid>	
IP Easy Multi- Socket <connld></connld>	The user can bind all <cid> to sockets belonging to the Multi-socket environment, at the same time.</cid>					
1 - 10						

Table 8: LE910-SV1, IMS, ADMIN, INTERNET Services & Multi-Socket

6.1.2.2. Platform Version ID 23

6.1.2.2.1. Modules: LE866-SV1, ME866A1-NV

Use the AT#SCFG? read command to get the current socket/cid configurations. The following is the default configuration.

AT#SCFG?

#SCFG: 1,3,300,90,600,50 #SCFG: 2,3,300,90,600,50 #SCFG: 3,3,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Use the AT#SCFG=? test command to get the range of the supported values. <cid> range is 1-4.

AT#SCFG=?

#SCFG: (1-6),(<mark>1-4</mark>),(0-1500),(0-65535),(10-1200),(0-264)

0K

Use the AT+CGDCONT=? test command to get the range of the supported values. <cid>range is 1-4.

AT+CGDCONT=?

+CGDCONT: (1-4),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1) +CGDCONT: (1-4),"IPV6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1) +CGDCONT: (1-4),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)





Use the AT+CGDCONT? read command to get the current PDN connections configuration. The following is the default configuration.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","vzwims","",0,0,0,0,1,0 Service: IMS

+CGDCONT: 2,"IPV4V6","vzwadmin","",0,0 Service: ADMIN +CGDCONT: 3,"IPV4V6","vzwinternet","",0,0 Service: INTERNET

0K

The below table summarizes how <cid> and sockets can be used.

Sockets	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	
Internal Sockets (not directly accessible to the user)	By default, <cid>=1 is used for IMS Service assigned by the Network Operator and is bound to an internal socket.</cid>	By default, <cid>=2 is used for ADMIN Service assigned by the Network Operator and is bound to an internal socket.</cid>	By default, <cid>=3 is used for INTERNET Service assigned by the Network Operator and is bound to an internal socket.</cid>		
IP Easy Multi- Socket <connld></connld>	The user can bind all <cid> to sockets belonging to the Multi-socket environment, at the same time.</cid>				
1 - 6					

Table 9: LE866-SV1, IMS, ADMIN, INTERNET Services & Multi-Socket

6.1.2.3. Platform Version ID 30, 37

Use the AT#SCFG? read command to get the current socket/cid configurations. The following is an example of the configuration.

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,1,300,90,600,50 #SCFG: 5,1,300,90,600,50 #SCFG: 6,1,300,90,600,50 #SCFG: 7,1,300,90,600,50 #SCFG: 8,1,300,90,600,50 #SCFG: 9,1,300,90,600,50 #SCFG: 10,1,300,90,600,50

Use the AT#SCFG=? test command to get the range of the supported values. <cid> range is 0-15



AT#SCFG=?

#SCFG: (1-10),(0-15),(0-1500),(0-65535),(10-1200),(0-264)

0K

To have detailed information about the #SCFG parameters refer to user guide [14] and [15] in accordance with the module used.

Use the AT+CGDCONT=? test command to get the range of the supported values. <cid>range is 1-6.

Use the AT+CGDCONT? read command to get the current PDN contexts configurations.

To have detailed information about the +CGDCONT parameters refer to user guide [14] and [15] in accordance with the module used.

6.2. Open a Socket, #SD Command

The #SD command (Socket Dial) opens the TCP/UDP connection towards the host. If required, DNS query is done to resolve the IP address. To open the remote connection, the PDP context to which the <connId> is associated must be active, otherwise the command returns an ERROR message. The command syntax is for:

• 2G modules, 3G modules with platforms version ID 12 and 4G modules with platform version ID 23 and 25 (refer to document [1], [2], [4], [11], or [13] according to the module used):

AT#SD=<connId>,<txProt>,<rPort>,<lPaddr>[, [,<IPort>[,<connMode>]]]

<closureType>

• 4G modules with platform version ID 30, 37 (refer to documents [14] or [13]

AT#SD=<connId>,<txProt>,<rPort>,<IPaddr>[,<closureType>[,<lPort>[,<connMod e>

[,<txTime>[,<userlpType>]]]]]

6.2.1. Example on Opening & Suspension, (2G/3G)

This example shows the opening and suspension of the connections <connId>=3, and 2. The below table shows the starting sockets/contexts configuration:

- PDP context <cid>=1, and 3 active
- Sockets <connId>=1, and 3 bound to <cid>=1 (default)
- Socket <connId>=2 bound to <cid>=3
- Sockets <connId>=4, 5, and 6 bound to <cid>=2 (default)



IP Easy Multi- Socket	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5</cid>
<connld></connld>	Active	No active	Active	No active	No active
1	bound	/	1	1	1
2	/	/	bound	/	1
3	bound	/	/	/	/
4	/	bound	/	/	/
5	/	bound	/	/	/
6	/	bound	1	/	1

Table 10: Sockets/Contexts Binding and PDPs Active

Open the connection in ONLINE mode.

 $AT#SD = 3,0,80,"Host_Name_1"$

CONNECT

··· data exchange ···

+++ ← suspend the connection.

OK — connection 3 has been successfully suspended.

After the CONNECT message, the module is in ONLINE mode. Issue the escape sequence (+++) to suspend the connection and enter the COMMAND mode, the escape sequence does not close the connection.

If an escape sequence is included in the data to be sent, at the beginning of the sending, you must use the #SKIPESC command to guarantee that the connection is not suspended.

See the ATS12 command to set timing relevant to the escape sequence. Set the guard time before and after the escape sequence.

One more socket connection can be established.

AT#SD = 2, 0, 80, "Host_Name_2"

CONNECT

··· data exchange ···

+++ ← suspend the connection.

OK — connection 2 has been successfully suspended.

The module is again in COMMAND mode.

If a suspended connection receives data, the DTE displays an unsolicited SRING: <connId> indication. The unsolicited SRING indication appears only in COMMAND mode. For example, if Host_Name_1 sends data, the DTE displays the following URC:

SRING: 3 \leftarrow 3 is the number of the <connld> with pending data.



The below table shows the sockets/contexts configuration after the execution of the #SD commands.

- PDP context <cid>=1, and 3 active
- Sockets <connId>= 4, 5, and 6 bound to <cid>=2
- Socket <connId>=1 bound to <cid>=1
- Socket <connld>=2, bound to <cid>=3, and open
- Socket <connId>=3, bound to <cid>=1, and open

IP Easy Multi- Socket	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5</cid>
<connld></connld>	Active	No active	Active	No active	No active
1	bound	/	/	/	/
2	/	/	open	/	/
3	open	/	/	/	/
4	/	bound	/	/	/
5	/	bound	/	/	/
6	1	bound	/	/	/

Table 11: Sockets/Contexts Binding and Sockets Opened

6.3. Pending Data, #PADCMD, #PADFWD Commands

The following two AT commands enable the flushing of the pending data on the local socket toward the remote side.

AT#PADCMD=1 OK

Set the ASCI code of the character that will trigger the flushing of the pending data. In this example is "A" = 65 (decimal value).

AT#PADFWD=65

0K

Open the connection.

AT#SD = 3, 0, 80, "Host Name 1" CONNECT

.....

The data, pending on the socket, are sent to the remote side when one of the three conditions is verified:

data size reaches <pktSz> (see #SCFG command), or

IP Easy User Guide



- <txTo> timeout is over (see #SCFG command), or
- also "A" character (used in this example) is sent to the remote side.

.....

To get parameters descriptions refer to documents [1] or [2] for 2G or 3G modules, and [4], [11], [13], [14] or [15] for 4G modules.

6.4. Resume a Connection, #SO Command

Use #SO command to resume a suspended connection. The command syntax is:

AT#S0= <connld>

To get parameters descriptions refer to documents [1] or [2] for 2G or 3G modules, and [4], [11], [13], [14] or [15] for 4G modules.

Example

AT#SD = 2,0,80,"Host_Name" CONNECT ← the connection is open. ··· data exchange ··· +++ ← suspend the connection. 0K ← the module is in COMMAND mode. Data are pending on the socket. SRING: 2 Resume the suspended connection. AT#S0 = 2CONNECT ··· pending data are displayed ··· ← suspend the connection. +++ 0K



You can resume a suspended connection without waiting for SRING unsolicited indication. In this case, the module returns the CONNECT message. If the connection is not open the returned message is NO CARRIER.

6.5. Close a Connection, #SH, #SLASTCLOSURE Commands

Use the #SH command to close a socket connection. The command returns the OK message if the connection is already closed. The command syntax is:

AT#SH= <connld>

To get parameters descriptions refer to documents [1] or [2] for 2G or 3G modules, and [4], [11], [13], [14] or [15] for 4G modules.

Example

Open a socket connection.

AT#SD = 2,0,80,"Host_Name"

CONNECT ← the connection is open

··· data exchange ···

+++ ← suspend the connection.

Type in the #SH command to close the socket connection.

AT#SH = 2

OK \leftarrow the connection is closed.

A connection can be closed by the following events:

- Remote host closes the connection.
- Socket inactivity timeout is expired.
- DTE issues the escape sequence and #SH command.
- Network deactivates the connection.

Use the #SLASTCLOSURE command to get the socket disconnection cause.

AT#SLASTCLOSURE=[<connId>]

#SLASTCLOSURE: <connId>,<cause> ← response format.

To get parameters descriptions, refer to documents [1], [2], [4], [11], or [13] according to the used module.





6.6. TCP/IP Options Configuration

6.6.1. Reassemble TCP Packets, #TCPREASS Command (2G)

Use the #TCPREASS command to enable the reassembling of the fragmented TCP packets. The command syntax is:

AT#TCPREASS=<n>

Refer to document [1] to get parameter descriptions.

6.6.2. Max TCP Payload Size, #TCPMAXDAT Command (2G)

Use the #TCPMAXDAT command to configure the maximum TCP/IP payload size accepted in one single TCP/IP datagram from the module. The <size> is sent by the module to the peer when the socket connection is opened.

AT#TCPMAXDAT=<size>

Refer to document [1] to get parameter descriptions. Here is an example:

The module advices the peer that it does not accept TCP/IP datagrams with a payload longer than 1000 bytes.

AT#TCPMAXDAT=1000

0K

6.6.3. #BASE64 Command

The #BASE64 command enables base64 encoding/decoding of data sent/received on a socket. The command syntax is:

AT#BASE64=<connId>,<enc>,<dec>[,<unused_B >[,<unused_C >]]

To get parameters descriptions refer to documents [1] or [2] for 2G or 3G modules, and [4], [11], [13], [14] or [15] for 4G modules.



Warning: #BASE64 command is not supported by Platform Version ID 23.

Example



IP Easy User Guide Skip the escape sequence, its transmission is not enabled. AT#SKIPESC=1 0K Open the connection. AT#SD=1,0,<Remote Host Port>,"IP Address" CONNECT ··· data exchange ··· ← suspend the connection. +++ 0K ← the module is in COMMAND mode Encode all data coming from the serial port and sent it to the socket. AT#BASE64=1,1,0 0K Resume the connection. AT#S0=1 CONNECT ··· data received from the serial port are base64 encoded and sent to the socket. ··· ← suspend the connection. +++ 0K ← the module is in COMMAND mode Decode all data coming from the socket and sent to the serial line. AT#BASE64=1,0,1 0K Resume the connection. AT#S0=1 CONNECT

··· data received from the socket are base64 decoded and sent to the serial port. ···

.....

+++ ← suspend the connection.



7. INCOMING SOCKETS IN ONLINE MODE

Use the #SL (Socket Listening) command to open a socket in listening mode for an incoming TCP connection.

- You can configure up to N sockets in listening mode. The N value depends on the module you are using.
- Two sockets in listening mode cannot be bound to the same PDP context (same IP address) and use the same port. To use the same port, the two sockets must be bound to two different PDP contexts (different IP addresses), refer to the table below

When a remote host tries to connect, the module sends to the DTE the +SRING: <connId> unsolicited indication. The user can accept (#SA) or refuse (#SH) the incoming connection. The command syntax is for:

• 2G modules, 3G modules (ID 12) and 4G modules (ID 20, 23). Refer to document [1], [2], [4], or [11] according to the module used.

AT#SL= <connId>, , listenPort>[, <closureType>]

• 4G modules (ID 25, 30, 37). Refer to documents [13], [14], or [13] according to the module used.

AT#SL=<connId>,<listenState>,<listenPort>[,<lingerT>]

IP Easy Multi- Socket	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5</cid>
<connld></connld>	Active	No active	No active	Active	No active
1	listen, port_1	/	/	/	/
2	/	/	bound	/	/
3	listen, port_2	/	/	/	/
4	bound	/	/	/	/
5	1	/	/	listen, port_2	/
6	/	bound	/	/	/

Table 12: An Example of Sockets in Listening Mode

Example

Open the <connId> = 2 socket in listening mode on <port> = 6543. AT#SL = 2,1,6543 OK

Now, if a remote host is trying to connect, the module receives an SRING unsolicited indication with the listening <connId>:



SRING: 2



Note: If the incoming connection request is rejected, the listening socket will be closed. Use the #SL command to reopen the socket.

7.1. Accept an Incoming Connection, #SA Command

Use the #SA command without <connMode> parameter to accept the incoming connection, notified by the SRING unsolicited indication, in ONLINE mode. The command syntax is:

AT#SA=<connId>[,<connMode>]

To get parameters descriptions refer to documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

Example

Open the socket connection <connId> = 3 in listening mode (only for TCP) on <ListenPort> = xxxx.

AT#SL = 3, 1, xxxx OK

Now, if a remote host tries to connect, the module receives an SRING unsolicited indication with the listening <connId>:

SRING: 3 \leftarrow a remote host is trying to connect.

Accept the incoming connection <connld>=3 in ONLINE mode.

AT#SA = 3

CONNECT \leftarrow the connection is accepted.

... exchange data ...

The module is in ONLINE mode, the connection is established, and the two hosts can exchange data. With the escape sequence (+++) the connection can be suspended, and the module is back to COMMAND mode. Use #SO command to resume the suspended connection, refer to section 6.4.

To accept automatically incoming connections use the #SCFGEXT command, refer to section 8.3.1.



7.2. Check the Socket State, #SS Command

Use the #SS command to get the current socket state. The command syntax is:

AT#SS[=<connId>]

Here is the response message format of the command. #SS: <connId>,<state>,<locIP>,<locPort>,<remIP>,<remPort>

To get parameters descriptions, refer to documents [1], [2], [4], [13], [14] or [15] according to the module used.

Example

Check the state of all available sockets. In this case, the <connId> parameter is not used.

AT#SS

#SS: 1,4,217.201.131.110,21

#SS: 2,2,217.201.131.110,1033,194.185.15.73,10510

#SS: 3,3,217.201.131.110,1034,194.185.15.73,10510

#SS: 4,1,217.201.131.110,1035,194.185.15.73,10510

#SS: 5,0

#SS: 6,0 OK

By issuing AT#SS=<connId> the command returns only the state of the <connId> socket.

7.3. Open UDP Connection, #SLUDP Command

Use the #SLUDP command to open a socket listening for an incoming UDP connection on a specified port. The command syntax is:

AT#SLUDP=<connId>, , listenPort>

To get parameters descriptions, refer to documents [1], [2], [4], [13], [14] or [15] according to the module used

It is possible to receive SRING unsolicited and decide to accept (#SA) or refuse (#SH) the connection. To accept automatically incoming connections use the #SCFGEXT command, refer to section 8.3.1

7.4. Firewall Setting, #FRWL Command

2G/3G/4G modules provide an internal firewall that controls the access of the incoming connections. DROP is the firewall policy, all packets not matching the rules are silently discarded. The firewall applies to incoming (listening) connections. Outgoing connections



are established regardless of the firewall settings. Use the #FRWL command to add or remove an ACCEPT chain to/from the internal firewall. The command syntax is:

AT#FRWL[=<action>,<ip_address>,<net mask>]

When a packet comes in from the <incoming IP> address, the firewall rules chain is scanned to match the following criteria:

<incoming IP> & <net mask> = <ip address> & <net mask>

If matching is found, the packet is accepted and the rule scan is finished, otherwise, the next chain is considered until the end of the rules. If no matching is found the packet is silently dropped.



Warning: #FRWL command is not enabled by default.

To get command syntax detail and parameters ranges, refer to documents [1], [2], [4], [13], [14] or [15] according to the module used.

Example

Assume to accept connections only from devices having IP addresses ranging from 197.158.1.1 to 197.158.255.255. The following ACCEPT chain must be added to the firewall.

AT#FRWL=1,"197.158.1.1","255.255.0.0" OK

7.5. Examples

7.5.1. Modules in Server and Client Configurations

This example describes a remote connection between two modules. The first one is configured as a server. It opens a socket connection in listen mode (#SL). The second one is configured as a client and opens a socket dial connection (#SD) toward the server. Each module is connected to a terminal emulator. See also the example described in section 14.3.6, just for comparison.



Server-side

Check the sockets/PDP contexts binding configuration (default configuration).

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Assume that only PDP context <cid>=1 has been set, and all other contexts have been removed.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Nam ","0.0.0.0",0,0
OK

Activate the PDP context <cid>=1. The command returns the IP address assigned by the network to the module. Assume that no UserID and Password are needed.

AT#SGACT=1,1

#SGACT: 2.192.9.179

0K

The client to open the connection will use this IP address, see client-side.

Define an ACCEPT firewall chain to accept the IP address of the client; see client-side. AT#FRWL=1,"37.176.239.214","0.0.0.0" OK

Open <connId>=1 socket in listening mode on <port>=1024. The client will use it.

AT#SL=1,1,1024

0K

When the client opens the connection, the server displays on the terminal emulator an SRING unsolicited indication with <connId>=1:

SRING: 1

Accept the connection 1.

AT#SA=1

CONNECT

··· exchange data ···

NO CARRIER ← on the client-side has been entered #SH command, the connection is closed.



Client-side

Check the sockets/PDP contexts binding configuration (default configuration).

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50

OK

Assume that only PDP context <cid>=1 has been set, all other contexts have been removed.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Nam ","0.0.0.0",0,0 OK

Activate the PDP Context <cid>=1, assume that no UserID and Password are needed. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 37.176.239.214

0K

The server will use this IP address to set the firewall, see server-side.

Open the connection toward the server using its IP address and port 1024, see sever side.

AT#SD=1,0,1024," 2.192.9.179"

CONNECT

··· exchange data ···

+++ ← suspend the connection.

OK ← the module is in COMMAND mode

AT#SH=1 ← close the connection. On the server-side is displayed the NO CARRIER message.

0K

Use #CGPADDR= command to verify the IP address assigned by the network to the modules after the PDP contexts activations; refer to section 4.4.



8. SOCKET CONNECTION IN COMMAND MODE

The #SD (Socket Dial) and #SA (Accept connection) commands are introduced respectively in sections 6.2 and 7.1, and their descriptions are focused on the ONLINE mode connection. In this case, the optional parameter <connMode> is set to 0 (default).

The present section describes the use of the two commands with the parameter <connMode> set to 1. The #SD command with <connMode> set to 1 opens a connection, leaves the module in COMMAND mode, and allows the user to enter AT commands even when the socket connection is open. If data are received on the connection, an SRING unsolicited message is displayed on DTE.

8.1. Open a Socket, #SD Command

Use #SD command with <connMode>=1 to open a connection in COMMAND mode.

The command syntax is for:

• 2G modules, 3G modules with platforms version ID 12 and 4G modules with platform version ID 23 and 25 (refer to document [1], [2], [4], [11], or [13] according to the module used):

AT#SD=<connId>,<txProt>,<rPort>,<IPaddr>[,<closure type>[,<lPort>[,1]]]

• 4G modules with platform version ID 30, 37 (refer to documents [14] or [13] according to the module used:

8.2. Accept an Incoming Connection, #SA Command

Use #SA command with <connMode>=1 to accept the connection in COMMAND mode. <connMode> is the last parameter in the syntax command.

AT#SA = < connld > [.1]

Here is the unsolicited indication notifying the user that pending data are available on <connId> connection. For examples, refer to section 8.7.

SRING: <connld>.



8.3. Extended Socket Parameters Configuration

8.3.1. #SCFGEXT Command

#SCFGEXT command configures the set of the extended parameters for each socket provided by the Multi-socket environment; the values are saved in NVM. The command syntax is:

To get parameters descriptions of the commands described in the following sections, refer to documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

Here is the <srMode> range. For examples, refer to section 8.7.

- 0 Normal (default)
- 1 Data amount
- 2 Data view
- 3 Data view with UDP datagram information

Example

Use the test command to get the range of the supported values. Pay attention to: <connld>range: $\frac{1-6}{}$, <sr $\frac{0-3}{}$.

AT#SCFGEXT=?

#SCFGEXT: (1-6),(0-3),(0,1),(0-240),(0,1),(0,1)

0K

Use the read command to get the current socket extended configuration.

AT#SCFGEXT?

#SCFGEXT: 1,0,0,0,0,0 #SCFGEXT: 2,0,0,0,0,0 #SCFGEXT: 3,0,0,0,0,0 #SCFGEXT: 4,0,0,0,0,0 #SCFGEXT: 5,0,0,0,0,0 #SCFGEXT: 6,0,0,0,0,0

0K

Set SRING Data amount mode on socket 1

AT#SCFGEXT = 1,1,0,0

OK

Set SRING Data view mode on socket 2



AT#SCFGEXT = 2,2,1,0,0,1 OK

Set SRING Data view UDP info mode on socket 6
AT#SCFGEXT = 6,3,1,0
OK

Check the current socket extended configuration.

AT#SCFGEXT?

#SCFGEXT: 1,1,0,0,0,0 #SCFGEXT: 2,2,1,0,0,1 #SCFGEXT: 3,0,0,0,0,0,0 #SCFGEXT: 4,0,0,0,0,0,0 #SCFGEXT: 5,0,0,0,0,0,0 #SCFGEXT: 6,3,1,0,0,0

0K

8.3.2. #SCFGEXT2 Command

Use the # SCFGEXT2 command to configure additional extended parameters. Here is the command syntax for each module technology.

8.3.2.1. 2G modules

Refer to documents [1].

8.3.2.2. 3G/4G modules

To get more information, refer to documents [2], [4], [13], [14] or [15] according to the module used.

8.4. Send Data, #SSEND and #SSENDEXT Commands

Use the #SSEND command to send data on a connection when the module is in COMMAND mode. When the <CR> is entered to close the entering of the command, the ">" prompt appears to indicate that the command is ready to accept the data to be sent.



Enter Ctrl-Z to close the data entering and send the data. Before using the command, the socket must be opened. The command syntax is:

AT#SSEND=<connld>

Use the #SSENDEXT command to include all bytes (0x00 to 0xFF) in the block of data to send. This command allows to include special characters as ESC (0x1B), Ctrl-Z (0x1A), BS (0x08) not accepted by #SSEND. The command syntax is:

AT#SSENDEXT=<connld>,<bytestosend>

To get parameters descriptions, refer to documents [1], [2], [4], [11] or [13] according to the module used. For examples refer to section 8.7.

For platforms ID 30 and 37 the command syntax is:

AT#SSEND=<connId>[,<Rai>]

AT#SSENDEXT=<connId>,<bytestosend>[,<Rai>]

To get parameter descriptions, refer to documents [14] or [15] according to the module used.

8.5. Receive Data, #SRECV Command

The module is in COMMAND mode and assumes to have received an SRING unsolicited indication notifying that received data are pending in the socket. Use the #SRECV command to get the pending data in the socket buffer. The command syntax is:

AT#SRECV=<connId>,<maxByte>[,<UDPinfo]

To get parameters descriptions, refer to documents [1], [2], [4], [13], [14] or [15] according to the module used.

For examples refer to section 8.7.

Example

Assume to have received an SRING Data amount unsolicited indication, see #SCFGEXT command.

SRING: 1,5

Extract all the five bytes.



AT#SRECV=1,5

#SRECV: 1,5

hello \leftarrow here are the five bytes, for example, hello.

0K

8.6. Socket Information, #SI Command

Use the #SI command to get additional information on all sockets or on the selected socket. The command syntax is:

AT#SI[= <connId>]

The format of the command response is:

#SI: <connId>,<sent>,<received>,<buff_in>,<ack_waiting>

To get parameters descriptions, refer to documents [1], [2], [4], [13], [14] or [15] according to the module used.

Example

Get information on all the available sockets.

AT#SI

#SI: 1,123,400,10,50

#SI: 2,0,100,0,0

#SI: 3,589,100,10,100

#SI: 4,0,0,0,0 #SI: 5,0,0,0,0

#SI: 6,0,98,60,0

0K

8.7. Examples

8.7.1. Switching from COMMAND to ONLINE Mode and Back

Assume that the SRING unsolicited mode has been configured in Data amount mode through the #SCFGEXT command. The socket <connId>=1 has been configured, and the used PDP context has been configured and activated. Enable the error report in verbose format (+CMEE=2).

Use the #SO command to switch from COMMAND to ONLINE mode, and +++ escape sequence to go back to COMMAND mode.

Open socket connection <connld>=1 in COMMAND mode on echo port.





AT#SD=1,0,echo_port,"address",0,0,1

Send data on the socket. Text view mode for received data (#SCFGEXT).

AT#SSEND=1

> helloCtrl-Z

← type in the first message.

0K

SRING: 1,5 \leftarrow SRING in Data amount mode, 1 is the connection Id, 5 is the amount of the echoed data (hello).

AT#S0 = 1 ← resume the suspended connection.

CONNECT

hello ← echoed data pending on the socket are sent to the terminal

emulator.

Now, the AT interface is in ONLINE mode. All the entered characters are interpreted as data to send on the connection. The remote side returns the sent message (echo).

+++

suspend the connection. The escape sequence is not displayed on the terminal emulator.

OK ← the module is in COMMAND mode.

Now, close the socket connection.

AT#SH=1

0K

If the socket connection is not closed, its time out expires, and the NO CARRIER message is displayed on the terminal emulator.

8.7.2. Accept a Socket Connection in COMMAND Mode

Open the socket connection <connId> = 1 in listening mode (only for TCP) on <port> = xxxx.

AT#SL = 1,1,xxxx

0K

Now, if a remote host tries to connect, the module receives an SRING unsolicited indication with the listening <connId>=1.



SRING: 1

Accept the incoming connection in COMMAND mode.

AT#SA = 1.1

OK the ← the connection is accepted. The command returns an OK message if

connection is successful. The module stays in COMMAND mode. When <connMode>=0 (default) the #SA command returns the CONNET message,

in this case, the module is in ONLINE mode.

Check the sockets state.

AT#SS

#SS: 1,2,loc_ip,loc_port,rem_ip,rem_port ← <connId>=1 is open in suspended state.

#SS: 2,0

#SS: 3,0

#SS: 4,0

#SS: 5,0

#SS: 6.0

0K

8.7.3. SRING Unsolicited Mode: Normal

Assume that the SRING unsolicited mode has been configured in Normal mode through the #SCFGEXT command, the socket <connId>=2 has been configured, and the PDP context has been configured and activated. Enable the error report in verbose format (+CMEE=2).

Open socket connection <connld>=2 in COMMAND mode on echo port.

AT#SD=2,0,echo_port,"address",0,0,1

Send data on the socket. Text view mode for received data (#SCFGEXT).

AT#SSEND=2

> helloCtrl-Z ← type in the first message.

0K

SRING: 2 ← SRING in Normal mode, 2 is the socket connection Id. Only one SRING unsolicited indication is received, regardless if you must send other data.

AT#SSEND=2

> helloCtrl-Z ← type the second message.
OK





Close the socket connection.

AT#SH=2

0K

8.7.4. SRING Unsolicited Mode: Data Amount

Assume that the SRING unsolicited mode has been configured in Data amount mode through the #SCFGEXT command, the socket <connld>=2 has been configured, and the PDP context has been configured and activated. Enable the error report in verbose format (+CMEE=2).

Open socket connection <connld>=2 in COMMAND mode on echo port.

AT#SD=2,0,echo_port,"address",0,0,1

OK ← socket connection is open in COMMAND mode.

AT#SSEND=2 ← send data.

> helloCtrl-Z ← type in the first message

0K

AT#SSEND=2

OK

SRING: 2,10 ← SRING in Data amount mode, the unsolicited indication is

updated

every time new data arrives on the socket.

AT#SI=2 ← get socket info.

#SI: 2,10,0,10,0 \leftarrow ten bytes sent, and ten pending on the socket.

0K

AT#S0 = 2 ← resume the suspended socket connection.

CONNECT

hellohello \leftarrow data pending on the socket are sent to the terminal emulator.

Now, the AT interface is in ONLINE mode. All entered characters are interpreted as data to send on the connection. The remote side returns the sent message (echo).





terminal emulator.

SRING: 2,3 \leftarrow SRING in Data amount mode, 2 is the connection Id, 3 is the amount of echoed data (+++).

Now, close the socket connection.

AT#SH=2

0K

If the socket connection is not closed, its time out expires, and the NO CARRIER message is displayed on the terminal emulator.

8.7.5. SRING Unsolicited Mode: Data View

Assume that the SRING mode has been configured in Data view mode through the #SCFGEXT command, the sockets <connId>=1/2 have been configured, and the used PDP context has been configured and activated. Enable the error report in verbose format [+CMEE=2].

Configure socket <connId>=1 in Data view mode and set text view.

AT#SCFGEXT = 1,2,0,0

0K

Configure socket <connld>=2 in Data view mode and set hex view.

AT#SCFGEXT = 2,2,1,0

0K

Open sockets 1 in COMMAND mode on an echo port.

AT#SD=1,0,echo_port,"address",0,0,1

0K

Open sockets <connld>=2 in COMMAND mode on an echo port.

AT#SD=2,0,echo_port,"address",0,0,1

0K

Send data on the first socket, text view for received data.

AT#SSEND=1

> helloCtrl-Z

0K





Send data on the second socket, hex mode for received data.

AT#SSEND=2

> helloCtrl-Z

0K

Send on socket <connId>=1 more than the maximum number of chars for an SRING, this will cause two unsolicited SRING.

AT#SSEND=1

SRING: 1,4,test

The first unsolicited contains the first 64 bytes of the socket buffer, the remaining 4 are extracted with the second unsolicited message.

#SCFGEXT command allows to send data in hex mode. Set <sendDataMode>=1.
Configure <connId>=1 in Data view mode and set text view for received and sent data.
AT#SCFGEXT = 1,2,1,0,0,1

0K

Open sockets <connId>=1 in COMMAND mode on an echo port. AT#SD=1,0,echo_port,"address",0,0,1

OK

Send data in hexadecimal format:

AT#SSEND=1

> 68656C6C6FCtrl-Z

0K

SRING: 1,5,68656C6C6F ← receive data in hexadecimal format.

8.7.6. SRING Unsolicited Mode: Data view UDP

Assume that the SRING mode has been configured in Data view UDP mode through the #SCFGEXT command, the sockets <connId>=1/2 have been configured, and the used PDP context has been configured and activated. Enable the error report in verbose format (+CMEE=2).

Configure <connId>=1 in Data view mode with UDP info and set text view.





AT#SCFGEXT = 1,3,0,0 OK

Configure <connId>=2 in Data view mode and set hex view.

AT#SCFGEXT = 2,3,1,0

0K

Open the UDP connections <connld>=1 in COMMAND mode, on echo port.

AT#SD=1,1,echo_port,"address",0,0,1

OK the socket connection is open; the module is in COMMAND mode.

Open the UDP connections <connld>=2 in COMMAND mode, on echo port.

AT#SD=2,1,echo_port,"address",0,0,1

Send data on the first socket, text mode:

AT#SSEND=1

> helloCtrl-Z

0K

SRING: "address",echo_port,1,5,0,hello

Send data on the second socket, hex mode for received data:

AT#SSEND=2

> helloCtrl-Z

0K

SRING: "address",echo port,2,5,0,68656C6C6F

Send on socket <connId>=1 more than the maximum number of chars for an SRING, this will cause two unsolicited SRING.

AT#SSEND=1

SRING:

SRING: "address",echo_port,1,4,0,test

The first unsolicited contains the first 64 bytes of the socket buffer, the remaining 4 are extracted with the second unsolicited message.



9. MULTI-SOCKET AND PROTOCOL SERVICE SOCKETS

9.1. 2G/3G Modules

Referring to the below table:

- Multi-socket (IP Easy environment):

Sockets identified by <connId>= 1, 2, 3, are bound to <cid>=1 (as example) Sockets identified by <connId>= 4, 5, 6, are bound to <cid>=3 (as example)

- Protocol Service Sockets:

HTTP	Service socket bound to <cid>=1 (by default), refer to chapter 10</cid>
FTP	Service socket bound to <cid>=1 (mandatory), refer to chapter 12</cid>
SMTP	Service socket bound to <cid>=1 (mandatory), refer to chapter 11</cid>
PING	Service socket bound to <cid>=1 (mandatory), refer to chapter 14</cid>
SSL	Service socket bound to <cid>=1 (mandatory), refer to document [5]</cid>

- Maximum active PDP contexts in the IP Easy Environment at the same time: refer to chapter 3 feature 0, and section 4.2.1. The table shows, for example, active the PDP contexts identified by <cid>=1, and <cid>=3.

The first six sockets belong to the Multi-socket (IP Easy environment). You can use them through the #SD, #SA, etc. commands described before. Each protocol has its own service socket not belonging to the Multi-socket set.

IP Easy Multi- Socket <connld></connld>	<cid>=1 Active</cid>	<cid>=2 No active</cid>	<cid>=3 Active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	bound	/	/	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	/	bound	/	/
5	/	/	bound	/	/
6	/	/	bound	/	/
Protocol Service Sockets					
HTTP	bound	/	/	/	/
FTP	bound				
SMTP	bound				
PING	bound				
SSL	bound				

Table 13: 2G/3G Multi-Socket & Protocol Sockets





9.2. 4G Modules

9.2.1. #PROTOCOLCFG Command

4G modules provide the #PROTOCOLCFG command to change the default binding configuration between protocols (FTP, SMTP, PING, SSL, etc.) and <cid> value identifier. Here is the command syntax.

AT#PROTOCOLCFG =rotocol>,<cid>

To get parameters descriptions see documents [4], or [13] according to the module used.



Warning: #PROTOCOLCFG command is not available for Platform Version ID 30, 37.

9.2.2. Platform Version ID 20

9.2.2.1. Modules: LE910 Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA, -EU V2, AU V2

The AT#PROTOCOLCFG=? test command returns the supported protocols, and for each protocol shows the <cid>range
 range
 Refer to document [4] to get parameter descriptions.

AT#PROTOCOLCFG=?

```
#PROTOCOLCFG: "FTP",(0-15),(0),(0),(0) #PROTOCOLCFG: "SMTP",(0-15),(0),(0),(0) #PROTOCOLCFG: "PING",(0-15),(0),(0),(0) #PROTOCOLCFG: "SSL",(0-15),(0),(0),(0) #PROTOCOLCFG: "NTP",(0-15),(0),(0),(0) OK
```

The AT#PROTOCOLCFG? read command returns the current setting. The following is the default setting.

AT#PROTOCOLCFG?

```
#PROTOCOLCFG: "FTP",1,0,0,0
#PROTOCOLCFG: "SMTP",1,0,0,0
#PROTOCOLCFG: "PING",1,0,0,0
#PROTOCOLCFG: "SSL",1,0,0,0
#PROTOCOLCFG: "NTP",1,0,0,0
OK
```



The AT+CGDCONT? read command returns the current setting for each defined PDP context. The following is the default setting.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0

0K

By default, the protocols service sockets are configured to use the PDP context identified by <cid>=1 but, <cid>=1 - by default - identifies a PDP context without the Access Point Name. It means that, during the attach procedure, the network assigns to <cid>=1 the Default EPS Bearer that supports the services provided by the used Network Operator. Use the #PROTOCOLCFG command to change the default configuration, in accordance with your application.

The below table summarizes how <cid> and sockets can be used.

Sockets	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5 - 15</cid>
Internal Sockets (not directly accessible to the user)	During the attach procedure, the network assigns to the module the Default EPS Bearer that supports the services provided by the used Network Operator. By default, is used <cid>=1 bound to an internal socket. See section 5.1.</cid>				
IP Easy Multi- Socket <connid></connid>					
1 - 10					
Protocol Service Sockets	The user can bind all <cid> to socket Protocol Service Socket, at the same</cid>		he Multi-socke	et environme	nt, and
FTP					
SMTP					
PING					
SSL					
NTP					

Table 14: LE910-EU1, Network Operator Service, Multi-Socket, and Protocols

The below figure summarizes an example of the configuration of Multi-socket, Protocol Services, Internal Sockets, Network Interface, and <cid>.



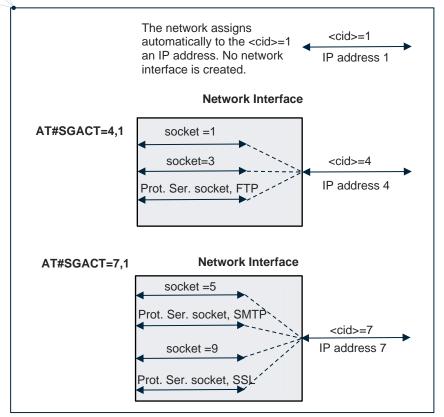


Figure 6: LE910-EU1, Multi/Protocol/Internal Sockets, and Network Interface

9.2.2.2. Modules: LE910-SV1, -SVL, SV V2

The AT#PROTOCOLCFG=? test command returns the supported protocols, and for each protocol shows the <cid>range
 range
 Refer to document [4] to get parameter descriptions.

AT#PROTOCOLCFG=?

```
#PROTOCOLCFG: "FTP",(0-15),(0),(0),(0)

#PROTOCOLCFG: "SMTP",(0-15),(0),(0),(0)

#PROTOCOLCFG: "PING",(0-15),(0),(0),(0)

#PROTOCOLCFG: "SSL",(0-15),(0),(0),(0)

#PROTOCOLCFG: "NTP",(0-15),(0),(0),(0)
```

0K

The AT#PROTOCOLCFG? read command returns the current setting. The default setting is the following.

AT#PROTOCOLCFG?

```
#PROTOCOLCFG: "FTP",3,0,0,0

#PROTOCOLCFG: "SMTP",3,0,0,0

#PROTOCOLCFG: "PING",3,0,0,0

#PROTOCOLCFG: "SSL",3,0,0,0

#PROTOCOLCFG: "NTP",3,0,0,0
```

ΟK

IP Easy User Guide



The AT+CGDCONT? read command returns the current setting for each defined PDP context. The default setting is the following.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","vzwims","",0,0 Service: IMS

+CGDCONT: 2,"IPV4V6","vzwadmin","",0,0 Service: ADMIN +CGDCONT: 3,"IPV4V6","vzwinternet","",0,0 Service: INTERNET

0K

By default, the protocols service sockets are using the PDP context identified by <cid>=3 which is used – by default - by the INTERNET service as shown by the command above. Use the #PROTOCOLCFG command to change the default configuration, in accordance with your application.

The below table summarizes how <cid> and sockets can be used.

Sockets	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4/5</cid>	<cid>=6</cid>	<cid>=7 - 15</cid>		
Internal Sockets (not directly accessible to the user)	By default, <cid>=1 is used for IMS Service assigned by the Network Operator and is bound to an internal socket.</cid>	By default, <cid>=2 is used for ADMIN Service assigned by the Network Operator and is bound to an internal socket.</cid>	By default, <cid>=3 is used for INTERNET Service assigned by the Network Operator and is bound to an internal socket.</cid>	Unused	By default, <cid>=6 is used for INTERNET Service assigned by the Network Operator and is bound to an internal socket.</cid>			
IP Easy Multi- Socket <connld></connld>								
1 - 10								
Protocol Service Sockets	The user can bind all <cid> to sockets belonging to the Multi-socket environment, and Protocol Service Sockets, at the same time.</cid>							
FTP								
SMTP								
PING								
SSL								
NTP								

Table 15: LE910-SV1, IMS, ADMIN, INTERNET Services, Multi-Socket and Protocols





9.2.3. Platform Version ID 25

9.2.3.1. Modules: LE910Cx

The AT#PROTOCOLCFG=? test command returns the supported protocols, and for each protocol shows the <cid>range
 range
 Refer to document [13] to get parameter descriptions.

AT#PROTOCOLCFG=?

#PROTOCOLCFG: "FTP",(1-5),(0),(0),(0) #PROTOCOLCFG: "SMTP",(1-5),(0),(0),(0) #PROTOCOLCFG: "PING",(1-5),(0),(0),(0) #PROTOCOLCFG: "SSL",(1-5),(0),(0),(0)

0K

The AT#PROTOCOLCFG? read command returns the current setting. The default setting is the following.

AT#PROTOCOLCFG?

#PROTOCOLCFG: "FTP",1,0,0,0 #PROTOCOLCFG: "SMTP",1,0,0,0 #PROTOCOLCFG: "PING",1,0,0,0 #PROTOCOLCFG: "SSL",1,0,0,0

0K

The AT+CGDCONT? read command returns the current setting for each defined PDP context. The following is the default setting.

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0,0,0

0K

By default, the protocols service sockets are configured to use the PDP context identified by <cid>=1 but, <cid>=1 - by default - identifies a PDP context without the Access Point Name. It means that, during the attach procedure, the network assigns to <cid>=1 the Default EPS Bearer that supports the services provided by the used Network Operator. Use the #PROTOCOLCFG command to change the default configuration, in accordance with your application.

The below table summarizes how <cid> and sockets can be used.



Sockets	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5 - 15</cid>		
Internal Sockets (not directly accessible to the user)	During the attach procedure, the network assigns to the module the Default EPS Bearer that supports the services provided by the used Network Operator. By default, is used <cid>=1 bound to an internal socket. See section 5.1.</cid>						
IP Easy Multi- Socket <connld></connld>							
1 - 10							
Protocol Service Sockets	The user can bind all <cid> to sockets belonging to the Multi-socket environment, and Protocol Service Socket, at the same time.</cid>						
FTP							
SMTP							
PING							
SSL							

Table 16: LE910Cx, Network Operator Service, Multi-Socket, and Protocols



10. HTTP PROTOCOL

The HTTP protocol is used on the World Wide Web. To establish an HTTP connection, you can use the following commands :

- 1. The #HTTPQRY/#HTTPSND commands, that create an HTTP Protocol Service socket, and establishes the HTTP connection.
 Assume to use the #PORTCFG command or CMUX tool, the module can provide three serial lines connected to three AT parsers, see Figure 2 and Figure 3.
 Suppose that one HTTP connection is already started and not still closed on a serial port. If you try to open a second HTTP connection on another serial port, the #HTTPQRY/ #HTTPSND commands return an error message. When the old HTTP connection is closed, you can open the new one.
- 2. The #SD command that uses a Multi-socket, see section 10.4.4. In this case, the user application must manage the HTTP protocol.

10.1. #HTTPCFG Command

Use the #HTTPCFG command to set one of the three profiles, provided by modules, to configure an HTTP connection. The profiles are identified by the prof_id> parameter and are automatically saved in NVM.

10.1.1. 2G Modules

AT#HTTPCFG=?

#HTTPCFG: (0-2),50,(1-65535),(0,1),50,50,(0,1),(1-65535),(1-5)

0K

Referring to the example shown in below table:

- HTTP Service socket bound to <cid>=1 (by default, it can be changed)
- Sockets <connId>= 1, 2, 3 not opened, and bound to active <cid>=1
- Sockets <connId>= 4, 5, 6 not opened, and bound to active <cid>=3



IP Easy Multi- Socket <connid></connid>	<cid>=1 Active</cid>	<cid>=2 No active</cid>	<cid>=3 Active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	bound	/	/	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	/	bound	/	/
5	/	/	bound	/	/
6	/	/	bound	/	/
Protocol Service Sockets					
HTTP Service Socket	bound (default)	1	1	1	1

Table 16: 2G Multi-Socket & HTTP Service Socket

The AT#HTTPCFG? read command returns the current setting for each profile with the following format:

#HTTPCFG:<prof_id>,<server_address>,<server_port>,<auth_type>,<username>,<password>,<ssl_enabled>,<timeout>,<cid><CR><LF>

These are the default profiles

AT#HTTPCFG?

```
#HTTPCFG: 0,"",80,0,"","******",0,120,1
#HTTPCFG: 1,"",80,0,"","******",0,120,1
```

#HTTPCFG: 2,"m2mlocate.telit.com",9978,0,"","******",0,120,1

0K

Use AT#HTTPCFG=<prof_id> command form to reset the values of the <prof_id> profile and set the default values.

See documents [1] to get parameter descriptions.

10.1.2. 3G Modules

The AT#HTTPCFG=? test command returns the supported range of parameters values. **Example**: color="10">color="10



AT#HTTPCFG=?

#HTTPCFG: (0-2),50,(1-65535),(0,1),50,50,(0,1),(1-65535),(1-5),(0-1500),(0),(0) OK

Referring to the example shown in below table:

- HTTP Service socket bound to <cid>=1 (by default, it can be changed)
- Sockets <connId>= 1, 2, 3 not opened, and bound to active <cid>=1
- Sockets <connld>= 4, 5, 6 not opened, and bound to active <cid>=3

IP Easy Multi- Socket <connld></connld>	<cid>=1 Active</cid>	<cid>=2 No active</cid>	<cid>=3 Active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	bound	/	/	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	/	bound	/	/
5	/	/	bound	/	/
6	/	/	bound	/	/
Protocol Service Sockets					
HTTP Service Socket	bound (default)	/	/	/	/

Table 17: 3G Multi-Socket & HTTP Service Socket

The AT#HTTPCFG? read command returns the current setting for each profile with the following format:

```
#HTTPCFG:rof_id>,<server_address>,<server_port>,<auth_type>,
<username>,<password>,<ssl_enabled>,<timeout>,<cid>,<pkt_size>,0,0<CR><LF>
```

These are the default profiles

AT#HTTPCFG?

#HTTPCFG: 0,"",80,0,"","******",0,120,3,300,0,0 #HTTPCFG: 1,"",80,0,"","******",0,120,3,300,0,0

#HTTPCFG: 2,"m2mlocate.telit.com",9978,0,"","******",0,120,3,300,0,0

0K

Use AT#HTTPCFG=<prof_id> command form to reset the values of the <prof_id> profile and set the default values.

See documents [2] to get parameter descriptions.



10.1.3. 4G Modules

The AT#HTTPCFG=? test command returns the supported range of parameter values based on the module used, see the following sub-sections.

The AT#HTTPCFG? read command returns the current setting for each profile with the following format:

#HTTPCFG:rof_id>,<server_address>,<server_port>,<auth_type>,
<username>,<password>,<ssl_enabled>,<timeout>,<cid>,<pkt_size>,0,0<CR><LF>

These are the default profiles

AT#HTTPCFG?

#HTTPCFG: 0,"",80,0,"","*****",0,120,3,300,0,0 #HTTPCFG: 1,"",80,0,"","*****",0,120,3,300,0,0 #HTTPCFG: 2,"m2mlocate.telit.com",9978,0,"","******",0,120,3,300,0,0

0K

Use AT#HTTPCFG=<prof_id> command form to reset the values of the <prof_id> profile and set the default values.

To get parameters descriptions see documents [4], [11], [13], [14] or [15] according to the module used.

10.1.3.1. Platform Version ID 20



Warning: Use the #PROTOCOLCFG command to change the default binding between the HTTP Application and <cid> identifier.

10.1.3.1.1. Modules: LE910 Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA, -EU V2, AU V2

The AT#HTTPCFG=? test command returns the supported range of parameters values. Pay attention to: $\frac{0-2}{1-15}$.





AT#HTTPCFG=?

#HTTPCFG: (0-2),50,(1-65535),(0,1),50,50,(0,1),(1-65535),(1-15),(0-1500),(0),(0)

0K

10.1.3.1.2. Modules: LE910-SV1, -SVL, SV V2

The AT#HTTPCFG=? test command returns the supported range of parameters values. Pay attention to: $\sqrt{\frac{0-2}{2}}$, $\sqrt{\frac{1-15}{2}}$.

AT#HTTPCFG=?

#HTTPCFG: (0-2),50,(1-65535),(0,1),50,50,(0,1),(1-65535),(1-15),(0-1500),(0),(0)

ΟK

10.1.3.2. Platform Version ID 23

10.1.3.2.1. Modules: LE866-SV1, ME866A1-NV

AT#HTTPCFG=?

#HTTPCFG: (0-2),50,(1-65535),(0,1),50,50,(0,1),(1-65535),(1-5),(0-1500),(0),(0)
OK

10.1.3.3. Platform Version ID 25

10.1.3.3.1. Modules: LE910Cx

AT#HTTPCFG=?

#HTTPCFG: (0-2),63,(1-65535),(0,1),50,50,(0),(1-65535),(1-5)

0K

10.1.3.4. Platform Version ID 30, 37



To get more information, refer to documents [14] or [15] according to the module used.

10.2. #HTTPQRY: GET, HEAD, DELETE

Use the #HTTPQRY command to send an HTTP command request (GET, HEAD, DELETE, see RFC 2616 document) to the HTTP server. If the request succeeds, the #HTTPQRY command returns the OK message, otherwise, an error code is reported.

#HTTPQRY sends the HTTP request header containing the "Connection: close" option, see RFC 2616 document, and it cannot be removed. The "close" connection option signals that the connection will be closed after the current request/response is complete.

AT#HTTPQRY=<prof_id>,<command>,<resource>[,<extra_header_line>]

When the HTTP server answer is received, then the following URC is put on the serial port:

#HTTPRING: <prof_id>,<http_status_code>,<content_type>,<data_size>

To get parameter descriptions, refer to 4G documents according to the module used.

Note:

 If there are no data from server or the server does not answer within the time interval specified in <timeout> parameter of #HTTPCFG command, then the URC #HTTPRING <http_status_code> parameter has value 0.



- 2. The time required to receive the #HTTPRING URC could be greater than the one specified in the <timeout> parameter of the #HTTPCFG command because it also includes the time needed to send the HTTP request to the server.
- 3. To set more than one HTTP header line in parameter <extra_header_line>, they have to be separated by ">>"

10.3. #HTTPSND: POST, PUT

Use the #HTTPSND command to send data to the HTTP server using POST or PUT HTTP command requests, see RFC 2616 document. After the command line is terminated with <CR>, the command responds with the following three characters: >>>. Now, you can digit the characters to send to the server. If the operation succeeds, the #HTTPSND command returns the OK message, otherwise, an error code is reported.



#HTTPSND sends the HTTP request header containing the "Connection: close" option, see RFC 2616 document, and it cannot be removed. The "close" connection option signals that the connection will be closed after the current request/response is complete.

When the HTTP server answer is received, the following URC is displayed on the DTE:

#HTTPRING: <prof_id>,<http_status_code>,<content_type>,<data_size>

To get parameter descriptions, refer to 4G documents according to the module used.

Note:

1. If no data are received from the HTTP server, or the HTTP server does not answer within the time interval specified in the <timeout> parameter of the #HTTPCFG command, then the <http status code> parameter of the #HTTPRING URC is 0.



2. The time required to receive the #HTTPRING URC could be greater than the one specified in <timeout> parameter of the #HTTPCFG command because it also includes the time needed to send the HTTP request to the server.

10.4. Examples

10.4.1. GET Command (2G)

This example shows the use of the GET command.

Define PDP context <cid=1>.

AT+CGDCONT=1,"IP", "Access_Point_Name"

OK

Activate PDP Context <cid>=1. The #SGACT command returns the IP address assigned by the network to the module.

AT#SGACT=1,1 #SGACT: 10.7.125.7 OK

Configure the HTTP server parameters.



AT#HTTPCFG=0,"server_address",80,0,,,0,120,1

Use #HTTPQRY to open the HTTP connection and send the GET command to the HTTP server. The connection will be closed after completion of the response ("Connect: close" option.

AT#HTTPQRY=0,0,"/"

0K

← GET command succeeds.

When the HTTP server answer is received, the HTTP connection is closed, and a URC is displayed on the terminal emulator.

#HTTPRING: 0,200,"text/html", ···

Type in the #HTTPRCV command to read data sent by HTTP server and stored in the socket buffer.

AT#HTTPRCV=0

<!doctype html>

<html>

.....

</html>

0K

10.4.2. POST Command (2G)

This example shows the use of the POST command.

Define PDP context.

AT+CGDCONT=1,"IP","Access_Point_Name"

Context activation.

AT#SGACT=1,1

#SGACT: 10.7.125.7

0K

Configure HTTP server parameters.

AT#HTTPCFG=0,"server_address",80,0,,,0,120,1

0K

Use #HTTPSND to open the HTTP connection and send the POST command to the HTTP server. The connection will be closed after completion of the response ("Connect: close" option. In this example, you digit 27 characters.

AT#HTTPSND=0,0,"/",27





>>> digit 27 characters OK

When the HTTP server answer is received, the following URC is put on the serial port.

#HTTPRING: 0,200,"text/html",1270

AT#HTTPRCV=0

<!doctype html>

<html>

<head>

<title>Example POST response</title> ...

0K

10.4.3. PUT Command (2G)

This example shows the use of the PUT command.

Define PDP context.
AT+CGDCONT=1,"IP","Access_Point_Name"

Context activation. AT#SGACT=1,1

#SGACT: 10.7.125.7

0K

0K

Configure HTTP server parameters. AT#HTTPCFG=0,"server_address",80,0,,,0,120,1 OK

Use #HTTPSND to open the HTTP connection and send the PUT command to the HTTP server. The connection will be close after completion of the response ("Connect: close" option. In this example, you digit 27 characters.

AT#HTTPSND=0,1,"/",27
>>> digit 27 characters
OK

When the HTTP server answer is received, the following URC is put on the serial port.

#HTTPRING: 0,200,"text/html",1270



AT#HTTPRCV=0

<!doctype html>

<html>

<head>

<title>Example PUT response</title> ...

0K

10.4.4. HTTP Client with #SD

This example establishes an HTTP connection toward an HTTP server and retrieves an HTML page using a socket dial connection (#SD). Assume that a terminal emulator is connected to the module. See, for comparison, the example described in section 14.3.3.

Check the sockets/PDP contexts binding configuration (default).

AT#SCFG?

```
#SCFG: 1,1,300,90,600,50
#SCFG: 2,1,300,90,600,50
#SCFG: 3,1,300,90,600,50
#SCFG: 4,2,300,90,600,50
#SCFG: 5,2,300,90,600,50
#SCFG: 6,2,300,90,600,50
OK
```

Define PDP Context <cid>=1.

```
AT+CGDCONT = 1,"IP","Access_Point_Name","0.0.0.0",0,0
OK
```

Check which are the currently defined PDP contexts.

AT+CGDCONT?

```
+CGDCONT: 1,"IP","Access_Point_Name","0.0.0.0",0,0
OK
```

Activate the PDP context <cid>=1, assume that no UserID and Password are needed. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 2.43.168.172

0K

Open the connection toward the HTTP server on port=80. Transport protocol is TCP.

AT#SD=1,0,80,"server_address",0,0

CONNECT ← the connection is open. The module is in ONLINE mode.

Now, following the HTTP protocol, ask the homepage by sending the next lines to the module. The entered data are sent directly to the HTTP server. The strings sent to the

IP Easy User Guide



HTTP server must be ended by a line feed character. Enable the local echo on the terminal emulator to see the issued commands.

GET / HTTP/1.1<cr><lf>

Host: www.telit.com<cr><lf>Connection: keep-alive<cr><lf>

<cr><lf>

The HTTP server replies with the HTML code of the homepage and some debugging responses.

HTTP/1.1 200 OK

.

<!DOCTYPE html>

<html>

··· here is all the HTML code of the page ···

</html>

NO CARRIER

← HTTP connection is closed.

Check the disconnection cause.

AT#SLASTCLOSURE=1

#SLASTCLOSURE: 1,1

← HTTP connection closed by remote host.

0K



11. SMTP PROTOCOL

SMTP is a standard protocol for electronic mail (e-mail). To establish an SMTP connection, you can use:

- 1. the #EMAILD/#SMTPCL commands, that create an SMTP Protocol Service socket, and establishes the SMTP connection.
 - Assume to use the #PORTCFG command or CMUX tool, the module can provide three serial lines connected to three AT parsers, see Fig. 2 and Fig. 3.
 - Suppose that one SMTP connection is already started and not still closed on a serial port. If you try to open a second SMTP connection on another serial port, the #EMAILD/ #SMTPCL commands return an error message. When the old SMTP connection is closed, you can open the new one.
- 2. The #SD command that uses a Multi-socket, as shown by the examples in sections 11.6.3, and 11.6.4. In this case, the user application must manage the SMTP protocol.

11.1. 2G Modules

The SMTP connection can use only the PDP Context identified by <cid>=1, or the GSM context identified by <cid>=0. The SMTP command uses one of the two contexts according to the command previously entered: AT#SGACT=1,1 or AT#SGACT =0,1 respectively. For GSM context (<cid>=0) see section 14.3.5.

Use #SMTPCFG command to configure the SMTP connection. The command syntax is:

AT#SMTPCFG=<ssl_enable>[,<port>[,<mode>[,<charset>[,<UNUSED_1>

[,<UNUSED_2]]]]]

See document [1] to get parameters descriptions. Referring to the example shown in below table:

- SMTP Service socket bound to <cid>=1 (mandatory)
- Sockets <connId>= 1, 2, 3 not opened, and bound to active <cid>=1
- Sockets <connId>= 4, 5, 6 not opened, and bound to active <cid>=3

IP Easy Multi- Socket <connid></connid>	<cid>=1 Active</cid>	<cid>=2 No active</cid>	<cid>=3 Active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	bound	/	/	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	/	bound	/	/
5	/	/	bound	/	/
6	/	/	bound	/	/
Protocol Service Sockets					



IP Easy Multi-	<cid>=1</cid>	<cid>=2</cid>	<cid>=3</cid>	<cid>=4</cid>	<cid>=5</cid>
Socket <connld></connld>	Active	No active	Active	No active	No active
SMTP Service Socket	bound				

Table 18: 2G Multi-Socket & SMTP Service Socket

11.2. 3G Modules

The SMTP connection can use only the PDP Context identified by <cid>=1, or the GSM context identified by <cid>=0, both settings are mandatory. The SMTP command selects one of the two contexts according to the command previously entered: AT#SGACT=1,1 or AT#SGACT =0,1 respectively. For GSM context (<cid>=0) see section 14.3.5.

See document [2] to get parameters descriptions. Referring to the example shown in below table:

- SMTP Service socket bound to <cid>=1 (mandatory)
- Sockets <connId>= 1, 2, 3 not opened, and bound to active <cid>=1
- Sockets <connId>= 4, 5, 6 not opened, and bound to active <cid>=3

IP Easy Multi- Socket <connid></connid>	<cid>=1 Active</cid>	<cid>=2 No active</cid>	<cid>=3 Active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	bound	/	/	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	/	bound	/	/
5	/	/	bound	/	/
6	/	/	bound	/	/
Protocol Service Sockets					
SMTP Service	bound				

Table 19: 3G Multi-Socket & SMTP Service Socket

11.3. 4G Modules

11.3.1. Platform Version ID 20, 23

AT#SMTPCFG=<ssl_enable>[,<port>[,<mode>[,<unused_1>[,<pkt_size>[,<unused_2]]]]]



To get parameters descriptions, refer to documents [4] or [11] according to the module used.

For platform ID 20 use #PROTOCOLCFG command to change the <cid> identifier bound to SMTP protocol, refer to section 9.2.

11.3.2. Platform Version ID 25

To get parameters descriptions, refer to document [13].

11.3.3. Platform Version ID 30, 37

AT#SMTPCFG=<ssl enabled>[,<port>[,<mode>[,<unused1>[,<unused2>[,<cid>]]]]]

To get parameters descriptions, refer to documents [14] or [15] according to the module used.

11.4. E-mail Sending, with no Attachment

Use the #EMAILD command to send an e-mail to the SMTP server. When you enter the command, and the following <CR>, the command returns the ">" prompt and waits for the message body text. To close the message, enter Ctrl-Z (char 0x1A), to exit without writing the message enter ESC (char 0x1B).

AT#EMAILD=[<da>,<subj>]

If the e-mail message is successfully sent, the command returns the OK message, otherwise returns an error code.

To get parameters descriptions, see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

11.5. E-mail Sending, with Attachment

Use the #SMTPCL command to send an e-mail with an attachment.

AT#SMTPCL=<da>,<subj>,<att>[,<filename>,<encod>]

To get parameters descriptions, see documents [1], [2], [4], or [11], according to the module used.





Warning: Platform Version ID 25, 30, 37 do not support AT#SMTPCL command.

11.6. Examples

11.6.1. With no Attachment

This example shows how to send an e-mail to a recipient. A terminal emulator is connected to the module.

Enable error in verbose format.

AT+CMEE=2

0K

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name"

0K

To activate successfully a PDP context, it must be bound to a socket using the #SCFG command.

Assume that no username and password are required to activate it. The command returns the IP address assigned by the network to the module.

AT#SGACT=1.1

#SGACT: 10.7.125.7

0K

Set the SMTP connection parameters.

AT#SMTPCFG=0,587

0K

AT#ESMTP="SMTP server address"

← config. SMTP server address of the sender.

0K

AT#EADDR="sender_address"

← configure e-mail address of the sender.

0K

AT#EUSER= "sender_user_name"

← configure username of the sender.

0K

AT#EPASSW="sender_user_password" ← configure user password of the sender.





Send the e-mail with no attachment to the recipient having recipient address.

AT#EMAILD="recipient_address","mail with no attachment"

> Hello<Ctrl-Z>

11.6.2. With Attachment

This example shows how to send an e-mail to a recipient with an attachment. A terminal emulator is connected to the module.

Enable error in verbose format.

AT+CMEE=2

0K

Define PDP context.

AT+CGDCONT=1,"IP", "Access_Point_Name"

0K

To activate successfully a PDP context, it must be bound to a socket using the #SCFG command.

The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 10.7.125.7

0K

Set the SMTP connection parameters.

AT#SMTPCFG=0,587

0K

AT#ESMTP="SMTP_server_address" ← config. SMTP server address of the sender.

0K

AT#EADDR="sender_address" ← configure e-mail address of the sender.

0K

AT#EUSER= "sender_user_name" ← configure username of the sender.

0K

 $\textbf{AT\#EPASSW="sender_user_password"} \quad \leftarrow \text{configure user password of the sender}.$





ΟK

Send the e-mail, with a picture in the attachment, to the recipient having recipient_address.

AT#SMTPCL="recipient_address","mail with picture",2,"picture.jpg"

> Hello.<CR><LF>

This is the body.<CR><LF>

The picture is in the attachment. < CR > < LF > < Ctrl-Z >

CONNECT ← the module enters ONLINE mode to send the attachment.

... binary data of the attachment ...

+++ ← type in the escape sequence to close the connection.

NO CARRIER \leftarrow the module returns this message and enters COMMAND mode.

11.6.3. Sending with #SD

This example describes how to create an SMTP connection, and send an e-mail using the socket dial command (#SD). The socket is one of the sockets provided by the Multi-socket feature. Assume that a terminal emulator is connected to the module.

Enable reports in verbose format.

AT+CMEE=2

0K

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name"

0K

To activate successfully a PDP context, it must be bound to a socket using the #SCFG command.

Assume that no username and password are required to activate it. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 193.199.234.255

0K

Open the connection toward the SMTP server using "SMTP_server_address" and port 25. AT#SD=1, 0,25," SMTP_server_address ",0,0

CONNECT ← the module is in ONLINE mode



Now, the user application sends the SMTP protocol commands: HELO, MAIL FR()M, RCPT
TO, DATA, QUIT.	

.....

AT#SH=1

OK \leftarrow the connection is closed.

11.6.4. Receiving with #SD

This example describes how to create a connection toward a POP server, and receive an e-mail using a socket dial command (#SD). The socket is one out of the N provided by the Multi-socket feature. A terminal emulator is connected to the module.

Enable reports in verbose format.

AT+CMEE=2

0K

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name"

0K

Configure the socket <connId>=1 and bind it to PDP context <cid>=1.

AT#SCFG=1,1,300,90,600,50

0K

To activate successfully a PDP context, it must be bound to a socket using the #SCFG command.

Assume that no username and password are required to activate it. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 193.199.234.255

0K

Open the connection toward the POP server on port=110. Transport protocol is TCP.

AT#SD=1,0,110,"POP_server_address",0,0

IP Easy User Guide



CONNECT ← the module is in ONLINE mode.

AT#SH=1

OK \leftarrow the connection is closed.



12. FTP PROTOCOL

FTP is a standard network protocol used to transfer files between a client and server on a network. To establish an FTP connection, you can use:

- 1. The #FTPOPEN command, that creates an FTP Protocol Service socket, and establishes the FTP control connection. Then, you can use the #FTPUT or #FTPGET command to open the next data connection.

 Assume to use #PORTCFG command or CMUX tool, the module can provide three serial lines connected to three AT parsers, see Fig. 2 and Fig. 3.

 Suppose that one FTP control connection is already started on a serial port. If you try to open a second FTP control connection on another serial port, the #FTPOPEN command returns an error message. Close the old FTP control connection, to open the new one. See the example in section 12.3.1.
- 2. The #SD command that uses a Multi-socket. In this case, the user application must manage the FTP protocol.

12.1. 2G/3G Modules

The FTP connection can use only the PDP Context identified by <cid>=1, or the GSM context identified by <cid>=0. The FTP command uses one of the two contexts according to the command previously entered: AT#SGACT=1,1 or AT#SGACT =0,1 respectively. For GSM context (<cid>=0) see section 14.3.4.

Use #FTPOPEN command to open an FTP connection (control connection). The command syntax is:

AT#FTPOPEN=[<server:port>,<username>,<password>[,<mode>]]

Referring to the example shown in the table below:

- FTP Service socket bound to <cid>=1 (mandatory)
- Sockets <connId>= 1, 2, 3 not opened, and bound to active <cid>=1
- Sockets <connId>= 4, 5, 6 not opened, and bound to active <cid>=3



IP Easy Multi- Socket <connld></connld>	<cid>=1 Active</cid>	<cid>=2 No active</cid>	<cid>=3 Active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	bound	/	/	/	/
2	bound	/	/	/	/
3	bound	/	/	/	/
4	/	/	bound	/	/
5	/	/	bound	/	/
6	/	/	bound	/	/
Protocol Service Sockets					
FTP Service Socket	bound				

Table 20: 2G/3G Multi-Socket & FTP Service Socket

Use #FTPCLOSE command to close an FTP control connection. The command syntax is: AT#FTPCLOSE

Refer to example 12.8.1.

To get parameters descriptions see documents [1] or [2] according to the module used.

12.2. 4G Modules

Use #FTPOPEN command to open an FTP connection (control connection). For platform Version ID 30, 37 the command syntax is (refer to document [4]):

AT#FTPOPEN=[[<server:port>,<username>,<password>,<mode>],<cid>]

To get syntax command and parameters descriptions about other platforms see documents [11], [13], [14] or [15] according to the module used.

For platform ID 20 use #PROTOCOLCFG command to change the <cid> identifier bound to FTP protocol, refer to section 9.2.

Use #FTPCLOSE command to close an FTP connection (control connection). The command syntax is:

AT#FTPCLOSE

Refer to example 12.8.1.

See documents [4], [11], [13], [14] or [15] according to the module used.





12.3. Examples

12.3.1. Open Six Sockets and the FTP Connection

This example shows the opening of six sockets (Multi-socket) in COMMAND mode, plus the FTP connection. It is assumed to use only one serial port; a terminal emulator is connected to the module.

Enable reports in verbose format.

AT+CMEE=2

0K

Check the socket configuration (default).

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Check PDP contexts.

AT+CGDCONT?

0K

← no PDP context are defined.

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name"

0K

Define PDP context <cid>=2.

AT+CGDCONT=2,"IP", "Access_Point_Name"

0K

Check PDP contexts.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","0.0.0.0",0,0 +CGDCONT: 2,"IP","Access_Point_Name","0.0.0.0",0,0 OK

To activate successfully a PDP context, it must be previously bound to a socket using the #SCFG command.

Activate PDP context <cid>=1. The command returns the IP address assigned by the network to the module.



AT#SGACT=1,1

#SGACT: 37.176.124.199

0K

Activate PDP context <cid>=2 AT#SGACT=2,1 #SGACT: 31.157.11.11

Open the six sockets connection in COMMAND mode on the echo port. AT#SD=1,0,remote_host_port," remote_IP_address ",0,0,1 OK

AT#SD=2,0,remote_host_port," remote_IP_address ",0,0,1 OK

AT#SD=3,0,remote_host_port," remote_IP_address ",0,0,1 OK

AT#SD=4,0,remote_host_port," remote_IP_address ",0,0,1 OK

AT#SD=5,0,remote_host_port," remote_IP_address ",0,0,1 OK

AT#SD=6,0,remote_host_port," remote_IP_address ",0,0,1 OK

Before using the #FTPOPEN command, the PDP context identified by <cid>=1, mandatorily assigned to the FTP Application, must be defined. Then <cid>=1 must be bound to a Multi-socket and activated through the #SGACT command to create the related Network Interface. The #FTPOPEN command uses a Protocol Service Socket, but the #SGACT command requires the PDP context-bound to a Multi-socket.

Open an FTP connection (control port) toward the FTP server. The FTP server port is not specified; therefore, the command uses the default value 21. The FTP connection is in active mode (default).

AT#FTPOPEN="server","username","password"

OK ← FTP connection open, and in active mode.

Check the state of the six sockets (Multi-socket environment)

#SS: 1,2,37.176.124.199,64916,remote_IP_address, remote_host_port



#SS: 2,2,37.176.124.199,64917,remote_IP_address, remote_host_port #SS: 3,2,37.176.124.199,64918,remote_IP_address, remote_host_port #SS: 4,2,31.157.11.11,64919,remote_IP_address, remote_host_port #SS: 5,2,31.157.11.11,64920,remote_IP_address, remote_host_port #SS: 6,2,31.157.11.11,64921,remote_IP_address, remote_host_port OK

Try to open again the FTP connection just to verify that it is already open.

AT#FTPOPEN="server","username","password"

+CME ERROR: Already connected

The below table shows the current connections configuration.

IP Easy Multi- Socket <connld></connld>	<cid>=1 Active</cid>	<cid>=2 Active</cid>	<cid>=3 No active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	open	/	1	1	1
2	open	/	/	/	/
3	open	/	/	/	/
4	/	open	/	/	/
5	/	open	1	1	1
6	/	open	/	/	/
Protocol Service Sockets					
FTP Service Socket	open				

Table 21: 2G/3G Multi-Socket & FTP Service Socket Opened

12.4. FTP Time Out Setting, #FTPTO Command

Use the #FTPTO command to set the timeout used when opening either the FTP control connection or the FTP data connection, it is not saved in NVM. If <tout> parameter is omitted, the command returns the current FTP time-out. The command syntax is:

AT#FTPTO [=<tout>]

To get parameter description see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

Refer to example 12.8.1.



12.5. FTP Transfer Type Setting, #FTPTYPE Command

Use the #FTPTYPE command to configure the file transfer type (binary or ASCII). The command must be used after the FTP control connection has been opened. If the <type> parameter is omitted, the command returns the current file transfer type. The command syntax is:

AT#FTPTYPE=[<type>]

Refer to example 12.8.1.

12.6.

To get parameters descriptions see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

Assume that the FTP connection is open (control connection). The #FTPPUT command opens the data connection. The command syntax is:

FTP Uploading, #FTPPUT, #FTPAPPEXT Command

AT#FTPPUT =[[<filename>][,<connMode>]]

Refer to examples 12.8.1 and 12.8.2.

Use the #FTPAPPEXT command to upload data into the file stored on the FTP server. The command syntax is:

AT#FTPAPPEXT=<bytestosend>[,<eof>]

Refer to example 12.8.2.

To get parameters descriptions see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

12.7. #FTPSIZE, #FTPAPP Commands

Use the #FTPFSIZE command to know how many bytes have been received by the FTP server if the file uploading has been interrupted during the #FTPPUT command. Enter the command during the FTP control connection. Before typing in the #FTPSIZE command, it is mandatory to issue the #FTPTYPE=0 command to set the binary transfer type. The command syntax is:

AT#FTPFSIZE=<filename>

Use the #FTPAPP command to append the missing part of the file. Use the #FTPFSIZE response to know the restart position of the local file.

AT#FTPAPP =[[<filename>,]connMode>]



To get parameters descriptions see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

12.8. Examples

12.8.1. Data Uploading in ONLINE Mode

This example shows how to upload a file to an FTP server when the module is in ONLINE mode. A terminal emulator is connected to the module.

Enable reports in verbose format.

AT+CMEE=2

0K

Check the socket configuration (default).

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Check the PDP contexts.

AT+CGDCONT?

OK ← no PDP context

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name" OK

Check the PDP contexts.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","0.0.0.0",0,0 OK

To activate successfully a PDP context, it must be previously bound to a socket using the #SCFG command.

Activate PDP context <cid>=1. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 193.199.234.255

0K





Set the FTP time-out.

AT#FTPT0=1000

OK

Before using #FTPOPEN command, the PDP context identified by <cid>=1, mandatorily assigned to the FTP Application, must be defined. Then <cid>=1 must be bound to a Multisocket and activated through #SGACT command to create the related Network Interface. The #FTPOPEN command uses a Protocol Service Socket, but #SGACT command requires the PDP context-bound to a Multi-socket.

Open an FTP connection toward the FTP server. The FTP server port is not specified; therefore, the command uses the default value 21. The FTP connection is in active mode (default).

AT#FTPOPEN="server","username","password"

Set the file type (ASCII).

AT#FTPTYPE=1

0K

The following #FTPPUT command configuration opens the data connection, and the module enters ONLINE mode. filename.txt is the file name where the data will be stored on the FTP server. If the file you are sending is a text file, the extension must be .txt.

AT#FTPPUT="filename.txt",0

CONNECT ← data connection is open.

 \cdots type in the data to write in the filename.txt file stored on the FTP server \cdots

+++ ← close the FTP data connection.

NOCARRIER

Close FTP control connection.

AT#FTPCLOSE

OK

FTP control connection is closed.

Deactivate the PDP context.

AT#SGACT=1,0

0K



2.8.2. Data Uploading in COMMAND Mode

This example shows how to upload data toward an FTP server when the module is in COMMAND mode. A terminal emulator is connected to the module.

Before using #FTPOPEN command, the PDP context identified by <cid>=1, mandatorily assigned to the FTP Application, must be defined. Then <cid>=1 must be bound to a Multisocket and activated through #SGACT command to create the related Network Interface. The #FTPOPEN command uses a Protocol Service Socket, but #SGACT command requires the PDP context bound to a Multi-socket.

Open the FTP connection toward the FTP server. The FTP server port is not specified; therefore, the command uses the default value 21. The FTP connection is in passive mode.

AT#FTPOPEN="server", "username", "password", 1

OK FTP control connection open in passive mode.

The #FTPPUT command opens the data connection, and the module remains in COMMAND mode. filename.txt is the file name where the data will be stored on the FTP server.

AT#FTPPUT="filename.txt",1

AT#FTPAPPEXT=bytestosend

>··· type in data··· #FTPAPPEXT: <SentBytes> OK

Use again the #FTPAPPEXT=bytestosend command to send a new data chunk. To send the last data chunk and close the FTP connection, use the following: AT#FTPAPPEXT=bytestosend,1

If a new file must be sent, repeat the sequence. If the file must be appended, use the AT#FTPAPP command (with <connMode> = 1).





Note: If while sending the chunks, the data connection is closed from the remote side, the user will be notified of it because the #FTPAPPEXT command will return an error message, and the related cause (if +CMEE=2 is set). Data connection must be reopened with the #FTPPUT command.

12.9. FTP Downloading

12.9.1. Downloading in ONLINE Mode

Assume that the FTP connection is open (control connection). Use the #FTPGET command to open a data connection and download a file from the FTP server. If the data connection succeeds, the command returns the CONNECT indication followed by the content of the file, at the end NO CARRIER indication is displayed. If no FTP control connection has been previously opened, the command returns an error message. Refer to example 12.11.1. The command syntax is:

AT#FTPGET =[<filename>]

To get parameters descriptions see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

12.9.2. Downloading in COMMAND Mode

Assume that the FTP connection is open (control connection). Use the #FTPGETPKT command to open a data connection and download a file from the FTP server. If the data connection succeeds, the command stores the received data on the socket and returns the OK message. The module remains in COMMAND mode. If no FTP control connection has been previously opened, the command returns an error message. Refer to example 12.11.2. The command syntax is:

AT#FTPGETPKT=<filename>[,<viewMode>]

To get parameters descriptions see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.

After issuing the #FTPGETPKT command, you can type in AT commands as usual in COMMAND mode, except for FTP commands that open data connection like #FTPLIST, because the data connection has been already opened by #FTPGETPKT itself.



When the data connection is open, use the #FTPRECV? read command to check how many buffered bytes are currently available.

With the #FTPRECV=<blocksize> command, you can transfer at most <blocksize> bytes onto the serial port. This number is limited to the current number of bytes of the remote file which have been transferred from the FTP server.

12.10. FTP Downloading Restart

To start an FTP downloading from a specific position (byte) of the file, use the #FTPREST command before typing in the #FTPGET or #FTPGETPKT command. The command syntax is:

AT#FTPREST=<restartposition>

To get parameters descriptions see documents [1], [2], [4], [11], [13], [14] or [15] according to the module used.



Note: It is mandatory to issue #FTPTYPE=0 command to set binary transfer type before entering #FTPGET or #FTPGETPKT command.

12.11. Examples

12.11.1. File Downloading in ONLINE Mode

Enable reports in verbose format.

AT+CMEE=2

0K

Assume that the PDP context <cid>=1 has been bound to a socket using the #SCFG command. Now, define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name" OK

Activate the PDP Context. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 193.199.234.255

0K

Set the FTP time-out.





AT#FTPT0=1000 OK

Before using #FTPOPEN command, the PDP context identified by <cid>=1, mandatorily assigned to the FTP Application, must be defined. Then <cid>=1 must be bound to a Multisocket and activated through #SGACT command to create the related Network Interface. The #FTPOPEN command uses a Protocol Service Socket, but #SGACT command requires the PDP context bound to a Multi-socket.

Open an FTP connection toward the FTP server. The FTP server port is not specified; therefore, the command uses the default value 21. The FTP connection is in active mode (default).

AT#FTPOPEN="server","username","password"

Set the file type.

AT#FTPTYPE=0

0K

Check the working directory.

AT#FTPPWD

#FTPPWD: 257 "/"

0K

Use the #FTPLIST command to get the list of files on the working directory of the FTP server.

Use the #FTPGET command to open e data connection and download a file from the FTP server.

AT#FTPGET="filename.txt"

CONNECT ← data connection is open.

··· the content of the file appears on the terminal emulator ···

NO CARRIER ← data connection is closed automatically when the downloading is terminated.

Close FTP control connection.

AT#FTPCLOSE

OK ← FTP control connection is closed.

Deactivate the PDP context.

AT#SGACT=1,0





12.11.2. File Downloading in COMMAND Mode

Assume that the FTP connection is open. Use the #FTPGETPKT command to open a data connection and download a file from the FTP server. Data are buffered on the socket; the module remains in COMMAND mode.

AT#FTPGETPKT="filename.txt"

The following command reports the number of bytes buffered on the socket.

AT#FTPRECV? #FTPRECV: 600

0K

Read the first 400 bytes of the available buffered data.

AT#FTPRECV=400

#FTPRECV: 400

0K

Read 200 bytes – if available – starting from the position + 1 of the last byte read with the previous #FTPRECV command.

AT#FTPRECV =200

#FTPRECV: 200

88888 *

Text row number 10 * AAAAAAAAAAAAAAAAAAAAAAAA *

Text row number 12 * CCCCCCCCCCCCCCC

0K

The #FTPGETPKT? read command reports the download state.

AT#FTPGETPKT?

#FTPGETPKT: filename.txt,0,1





ΟK

The first parameter is the file name, the second indicates text or hex mode. The third parameter indicates <EOF> (End of File): 0 file transfer is in progress; 1 file transfer is ended.

Data connection (data port) is automatically closed by the last AT#FTPGETPKT? read command when the whole file has been read.

A new FTP download in ONLINE or COMMAND mode can be started by issuing respectively #FTPGET or #FTPGETPKT command.

12.11.3. FTP and 4G Modules

As stated before, in 2G/3G modules the FTP Service uses the <cid>=1 (or <cid>=0). In 4G modules, the <cid>=1 is used by the Default EPS Bearer created during the attach procedure. The 4G modules provide the #PROTOCOLCFG command which allows to configure the <cid> used by the FTP Service. This example shows a case in which the APN assigned by the network, during the attach procedure, does not support data traffic, therefore it is required to move the FTP service, for example, on <cid>=2.

Check if the module is registered on a 4G network.

AT+COPS?

+COPS: 1,0,"Network_Operator",7

← 7 = E-UTRAN

0K

Enable ERROR report in verbose format.

AT+CMEE=2

0K

By default, the <cid>=1 context identifier is assigned to a not defined APN

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0

0K

When the network recognizes the attach request with a not defined APN, the network assigns to <cid>=1 an APN supporting some services. The module is 4G attached.

AT+CGATT?

+CGATT: 1 ← the module is 4G attached

0K

After the Attach procedure, the <cid>=1 identifies the Default EPS Bearer assigned by the network, and it is already activated.

AT+CGACT?





```
+CGACT: 1,1
```

AT+CGCONTRDP=?

+CGCONTRDP: (1) ← <cid>=1 is associated to the active context.

0K

List the parameters regarding the Default EPS Bearer assigned by the network and associated to <cid>=1 context identifier.

```
AT+CGCONTRDP=
```

```
+CGCONTRDP:

1,

5,

"APN_Assigned_by_Network",

"10.178.0.31.255.0.0.0",

"10.178.0.32","213.230.129.10",

"0.0.0.0",

"0.0.0.0",
```

Check the <cid> value used for each protocol, default configuration.

AT#PROTOCOLCFG?

#PROTOCOLCFG: "FTP",1,0,0,0 #PROTOCOLCFG: "SMTP",1,0,0,0 #PROTOCOLCFG: "PING",1,0,0,0 #PROTOCOLCFG: "SSL",1,0,0,0 OK

The Default EPS Bearer identified by <cid>=1 is already active, contrary to what is indicated by the #SGACT command below. This means that a Network Interface has not been created.

AT#SGACT?

#SGACT: 1,0

0K

Try to open an FTP connection (control connection). The opening fails because the Network Interface has not been created.

AT#FTPOPEN="server","username","password"

+CME ERROR: Cannot resolve name

The <cid>=1 used by the following #SGACT command is already active. Its activation is the result of the default bearer context activation procedure part of the attach procedure.





The command below returns the IP address shown by the +CGCONTRDP= command and opens only a Network Interface.

AT#SGACT=1,1

#SGACT: 10.178.0.31

0K

Try to open the FTP connection. Now, the opening fails again because the APN assigned by the network on <cid>=1 does not support data traffic, see figure below.

AT#FTPOPEN="server", "username", "password"

+CME ERROR: Cannot connect control socket

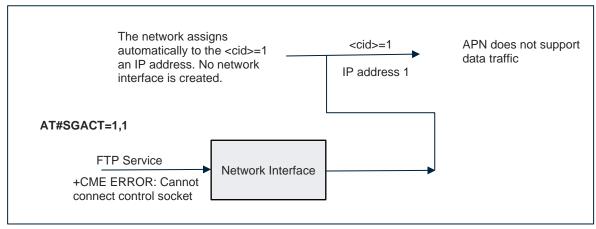


Figure 7: Assigned APN does not Support Data Traffic

It is required to change the <cid> used by the FTP Service and define a PDP context identified by the <cid> associated with the FTP Service.

AT#PROTOCOLCFG="FTP",2
OK

Verify the new configuration.

AT#PROTOCOLCFG?

#PROTOCOLCFG: "FTP",2,0,0,0 #PROTOCOLCFG: "SMTP",1,0,0,0 #PROTOCOLCFG: "PING",1,0,0,0 #PROTOCOLCFG: "SSL",1,0,0,0

Define the PDP context identified by <cid>=2.

AT+CGDCONT=2,"IP"," Access_Point_Name ","0.0.0.0" OK

AT+CGDCONT?

+CGDCONT: 1,"IPV4V6","","",0,0

+CGDCONT: 2,"IP","Access_Point_Name","0.0.0.0",0,0



ΟK

Activate PDP context <cid>=2 and create a Network Interface related to <cid>=2.

AT#SGACT=2.1

#SGACT: 2.192.17.237

0K

Check which contexts are active.

AT#SGACT?

#SGACT: 1,1 #SGACT: 2,1

0K

Open an FTP connection (control connection) toward the FTP server. The FTP server port is not specified; therefore, the command uses the default value 21. The FTP connection is in active mode (default), see Fig. 8.

AT#FTPOPEN="server","username","password"

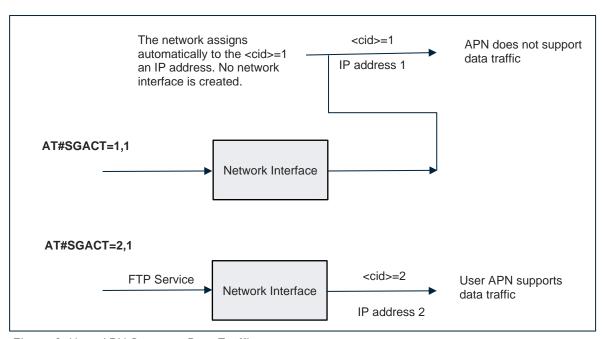


Figure 8: User APN Supports Data Traffic

Use the FTP Service as shown for 2G/3G modules.



13. MQTT PROTOCOL

MQTT is an OASIS standard lightweight, publish-subscribe network protocol for the Internet of Things (IoT).

You can use the #MQEN command that initializes the MQTT client, the #MQCFG command that configures the Broker URL and port, and the #MQCONN command that establishes the socket and connects to the broker to open a connection.

You can initialize and connect up to two MQTT client instances simultaneously.

13.1. MQTT Client Initialization. #MQEN Command

Use the #MQEN command to enable/disable one of the two instances provided by modules, to initialize an MQTT client. The instance are identified by the <instanceNumber> parameter. If the request succeeds, the #MQEN command returns the OK message, otherwise, an error code is reported.

AT#MQEN=<instanceNumber>,<enable>

If you try to initialize an instance which is already enabled, the command returns an error. Give value <enable> = 0 to disable the client, 1 to enable it.

The AT#MQEN=? test command returns the supported range of parameters value. Example: <instanceNumber> range: 1-2, <enable> range: 0-1

AT#MQEN=?

#MQEN: (1-maxClients),(0-1)

0K

The AT#MQEN? read command returns the current state for each instance in the following format:

#MQEN: <instanceNumber>.<enabled>

Example:

AT#MQEN?

#MQEN: 1,1 #MQEN: 2,0

OK



13.2. MQTT Client Configuration Commands

MQTT configurations can be performed after enabling the MQTT client. Before establishing the connection using the #MQCONN command, it is mandatory to provide connection configurations using #MQCFG commands. You can use other config commands if required. Use the following commands to set the configurations:

13.2.1. #MQCFG Command

Use this command to provide the following configurations for the instance identified by the <instanceNumber> parameter:

- a. IP address/URL of the MQTT Broker
- b. Port Number of the MQTT Broker
- c. PDP cid enable by #SGACT at command. The connection will be handled by the PDP cid configured here. PDP should be enabled before giving this command.
- d. SSL (Secured connection) is required or not

The command syntax is:

AT#MQCFG=<instanceNumber>,<hostname>,<port>,<cid>[,<sslEn>]

Refer to example 13.4.1



Note: PDP context should be enabled before giving this command.

Default value of $\langle cid \rangle = 0$.

To get parameters descriptions see documents [14] or [15] according to the module used.

The AT#MQCFG? read command returns the configuration for each instance in the following format:

#MQCFG: <instanceNumber>,<hostname>,<port>,<cid>[,<sslEn>]

Default parameters are:

AT#MQCFG?

#MQCFG: 1,,1883,1,0 #MQCFG: 2,,1883,1.0

0K



13.2.2. #MQCFG2 Command

Use this command to provide following additional configurations for the instance identified by the <instanceNumber> parameter:

- a. Keep-Alive duration in seconds
- b. The clean session is required or not

The command syntax is:

AT#MQCFG2=<instanceNumber>,<keepAlive>,<cleanSession>

Refer to example 13.4.1

To get parameters descriptions see documents [14] or [15] according to the module used.

The AT#MQCFG2? read command returns the configuration for each instance in the following format:

#MQCFG2: <instanceNumber>,<keepAlive>,<cleanSession>

Default parameters are:

AT#MQCFG2?

#MQCFG2: 1,20,1 #MQCFG2: 2,20,1

0K

13.2.3. #MQWCFG Command

Use this command to provide following Last Will and testament related configurations for the instance identified by the <instanceNumber> parameter:

- a. Whether the client needs to specify a Last
- b. If a client needs to specify last will, also specify last will retain, QoS, topic, and message

The command syntax is:

AT#MQWCFG=<instanceNumber>,<willFlag>[,<willRetain>,<willQos>,<willTopic>,<willMsg>]

Refer to example 13.4.1

To get parameters descriptions see documents [14] or [15] according to the module used.





The AT#MQWCFG? read command returns the configuration for each instance in the following format:

#MQWCFG:<instanceNumber>,<willFlag>[,<willRetain>,<willQos>,<willTopic>,<willMsg>]

Default parameters are:

AT#MQWCFG? #MQWCFG: 1,0

#MQWCFG: 2,0

0K

13.2.4. #MQTCFG Command

Use this command to provide packet-timeout in seconds for the instance identified by the <instanceNumber> parameter.

The command syntax is:

AT#MQTCFG=<instanceNumber>,<pktTimeout>

Refer to example 13.4.1

To get parameters descriptions see documents [14] or [15] according to the module used.

The AT#MQTCFG? read command returns the configuration for each instance in the following format:

#MQTCFG: <instanceNumber>,<pktTimeout>

Default parameters are:

AT#MQTWCFG? #MQTCFG: 1,10 #MQTCFG: 2,10

0K

13.3. MQTT Client Connection Commands

13.3.1. #MQCONN Command

Use the #MQCONN command to connect the client to the broker specified in the #MQCFG command. Instance is identified by the <instanceNumber> parameter.

The command syntax is:



AT#MQCONN=<instanceNumber>,<clientID>,<userName>,<passWord>

Refer to example 13.4.1

To get parameters descriptions see documents [14] or [15] according to the module used.

The AT#MQCONN? read command returns the status of each instance in the following format:

#MQCONN=<instanceNumber>,<state>

To get more details on MQTT client states, see documents [14] or [15] according to the module used.

Default parameters are:

AT#MQCONN?

#MQCONN: 1,0 #MQCONN: 2,0

0K

13.3.2. #MQDISC Command

Use the #MQDISC command to disconnect the client from the broker. Instance is identified by the <instanceNumber> parameter.

The command syntax is:

AT#MQDISC=<instanceNumber>

Refer to example 13.4.1

To get parameter descriptions see documents [14] or [15] according to the module used.

13.4. Example

13.4.1. MQTT Client Connection Unsecured

This example shows the establishment of an unsecured MQTT connection.

Enable reports in verbose format.

AT+CMEE=2

ΟK

Check PDP contexts.



AT+CGDCONT?

0K

← no PDP context are defined.

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name"

OK

Check PDP contexts.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","0.0.0.0",0,0

0K

Activate PDP context <cid>=1. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 37.176.124.199

0K

Enable MQTT client.

AT#MQEN=1,1

0K

Check MQTT client state

AT#MQEN?

#MQEN: 1,1 ← Instance 1 is enable.

#MQEN: 2,0

0K

Configure server URL, Port number, and PDP cid initialized before.

AT#MQCFG=1,"mqtt_broker_address",mqtt_broker_port,1

0K

Provide other MQTT configurations if required.

AT#MQCFG2=1,60,1

0K

AT#MQTCFG=1,30

0K

AT#MQWCFG=1,1,1,1,"will_topic","will_message"

0K





Open the MQTT connection. Provide client id, username, and password. If username and password are not required enter empty strings

AT#MQCONN=1,"client_id","",""

0K

Check the MQTT client status.

AT#MQCONN?

#MQCONN: 1,1

← Instance 1 is in connected state.

0K

.. Perform MQTT operations ..

Disconnect the MQTT client

AT#MQDISC=1

0K

Check the MQTT client status

AT#MQCONN?

#MQCONN: 1,0

0K

← Instance 1 is in disconnected state.

Disable MQTT client

AT#MQEN=1,0

0K

Check MQTT client state

AT#MQEN?

#MQEN: 1,0

#MQEN: 2,0

0K

← Instance 1 is disabled.

13.5. MQTT Operations - Publish, Subscribe, and Unsubscribe Commands

MQTT Operations – Publish, Subscribe and Unsubscribe can be performed after connecting the MQTT client.

13.5.1. #MQPUBS Command

IP Easy User Guide



Use this command to publish the MQTT message to the broker connected. If the operation is successful, OK is reported. In the case of QoS greater than 0, it is successful if required acknowledgment is received.

The command syntax is:

AT#MQPUBS=<instanceNumber>,<topic>,<retain>,<qos>,<message>

Refer to example 13.7.1.

To get parameters descriptions see documents [14] or [15] according to the module used.

13.5.2. #MQSUB Command

Use this command to subscribe to a topic. It sends subscribe message to the broker connected and receives the response. If operation is successful, OK is reported. The instance of the client publishing message is identified by the <instanceNumber>parameter.

The command syntax is:

AT#MQSUB=<instanceNumber>,<topic>

Refer to example 13.7.1.

To get parameters descriptions see documents [14] or [15] according to the module used.

13.5.3. #MQUNS Command

Use this command to revoke the subscription of a topic. It sends an unsubscribe message to the broker connected and receives the response. If operation is successful, OK is reported. The instance of the client publishing message is identified by the <instanceNumber> parameter.

The command syntax is:

AT#MQUNS=<instanceNumber>,<topic>

Refer to example 13.7.1.

To get parameter descriptions see documents [14] or [15] according to the module used.





13.6. MQTT Publish Read

13.6.1. #MQRING URC

Whenever the client receives a publish message on a subscribed topic, the user is notified through #MQRING URC on all AT commands interfaces. There are 30 messages slots available for incoming messages, and it is the responsibility of the user to keep them empty by reading them with #MQREAD

Syntax of the URC is:

#MQRING: <instanceNumber>,<mld>,<topic>,<len>

If the queue is full, URC received is;

#MQRING: 0

13.6.2. #MQREAD Command

Use this command to command reads the message payload from the queue slot provided. You have to provide the instance number of the client on which the message is received and the message id of the message to read. Message id (<mld>) was specified in the #MQRING URC.

The command syntax is:

AT#MQREAD=<instanceNumber>,<mld>

Refer to example 2.7.1.

To get parameters descriptions see documents [14] or [15] according to the module used.

The AT#MQREAD? read command returns the number of messages received for each active instance in the following format:

#MQCFG2: <instanceNumber>,<keepAlive>,<cleanSession>

Default parameters are:

AT#MQREAD?

#MQREAD: 1,0 #MQREAD: 2,0





13.7. Example

13.7.1. Publish, Subscribe and Unsubscribe Operations

This example shows:

- 1. Establishing plain MQTT connection,
- 2. Subscribing a topic "test", publishing on the same, and receiving the message on the same.
- 3. Unsubscribing the topic "test"
- 4. Subscribing on another topic "test/light" and receiving messages on the same.
- 5. Subscribing on wildcard topic "test/fan/#" and receiving messages on the same.

Enable reports in verbose format.

AT+CMEE=2

0K

Check PDP contexts.

AT+CGDCONT?

0K

← no PDP context are defined.

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP", "Access_Point_Name" OK

Check PDP contexts.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","0.0.0.0",0,0

0K

Activate PDP context <cid>=1. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 37.176.124.199

0K

Enable MQTT client.

AT#MQEN=1,1

0K

Check MQTT client state

AT#MQEN?



#MQEN: 1,1

#MQEN: 2,0

OK

Configure server URL, Port number, and PDP cid initialized before.

AT#MQCFG=1,"mqtt_broker_address",mqtt_broker_port,1

0K

Provide other MQTT configurations if required.

AT#MQCFG2=1,60,1

0K

AT#MQTCFG=1,30

0K

AT#MQWCFG=1,1,1,1,"will_topic","will_message"

OK

Open the MQTT connection. Provide client id, username and password.

AT#MQCONN=1,"client_id","username","password"

0K

Check the MQTT client status.

AT#MQCONN?

#MQCONN: 1,1

← Instance 1 is in connected state.

← Instance 1 is enabled.

0K

Subscribe to the topic "test"

AT#MQSUB=1,"test"

0K

Publish a message on the topic "test"

AT#MQPUBS=1,"test",0,1,"message"

0K

#MQRING: 1,1,test,7 ← #MQRING URC received for client instance 1, topic "test".

Read the message notified by the URC #MQRING.

AT#MQREAD=1,1



#MQREAD: 1,test,7

<<<

message

0K

Unsubscribe to the topic "test"

AT#MQUNS=1,test

0K

Subscribe to the topic "test/light"

AT#MQSUB=1,"test/light"

0K

#MQRING: 1,1,test/light,3 \leftarrow #MQRING URC received for client instance 1, topic "test/light".

Read the message notified by the URC #MQRING.

AT#MQREAD=1,1

#MQREAD: 1,test/light,3

< < <

0FF

0K

Subscribe to the wildcard topic "test/fan/#"

AT#MQSUB=1," test/fan/#"

0K

#MQRING: 1,1, test/fan/floor1,3 ← #MQRING URC received for client instance 1, topic "test/fan/floor1".

#MQRING: 1,2, test/fan/floor4,2 ← #MQRING URC received for client instance 1, topic "test/fan/floor4".

Read the message notified by the URC #MQRING.

AT#MQREAD=1,1

#MQREAD: 1, test/fan/floor1,3

<<<

OFF





AT#MQREAD=1,2

#MQREAD: 1, test/fan/floor4,2

<<<

ON



14. PING PROTOCOL

Ping protocol is used to measure the round-trip time for messages sent by the module to the remote host that are echoed back to the sender.

14.1. 2G/3G Modules

The PING connection can use only the PDP context identified by <cid>=1, or the GSM context identified by <cid>=0. The PING command uses one of the two contexts according to the command previously entered: AT#SGACT=1,1 or AT#SGACT=0,1 respectively.

Referring to the example shown in the table below:

- PING Service socket bound to <cid>=1 (mandatory)
- Sockets <connId>= 1, 2, 3 not opened, and bound to active <cid>=1
- Sockets <connId>= 4, 5, 6 not opened, and bound to active <cid>=3

IP Easy Multi- Socket <connld></connld>	<cid>=1 Active</cid>	<cid>=2 No active</cid>	<cid>=3 Active</cid>	<cid>=4 No active</cid>	<cid>=5 No active</cid>
1	bound	1	1	1	1
2	bound	/	/	/	1
3	bound	/	/	/	1
4	1	1	bound	1	/
5	1	1	bound	1	/
6	1	1	bound	1	/
Protocol Service Sockets					
PING	bound				

Table 22: 2G/3G Multi-Socket & PING Service Socket

Use the #PING command to send ICMP Echo Request packets to the specified host and wait for an ICMP Echo Reply. The command syntax is:

AT#PING=<IPaddr>[,<retryNum>[,<len>[,<timeout>[,<ttl>]]]]

Echo Replay message format:

#PING: <replyId>,<IP Address>,<replyTime>,<ttl>

Use the #ICMP command to enable ICMP Echo Replay. The command syntax is:

AT#ICMP=<mode>





To get parameters descriptions see documents [1], or [2], according to the module used.

Example

It is not mandatory to use #ICMP before #PING to receive the ICMP Echo Replay.

Check ICMP Ping support.

AT#ICMP?

#ICMP: 0 ← support disabled (default)

0K

Define PDP context <cid>=1.

AT+CGDCONT=1,"IP","Access_Point_Name"

0K

Activate the PDP context <cid>=1. The command returns the IP address assigned by the network to the module.

AT#SGACT=1,1

#SGACT: 10.160.118.113

0K

Before using #PING command, the PDP context identified by <cid>=1, mandatorily assigned to the PING Application, must be defined. Then <cid>=1 must be bound to a Multi-socket and activated through #SGACT command to create the related Network Interface. The #PING command uses a Protocol Service Socket, but #SGACT command requires the PDP context bound to a Multi-socket.

Ping the Primary Google DNS.

AT#PING="8.8.8.8"

#PING: 01,"8.8.8.8",600,255 #PING: 02,"8.8.8.8",5,55 #PING: 03,"8.8.8.8",5,55 #PING: 04,"8.8.8.8",3,55

0K

14.2. 4G Modules

The SMTP uses the #PING command to send ICMP Echo Request packets to the specified host and wait for an ICMP Echo Reply. The command syntax is:

AT#PING=<IPaddr>[,<retryNum>[,<len>[,<timeout>[,<ttl>]]]]

Echo Replay message format:



#PING: <replyId>,<IP Address>,<replyTime>,<ttl>

Use the #ICMP command to enable ICMP Echo Replay. The command syntax is:

AT#ICMP=<mode>

To get parameters descriptions see documents [4], [11], [13], [14] or [15] according to the module used.

Platforms ID 20 and 25 provide the #PROTOCOLCFG command to configure which <cid> the PING Application can use, in accordance with the ISP requirements. In addition, the <cid> range can vary according to the 4G product you are using. Refer to section 9.2.1 (#PROTOCOLCFG) to change the <cid> identifier bound to PING Application.

To get parameters descriptions see documents [4] or [13] according to the module used.

For platform Version ID 30, 37

AT#PING=<IPaddr>[,<retryNum>[,<len>[,<timeout>[,<ttl>[,<pdpId>]]]]]

To get parameter descriptions, refer to documents [14] or [15] according to the module used.



15. EASY GSM: IP OVER CSD

In the Easy GSM configuration, the user device, connected by a serial line to the Telit module, exchanges data, over a GSM CSD call, with a remote device on the internet network, refer to below figure.

Telit module establishes a GSM CSD call, and exchanges TCP/IP packets, encapsulated in the PPP protocol, with the remote device. The data are sent as if it were a voice signal, the CSD call occupies the radio channels during the entire duration of the connection, regardless of whether data are transmitted or not. The user device does not need an own TCP/IP stack.

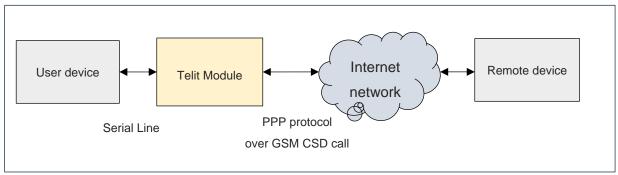


Figure 9: GSM CSD Call

GSM CSD call supports #SD command (IP Easy Environment), HTTP, SMTP, FTP, and PING connections. To establish a GSM CSD call, the GSM context identified by cid>= 0 must be defined and activated.

This section describes the AT commands to configure and activate the GSM context used to establish a GSM CSD call. For information on outgoing and incoming connections, refer respectively to chapter 6, and chapter 7. There are no differences at the socket level.

Here are the AT commands to define, bind, and activate the GSM context type.

- AT#GSMCONT to configure the GSM context identified by <cid> = 0
- AT#SCFG to bind the GSM context to a socket belonging to the Multi-socket environment
- AT#SGACT to activate the GSM Context

15.1. GSM Context Setting

In the GSM context is configured by the #GSMCONT command, its syntax is:

AT#GSMCONT=<cid>[,<P_type>, <CSD_num>]

To get parameters descriptions see documents [1] or [2], according to the module used.





Warning: 4G modules (ID 20, 23, 25, 30, 37) do not support AT#GSMCONT command.

15.2. GSM Context Activation

GSM context type is activated through the #SGACT command using <cid> = 0. The activation may require the authentication parameters (Username and Password), depending on the Internet Service Provider. The command syntax is the same used for the PDP context type.

AT#SGACT= 0,<stat>[,<userID>,<pwd>]

Note:

1. When the GSM context is active, PDP contexts are not allowed because Telit modules work in Class B. Therefore, if a GSM CSD call is on, no GPRS operation is allowed, see example in section 14.3.1.



- 2. GSM context activation is affected by the +CBST command, like all CSD calls. The maximum data rate that can be set through the +CBST command is 14400 bps (network dependent). Context activation is just allowed in "NON-TRANSPARENT" mode by default.
- 3. The +COPS=? and #CSURV commands return an error message if a data call is active. Therefore, they return an error message also if a GSM context is active; see example 14.3.2.

15.3. Examples

15.3.1. GSM/PDP Contexts & FTP Protocol

This example shows that when the GSM context (<cid>=0) is activated, it is not allowed to use PDP contexts. To show this, the example tries to open two socket connections, and an FTP connection.

Enable error report in verbose format.

AT+CMEE=2



Check the sockets/PDP contexts binding configuration (default).

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Assume that the PDP contexts have been set as shown below.

AT+CGDCONT?

+CGDCONT: 3,"IP","Access_Point_Name","0.0.0.0",0,0 +CGDCONT: 4,"IP","Access_Point_Name","0.0.0.0",0,0 OK

Activate PDP context <cid>=3. The command returns an error message because the PDP context is not bound to any sockets. The binding is mandatory.

AT#SGACT=3,1

+CME ERROR: operation not supported

Before activating PDP contexts <cid>=3 and <cid>=4, bind them respectively to the socket <connId>=1 and <connId>=5.

AT#SCFG = 1, 3, 300, 90, 600, 50 OK

AT#SCFG = 5, 4, 300, 90, 600, 50 OK

Check the new sockets/PDP contexts binding configuration.

AT#SCFG?

#SCFG: 1,3,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,4,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Define GSM context <cid>=0.

AT#GSMCONT=0,"IP","ISP_phone_number"

OK





Check GSM context.

AT#GSMCONT?

#GSMCONT: 0,"IP","ISP_phone_number"

0K

Activate GSM context <cid>=0. The command returns an error message because the GSM context is not bound to any sockets. The binding is mandatory.

AT#SGACT=0,1

+CME ERROR: operation not supported

Before activating GSM context <cid>=0 bind it to the socket 3.

AT#SCFG = 3, 0, 300, 90, 600, 50

0K

Check the new sockets/contexts binding configuration.

AT#SCFG?

#SCFG: 1,3,300,90,600,50

#SCFG: 2,1,300,90,600,50

#SCFG: 3,0,300,90,600,50

#SCFG: 4,2,300,90,600,50

#SCFG: 5,4,300,90,600,50

#SCFG: 6,2,300,90,600,50

OK

If PDP contexts are activated before the activation of the GSM context, no error message is returned by the #SGACT.

AT#SGACT = 3.1

← activate the PDP context 3

#SGACT: 109.112.140.34

0K

AT#SGACT = 4.1

← activate the PDP context 4

#SGACT: 37.159.24.75

0K

AT#SGACT = 0,1

← activate the GSM context 0

#SGACT: 10.141.94.204

0K

Check which contexts are active.

AT#SGACT?

#SGACT: 0,1

#SGACT: 3,1

#SGACT: 4,1





Make sure that the server is in listening mode and try to open the socket connection <connld>=1 toward it, the command returns an error message.

AT#SD=1,0,1024,"server_address"

+CME ERROR: timeout in opening socket

Try to open the socket connection <connld>=5, the command returns an error message.

AT#SD=5,0,1024,"server_address"

+CME ERROR: timeout in the opening socket

Try to open an FTP control connection toward an FTP server. The #FTOPEN command uses the GSM context; refer to chapter 15. The connection works.

AT#FTPOPEN="server","username","password"

To open successfully a socket connection (in this example <connId>=1, or <connId>=5) you must close the FTP connection and deactivate the GSM context. Close the FTP connection.

AT#FTPCLOSE

0K

Deactivate the GSM context.

AT#SGACT=0.0

0K

AT#SGACT?

#SGACT: 0,0

#SGACT: 3,1

#SGACT: 4,1

0K

For example, open the socket connection 5.

AT#SD=5,0,1024,"server_address"

CONNECT ← the socket connection works.

15.3.2. GSM Context & +COPS=? Command

Enable error report in verbose format.

AT+CMEE=2

0K

Check the current sockets/PDP contexts binding configuration (default).

AT#SCFG?

#SCFG: 1,1,300,90,600,50





#SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Before activating the GSM context (<cid>=0) bind it to the socket 3. AT#SCFG = 3, 0, 300, 90, 600, 50

0K

Check the new sockets/PDP contexts binding configuration.

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,0,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Define GSM context.

AT#GSMCONT=0,"IP","ISP_phone_number"

0K

Check GSM context.

AT#GSMCONT?

#GSMCONT: 0,"IP","ISP_phone_number"

0K

AT+COPS=? test command returns information about the operators present on the network.

AT+COPS=?

+COPS:

0K

Now, activate the GSM context.

AT#SGACT = 0,1

#SGACT: 10.141.94.204

0K

Type in again AT+COPS=? test command. In this case, it returns an error message.

AT+COPS=?

+CME ERROR: no network service

80000ST10028A Rev. 27 Page **159** of **198** 2022-05-11



15.3.3. HTTP Client with #SD

This example describes how to establish a CSD call, create an HTTP connection toward an HTTP server, and retrieve an HTML page using a socket dial connection (#SD). The socket connection is running over the CSD call. A terminal emulator is connected to the module. See also the example 10.4.4, just for comparison.

Define GSM context.

AT#GSMCONT = 0,"IP","ISP_phone_number"
OK

Before activating the GSM context (<cid>=0) bind it to the socket 6.

AT#SCFG = 6, 0, 300, 90, 600, 50

Check the sockets/contexts binding configuration.

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,0,300,90,600,50 OK

Activate the GSM context, and assume that no UserID and Password are needed. The command returns the IP address assigned by the network.

AT#SGACT=0,1

#SGACT: 10.137.93.60

0K

Open the connection toward the HTTP server on port=80. Transport protocol is TCP.

AT#SD=6,0,80,"HTTP_server_address",0,0

CONNECT ← the connection is open. The module is in ONLINE mode.

Now, following the HTTP protocol, ask the homepage by sending the next lines to the module. The entered data are sent directly to the HTTP server. The strings sent to the HTTP server must be ended by line feed character. To see the issued commands, enable the local echo on the terminal emulator.

GET / HTTP/1.1<cr><lf>

Host: www.xxxx.com<cr><lf>Connection: keep-alive<cr><lf>

<cr><lf>

IP Easy User Guide



The HTTP server replies with the HTML code of the homepage and some debugging responses.

HTTP/1.1 200 OK

Date: Thu, 06 2003 10:21:58 GMT Server: Apache/1.3.27 (Unix)

Last-Modified: Thu, 06 2003 10:21:58 GMT

Content-Type: text/html

Connection: close

<!DOCTYPE HTML PUBLIC "-//W3C//DTD HTML 3.2 FINAL//EN">

<HTMI>

··· here is all the HTML code of the page ···

</HTML>

+++ ← type in the escape sequence to suspend the connection.

AT#SH=6

15.3.4. FTP File Uploading

This example describes how to establish a CSD call, create a FTP connection toward a FTP server, and upload a file. The FTP connection is running over the CSD call. A terminal emulator is connected to the module.

Check the socket configuration (default).

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50 OK

Check that no PDP contexts are defined.

AT+CGDCONT?

0K

Bind socket <connId>=4 to GSM context.



AT#SCFG = 4,0,300, 90, 600, 50

Check the new configuration

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,0,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50

0K

Define the GSM context.

AT#GSMCONT=0,"IP", "ISP_phone_number"

0K

AT#GSMCONT?

#GSMCONT: 0,"IP"," ISP_phone_number"

0K

Activate the GSM context. The command returns the IP address assigned by the network to the module.

AT#SGACT=0,1

#SGACT: 10.137.93.60

0K

Set FTP time out

AT#FTPTO=1000

0K

Open an FTP control connection toward the FTP server in active mode. The FTP server port is not specified; therefore, the command uses the default value 21.

AT#FTPOPEN="server","username","password"

OK ← FTP control connection is open.

AT#FTPTYPE=1 ← set ASCII file type.

0K

The following command opens the data connection, and the module enters ONLINE mode. filename.txt is the file name where the data will be stored on the FTP server.

AT#FTPPUT="filename.txt"

CONNECT \leftarrow the data connection is open.





··· type in the data to write in the filename.txt file stored on the FTP server ···

AT#FTPCLOSE

0K

← close FTP control connection.

AT#SGACT=0,0

← deactivate GSM context

0K

15.3.5. E-mail with no Attachment

This example describes how to establish a CSD call, create a SMTP connection, and send an e-mail.

Before activating GSM context (<cid>=0), for example, bind it to the socket 6.

AT#SCFG = 6, 0, 300, 90, 600 Check, 50

0K

the sockets/contexts binding configuration.

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,0,300,90,600,50

0K

Define GSM context.

AT#GSMCONT = 0,"IP","ISP_phone_number"

0K

Activate the GSM context, and assume that no UserID and Password are needed. The command returns the IP address assigned by the network.

AT#SGACT=0,1

#SGACT: 10.137.93.60

0K

Set the SMTP connection parameters.

AT#SMTPCFG=1,587,1



AT#ESMTP="SMTP_server_address"

 configure the SMTP server address of the sender.

0K

AT#EADDR="sender_address"

← configure e-mail address of the sender.

0K

AT#EUSER="sender_user_name"

← configure username of the sender.

0K

AT#EPASSW="sender_user_password"

 \leftarrow configure user password of the sender.

0K

Send the e-mail with no attachment to the recipient having recipient_address.

AT#EMAILD="recipient_address","mail with no attachment"

> Hello<Ctrl-Z>

0K

← text of the e-mail has been sent successfully.

15.3.6. Modules in Server and Client Configuration

This example describes a remote connection between two modules. The first one is configured as a server that opens a socket connection in listen mode. The second one is configured as a client, it establishes a CSD call and opens a connection using the #SD command - over the CSD call - toward the server. Each module is connected to a terminal emulator. See also the example described in section 7.5.1, just for comparison.

Server Side

Check the sockets/PDP contexts binding configuration (default).

AT#SCFG?

#SCFG: 1,1,300,90,600,50

#SCFG: 2,1,300,90,600,50

#SCFG: 3,1,300,90,600,50

#SCFG: 4,2,300,90,600,50

#SCFG: 5,2,300,90,600,50

#SCFG: 6,2,300,90,600,50

0K

Only PDP context <cid>=1 has been set, and all other contexts have been removed.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Nam ","0.0.0.0",0,0





Activate the PDP context <cid>=1, and no UserID and Password are needed. The command returns the IP address assigned by the network. The client, to open the connection, will use this IP address. See client-side section.

AT#SGACT=1,1

#SGACT: 2.192.8.30

0K

Define an ACCEPT firewall chain to accept the IP address of the client. See client side. AT#FRWL=1," 10.141.94.204","0.0.0.0"

0K

Open <connId>=2 socket in listening mode on <port>=1024. The client will use this port. AT#SL=2,1,1024

0K

When the client opens the connection, the server displays on the terminal emulator an SRING unsolicited indication with <connId>=2.

SRING: 2

Enter the following command to accept the connection 2.

AT#SA=2

CONNECT

··· exchange data···

NO CARRIER

← on the client-side has been entered #SH command, the connection is closed.

Client Side

Check the sockets/PDP contexts binding configuration (default configuration)

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,2,300,90,600,50

0K

Before activating GSM context (<cid>=0) bind it to the socket 6.

AT#SCFG = 6, 0, 300, 90, 600, 50





Check the new configuration

AT#SCFG?

#SCFG: 1,1,300,90,600,50 #SCFG: 2,1,300,90,600,50 #SCFG: 3,1,300,90,600,50 #SCFG: 4,2,300,90,600,50 #SCFG: 5,2,300,90,600,50 #SCFG: 6,0,300,90,600,50

0K

Define GSM Context (<cid>=0)
AT+CGDCONT=0,"IP","ISP_phone_number"
OK

Check GSM context.

AT#GSMCONT?

#GSMCONT: 0,"IP","ISP_phone_number"

0K

Activate the GSM Context, no UserID and Password are needed. The command returns the IP address assigned by the network to the module. The server will use this IP address to set its firewall. See server-side.

AT#SGACT=0.1

#SGACT: 10.141.94.204

0K

Open the connection toward the server using its IP address and port 1024, see sever side.

AT#SD=6,0,1024,"2.192.8.30"

CONNECT ← the module is in ONLINE mode.

··· exchange data···

+++ ← suspend the connection.

AT#SH=6 ← close the connection. On the server-side is displayed the NO CARRIER message.

0K

Use #CGPADDR= command to verify the IP address assigned by the network to the modules after the GSM/PDP contexts activations.



16. DIALUP CONNECTION

The ATD*99***<cid># command establishes a PSD connection between the module and an external PDN over the radio interface. This type of connection is initiated by using a character string instead of an ISP phone number, see chapter 14 for comparison only. After entering the dialup command, the data exchange between the user device and the module uses the PPP protocol that provides connection, authentication, transmission encryption, and compression, refer to Fig. 10.

Dial-up connections and Multi-socket connections can be active at the same time but using different PDP context identifiers. In this configuration, the performances get worse. Usually, the dial-up connection is used to make Web browsing.

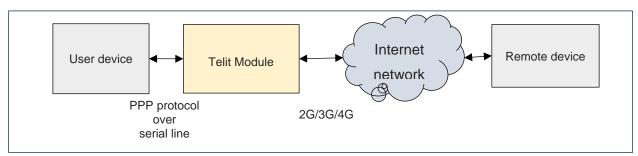


Figure 10: GPRS Dialup Connection

The command syntax is:

ATD*99***<cid>#

Where:

99 GPRS Service Code

<cid> identifies the PDP context. To know the <cid> range see +CGDCONT

command.

16.1. Examples

16.1.1. Start PPP Protocol

Assume that the PDP context <cid>=3 and the QoS have been configured. Establish a dial up connection using <cid>=3.

ATD*99***3#

CONNECT ← the module is in ONLINE mode.

At this point, the user application must start the PPP protocol, which triggers the PDP context activation.

→ LCP Configure Request

← LCP Configure Acknowledge





- → PAP Authentication
- ← PAP-Ack
- → NCP (IP) Configure Request
- ← NCP (IP) Configure Acknowledge

····· start data packets exchange ·····

Assume that the data packet exchange is ended. The user application must send the Terminate Request message.

- → LCP Terminate Request
- ← LCP Terminate Acknowledge

Wait for NO CARRIER response. In the alternative, send escape sequence.

+++ ← Use the +++ escape sequence to suspend the data connection. The module exits the ONLINE mode and enters the COMMAND mode. See the ATS12 command to set timing relevant to the escape sequence

OK ← the module is in COMMAND mode.

Close the data call.

ATH

0K

Note:

Refer to:



- RFC1661 to get LCP protocol and PPP protocol information.
- RFC1334 to get PAP protocol information.
- RFC1332 to get IPCP protocol information.

TCP/IP and PPP protocols description is beyond the scope of this document.

16.1.2. Dial-up Using <cid>=1 by default (2G)

This example shows ATD* command using <cid>=1 by default. The module is connected to a 2G network.

Check the current network operator.





AT+COPS?

+COPS: 0,0,"network operator"

0K

Check the current cellular network.

AT+WS46?

+WS46: 12 ← 12 = GSM

0K

Check the current GPRS service attachment state.

AT+CGATT?

+CGATT: 1

0K

Define PDP context identified by <cid>=1.

AT+CGDCONT=1,"IP","Access_Point_Name"

0K

Type in the dial-up command. The command uses the <cid>=1 by default.

ATD*99#

CONNECT ← the module is in ONLINE mode.

At this point, the user application must start the PPP protocol, which triggers the PDP context activation.

16.1.3. Dial-up Using <cid>=1 by default (3G)

This example shows the dialup command using <cid>=1 by default. The module is connected to a 3G network.

Check the current network operator.

AT+COPS?

+COPS: 1,0,"network operator",2 ← 2 = UTRAN

0K

Check the current cellular network.

AT+WS46?

+WS46: 25 ← GERAN and UTRAN

0K

Check the current GPRS service attachment state.

AT+CGATT?

+CGATT: 1





Define PDP context identified by <cid>=1.

AT+CGDCONT=1,"IP","Access_Point_Name"

OK

Type in the dial-up command. The command uses the <cid>=1 by default.

ATD*99#

CONNECT ← the module is in ONLINE mode.

At this point, the user application must start the PPP protocol, which triggers the PDP context activation.

16.1.4. 4G Module

16.1.4.1. Dial-up & #DUALAPN Command (Platform Version ID 20)

At power on, the PDP context identified by <cid>=1 uses "IP" and "Access_Point_Name", as returned by the AT+CGDCONT? read command shown below. For example, use the COM1 serial port to type in the command.

AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0

Check if the module is registered on a 4G network.

AT+COPS?

+COPS: 0,0,"Network_Operator",7 \leftarrow 7 = E-UTRAN

0K

Check if the Default EPS Bearer is active

AT+CGCONTRDP=? +CGCONTRDP: (1) OK

Check the #DUALAPN mode.

AT#DUALAPN?

#DUALAPN: 0,0,0,0 $\leftarrow 0$ mode, default.

0K

If you assign to <cid>=2 the same APN and PDP type already in use with <cid>=1, the <cid>=2 is routed to the <cid>=1, according to AT#DUALAPN=0 mode (default), refer to section 5.8. Therefore, the IP address of both <cid> will be the same, see the following AT commands sequence.

AT+CGDCONT=2,"IP","Access_Point_Name" OK



AT+CGDCONT?

+CGDCONT: 1,"IP","Access_Point_Name","",0,0

+CGDCONT: 2,"IP","Access_Point_Name","",0,0

0K

Only the first PDP context is active.

AT+CGPADDR=

+CGPADDR: 1,"2.192.16.194"

+CGPADDR: 2,""

0K

Now, for example, type in AT#PORTCFG=3 command, and reboot the module. To have information on the #PORTCFG command refer to documents [4] or [10].

After rebooting, use the COM2 port to start a dial-up connection using the AT2 instance.

The following dial-up command establishes a Default EPS Bearer and uses the <cid>=2, see the figure below.

ATD*99***2#

CONNECT ← Module is in ONLINE mode.

Now, your application can start the PPP protocol on the COM2 port, refer to section 16.1.1.

Use the COM1 port to enter the next command to verify that <cid> 1 and 2 have the same IP address. If the PPP activation is successful, the two context identifiers have the same IP address, as stated before.

AT+CGPADDR=

+CGPADDR: 1,"2.192.16.194" +CGPADDR: 2,"2.192.16.194"

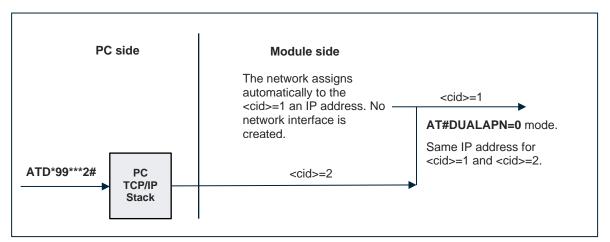


Figure 11: Dialup Connection using <cid>=2



16.1.4.2. Dial-up & #DUALAPN Command (Platform Version ID 20)

First, remember that:

- PPP is provided on Serial and USB ports. On the USB port, PPP is supported only in router mode (AT#NWMODE=0,x,y. See section 16.7).
- AT#SGACT and Dial-up cannot run on the same <cid> (as stated in section 5.3).

Dial-up can be established using one of the following commands:

ATD*99# default cid (cid 3 for LE866-SV1 and ME866A1-NV1, see section

5.2.2.1, or else cid 1, see section 5.2.2.2)


ATD*99**1# default cid (cid 3 for LE866-SV1 and ME866A1-NV1, see section

5.2.2.1, or else cid 1, see section 5.2.2.2)

ATD*99**1*<cid># ATD*99***<cid>#

Assume to use a Windows host: dial-up connection uses Standard 33600 Modem, see the figure below.

- Control Panel → Phone and Modem → Add Standard 33600 bps Modem selecting the AT interface to be used for Dial-up
- Control Panel → Network and Sharing Center. Set up a new connection →
 Connect to Internet → Dial-up.

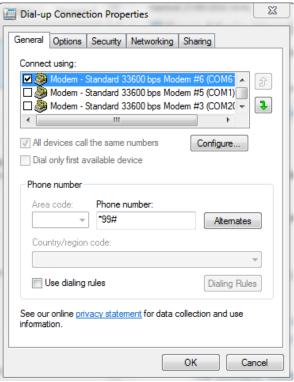



The IPv4 addresses, on the host side, is managed as described below. For the IPv6 addresses, the host uses the global address provided by the network operator.





The PPP background process running on the module establishes a local network between the module and the host.

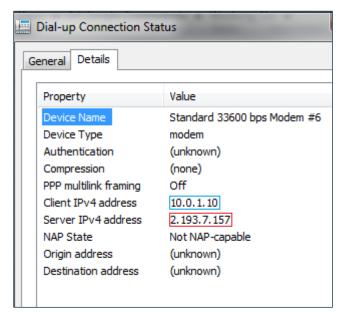

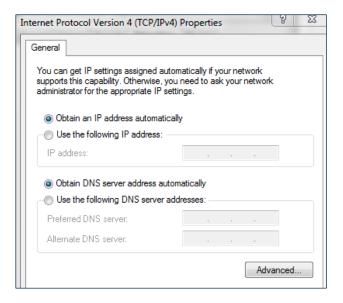

Server IP address is the address, assigned to the module by the network operator, see AT#GPPPCFG command, document [11].

If the host application does not include the host IP address (Client address) in Configuration **IPCP** Request message, by default it is 10.0.1.10,

If the host application does not include the DNS operator server address in the IPCP Configuration Request message, it is automatically assigned to the host.



PPP Authentication

The modules support PAP and CHAP authentication.

- PPP authentication type is set through AT#GAUTH.
- PPP username and password should be saved in NVM by AT#GAUTHCFG.
- If PAP or CHAP is used, authentication is successfully managed if the host application uses the same credentials (username and password) saved in the module and these are accepted by the operator during the PDP context activation automatically performed during dial-up.



16.1.4.3. Dial-up Command, Platform Version ID 25, 30, 37

To get parameters descriptions for these platforms see documents [13], [14] or [15] according to the module used.



17. APPENDIX



Warning: General note for ALL Telit modules.

Localhost IP range doesn't perform any internal loopback therefore it shouldn't be used on any IP Easy command

17.1. IPv6 Protocol

The below table shows the Platform Version ID supporting IPV4 (IP), IPV6, and the dual IP stack (IPV4V6, see section 16.2). Refer to the Applicability Table to see the correspondence between the Platform Version ID and the products series.

	Internet Protocol Version				
	IP Easy environment	Dial UP connection	Easy GSM		
Platform Version ID	PDP Cont	GSM Context Type			
Plation in Version ID	AT+CGD	AT#GSMCONT=?			
10 (2G)	IP, IPV6	IP, IPV6	IP		
13 (2G)	IP, IPV6	IP, IPV6	IP		
16 (2G)	IP, IPV6	IP, IPV6	IP		
12 (3G)	IP, IPV6, IPV4V6	IP, IPV6, IPV4V6	IP		
20 (4G)	IP, IPV6, IPV4V6	IP, IPV6, IPV4V6	/		
23 (4G)	IP, IPV6, IPV4V6	IP, IPV6, IPV4V6	/		
25 (4G)	IP, IPV6, IPV4V6	IP, IPV6, IPV4V6	/		
30 (4G)	IP, IPV6, IPV4V6	IP, IPV6, IPV4V6	/		
37 (4G)	IP, IPV6, IPV4V6	IP, IPV6, IPV4V6	/		

Table 23: Platform Version ID & IPV4/IPV6 Addresses

17.1.1. 2G Modules

Assume to use a module having 2G technology and enter the AT+CGDCONT=? test command to get the supported parameters values. The returned message shows that the stack of the module can manage IPV4 or IPV6 protocol.

AT+CGDCONT=?

+CGDCONT: (1-5),"IP",,,(0,1),(0,1) +CGDCONT: (1-5),"IPV6",,,(0,1),(0,1)





17.1.2. 3G Modules

Assume to use a module having 3G technology and enter the AT+CGDCONT=? test command to get the supported parameters values. The returned message shows that the module provides a dual IP stack (IPV4V6) that can manage at the same time IPV4 and IPV6 protocols.

AT+CGDCONT=?

+CGDCONT: (1-5),"IP",,,(0,1),(0,1) +CGDCONT: (1-5),"IPV6",,,(0,1),(0,1) +CGDCONT: (1-5),"IPV4V6",,,(0,1),(0,1)

0K

17.1.3. 4G Modules

Assume to use a module having 4G technology and enter the AT+CGDCONT=? test command to get the supported parameters values. The returned message shows that the module provides a dual IP stack (IPV4V6) that can manage at the same time IPV4 and IPV6 protocols. Here is an example of a LE910-EU1 module having Platform Version ID 20.

AT+CGDCONT=?

+CGDCONT: (1-15),"IP",,,0,(0-4),(0,1),(0,1),(0,1),(0,1) +CGDCONT: (1-15),"IPV6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1) +CGDCONT: (1-15),"IPV4V6",,,0,(0-4),(0,1),(0,1),(0,1),(0,1)

0K



Warning: Platform Version ID 23:

the modules must be configured in bridge mode (see #NWMODE command, section 16.7) to work with IPV6.

17.2. IPv4, IPv6, and Dual-Stack

17.2.1. 2G/3G/4G Modules

Referring to figure below.

Define PDP context <cid>=1 using IPV4 ("IP").

AT+CGDCONT=1,"IP","Access_Point_Name"

OK

AT#SGACT = 1,1 ← activate PDP context <cid>=1

#SGACT: 31.157.55.95





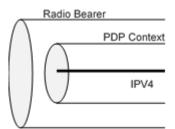


Figure 12: IPv4

#SL command is listening only on IPV4 connections.

Referring to Fig. 13.

Define PDP context <cid>=2 using IPV6.

AT+CGDCONT=2,"IPV6","Access_Point_Name"

OK

AT#SGACT=2,1 ← activate the PDP #SGACT: 42.1.1.152.2.76.193.109.0.0.5.17.176.201.1 OK

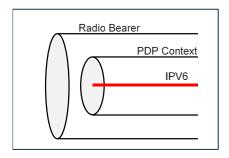


Figure 13: IPv6

#SL command is listening only on IPV6 connections.

17.2.2. 3G/4G Modules

Referring to figure below.

Define PDP context <cid>=1 using IPV4V6.

AT+CGDCONT=1,"IPV4V6","Access_Point_Name"

OK

AT#SGACT=1,1 ← activate the PDP context 1 #SGACT: 31.157.55.95,42.1.1.152.2.76.193.109.0.0.0.5.17.176.201.1 OK





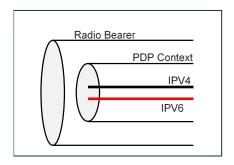


Figure 14: Dual IP Stack IPv4v6

Using a dual IP stack, the #SL command is listening on IPV4 and IPV6. If the first received packet is an IPV4 packet, the connection will continue to use only IPV4 packets, and IPV6 packets are discarded. Conversely, if the first received packet is an IPV6 packet. If you need to filter out some IP addresses use the firewall command, see section 7.4.

17.3. IPv6 Notation

The AT commands supporting the IPV6 address accept two IPV6 notations.

Dotted-decimal notation:

Hexadecimal notation:

yyyy:yyyy:yyyy:yyyy:yyyy:yyyy
 Where yyyy is expressed in hexadecimal format

The AT commands return the IPV6 addresses always in the dotted-decimal notation.

17.3.1. +CGPIAF Command

4G modules provide the +CGPIAF command to select the format used to display the IPV6 address. The command syntax is:

To have information on the parameters meaning refer to documents [4], [11], [13], [14], or [15] in accordance with the module you are using.





17.4. Examples

17.4.1. +CGDCONT Command & IPV6 Notation

Assume to use a 2G module and enter the +CGDCONT test command.

AT+CGDCONT=?

+CGDCONT: (1-5),"IP",,,(0,1),(0,1)

+CGDCONT: (1-5),"IPV6",,,(0,1),(0,1)

0K

Define PDP context <cid>=1 using IPV6.

AT+CGDCONT=1,"IPV6","Access_Point_Name"

0K

Activate the PDP Context. The command returns the IPV6 address assigned by the network to the module in dotted-decimal notation.

AT#SGACT=1,1

+IP: 42.1.1.152.2.76.193.109.0.0.5.17.176.201.1

0K

17.4.2. #SD Command & IPV6 Notation

Configure the socket.

AT#SCFG=1,1,300,90,600,50

0K

Open a socket connection using IPV6 in dotted-decimal notation.

AT#SD=1,0,80,"32.1.7.0.0.0.1.46.0.0.0.0.0.15.112",0

CONNECT

.

Open a socket connection using IPV6 in hexadecimal notation.

AT#SD=1,0,80," 2001:700:0:12e::f70",0

CONNECT

.

17.4.3. #FTPOPEN Command & IPV6 Notation

Open an FTP connection using IPV6 in dotted-decimal notation. AT#FTPOPEN="32.1.7.0.0.0.1.46.0.0.0.0.0.15.112","",1 OK

Open an FTP connection using IPV6 in hexadecimal notation.

AT#FTPOPEN="2001:700:0:12e::f70","",1





17.4.4. #PING Command & IPV6 Notation

Ping remote host using IPV6 in dotted-decimal notation.

AT#PING="32.1.7.0.0.0.1.46.0.0.0.0.0.0.15.112"

#PING: 01," 32.1.7.0.0.0.1.46.0.0.0.0.0.15.112",47,237

...

0K

0K

Ping remote host using IPV6 in hexadecimal notation.

AT#PING="2001:700:0:12e::f70"

#PING: 01," 32.1.7.0.0.0.1.46.0.0.0.0.0.15.112",47,237

. . .

0K

17.4.5. #DNS Command & IPV6 Notation

Set primary and secondary DNS servers. Use the hexadecimal notation for the IPV6 addresses.

AT#DNS=1,"2001:4860:4860::8888","2001:4860:4860::8844"

Check the DNS addresses set manually. The IPV6 addresses are returned in dotted-decimal notation.

AT#DNS?

#DNS:

1,"32.1.72.96.72.96.0.0.0.0.0.0.0.0.136.136","32.1.72.96.72.96.0.0.0.0.0.0.0.136.68"



Warning: #DNS Command does not present on Platform Version ID 30, 37.

17.4.6. #FRWLIPV6 Command & IPV6 Notation

Check all the ACCEPT chains. The command returns the IPV6 addresses in dotted-decimal notation.

AT#FRWLIPV6?



17.5. #NCN Command

#NCM command sets up the Network Control Model protocol. The command provides two modes to establish a Default EPS Bearer:

- Mode=1 (see section 16.5.1)
- Mode=2 (see section 16.5.2)



Warning: #NCM command does not belong to the IP Easy environment and is available on modules having Platform Version ID 20, see documents [4], and [9].

17.5.1. #NCM Command, Mode=1

Assume to use the #NCM command configured in NCM mode =1 (manual PDP context activation). In addition, the #NCM command configuration does not use authentication parameters. To set the authentication parameters use the #PDPAUTH command.

At power on, assume that the PDP context identified by <cid>=1 has not defined APN.

AT+CGDCONT?

```
+CGDCONT: 1,"IPV4V6","","",0,0
OK
```

After attach procedure, the PDP context identified by <cid>=1 is automatically associated to the Default EPS Bearer assigned by the Network Operator in response of the not defined APN.

Read the PDP context dynamic parameters.

AT+CGCONTRDP=1

```
+CGCONTRDP:
1,
5,
"APN_Assegned_by_Network",
"100.87.125.10.255.0.0.0",
"100.87.125.11",
"80.201.237.239",
"0.0.0.0","0.0.0.0",
"0.0.0.0"
```



```
IP Easy User Guide
Set up the new PDP Context identified by <cid>=3.
AT+CGDCONT=3,"IPV4V6","Access_Point_Name"
0K
Set the PDP authentication parameters on PDP context <cid>=3.
AT#PDPAUTH=3,1,"UserName","PassWord"
0K
Activate the PDP Context identified by <cid>=3.
AT+CGACT=1,3
0K
Check the PDP contexts dynamic parameters assigned by the Network Operator.
AT+CGCONTRDP=
+CGCONTRDP:
1,
                  ← PDP context activated during attach procedure
5.
"APN_Assegned_by_Network",
"100.114.19.108.255.0.0.0",
"100.114.19.109",
"80.201.237.239",
"0.0.0.0",
"0.0.0.0",
"0.0.0.0"
+CGCONTRDP:
3.
                      PDP context activated by +CGACT command
6,
"Access_Point_Name.....",
"10.113.0.66.255.0.0.0",
```

```
"10.113.0.67",
"8.8.4.4",
```

"0.0.0.0", "0.0.0.0".

"0.0.0.0"

0K

You must configure your PC to use the NCM command, refer to document [9]. Use NMC mode = 1 and assign the NCM protocol to PDP context identified by <cid> = 3. AT#NCM=1,3

0K

Use the AT+CGDATA=? test command to check the protocols supported by the module. AT+CGDATA=?



+CGDATA: ("PPP","M-HEX","M-RAW_IP"),(1-15)
OK

Activate the NCM protocol, refer to document [9].

AT+CGDATA="M-RAW_IP",3

CONNECT

OK

17.5.2. #NCM Command, Mode=2

This example focuses on the use of:

- 1. #NCM with authentication parameters. If you use the AT#PDPAUTH command, and then use the AT#NCM command with new authentication parameters, the authentication process is performed using the last entered parameters.
- 2. #NCM command in NCM mode = 2 (automatic PDP context and NCM activation).

At power on, assume that the PDP context identified by <cid>=1 has not defined APN.

AT+CGDCONT?

```
+CGDCONT: 1,"IPV4V6","","",0,0
OK
```

After attach procedure, the PDP context identified by <cid>=1 is automatically associated to the Default EPS Bearer assigned by the Network Operator in response of the not defined APN (see +CGDCONT? command above).

Read the PDP context dynamic parameters.

```
AT+CGCONTRDP=1
```

```
+CGCONTRDP:
1,
5,
"APN_Assegned_by_Network",
"100.80.28.204.255.0.0.0","100.80.28.205",
"80.201.237.239",
"0.0.0.0","0.0.0.0",
"0.0.0.0"
```

Set up the new PDP Context associated to <cid>=1. AT+CGDCONT=1,"IPV4V6","Access_Point_Name" OK

Verify the entered PDP Context.

AT+CGDCONT?

```
+CGDCONT: 1,"IPV4V6","Access_Point_Name","",0,0
```



Set the PDP authentication parameters on PDP context <cid>=1. This authentication parameters will be overwritten by the #NCM command used at the end of this example.

AT#PDPAUTH=1,1,"UserName","PassWord"

0K

Detach the module from the network.

AT+CGATT=0

0K

Verify if the module is detached.

AT+CGATT?

+CGATT: 0

0K

You must configure your PC to use the NCM command, refer to document [9]. Using the NCM mode = 2, the command activates automatically the PDP context identified by the <cid> (in this case <cid>=1). The authentication parameters override the previous Username and Password entered through the #PDPAUTH command.

AT#NCM=2,1,0,"UserName","PassWord" OK

Verify the state of the PDP Context.

AT+CGACT?

+CGACT: 1.1

0K

Check the PDP context dynamic parameters assigned by the Network Operator in response of the user-defined PDP context activated by the #NCM command.

AT+CGCONTRDP=1

```
+CGCONTRDP:
```

1.

5,

"Access_Point_Name.....",

"10.113.0.66.255.0.0.0",

"10.113.0.67",

"8.8.4.4",

"0.0.0.0",

"0.0.0.0",

"0.0.0.0"

0K



17.6. #MBIMCFG Command

#MBIMCFG command selects the <cid> that will be used by the MBIM standard when a connection will be established. The host (PC) is connected to the device (module) through a USB port. The device uses the assigned <cid> and starts the connection. The command syntax is:

AT#MBIMCFG=<cid>



Warning: #MBIMCFG command does not belong to the IP Easy environment and is available on modules having Platform Version ID 20, see document [4]

17.6.1. Modules: LE910 Series

Modules: LE910-EU1, B1-EU, -JN1, -NA1, B1-NA, B1-SA, -NA V2, B4-NA, -EU V2, AU V2

Check the available < cid> for the MBIM standard.

AT#MBIMCFG=? #MBIMCFG: (1-15)

0K

Check the current <cid> assigned to the MBIM standard

AT#MBIMCFG? #MBIMCFG: 15

0K

17.6.2. Modules: LE910-SV1, -SVL, SV V2

Check the module identification.

AT+CGMM LE910-SV1

0K

In this product, only <cid> = 3 can be used by the MBIM standard.

AT#MBIMCFG=? #MBIMCFG: (3)

0K

Check the current <cid> assigned to the MBIM standard.

AT#MBIMCFG? #MBIMCFG: 3

0K



17.7. #NWMODE Command

#NWMODE command sets the network configuration on the USB port, which is running the RNDIS/ECM protocols. After entering this command, the module reboots. The command syntax is:

AT#NWMODE=<mode>,<dhcp>,<dmz>



Warning: #NWMODE command does not belong to the IP Easy environment and is available on modules having Platform Version ID 23. see document [11].

Here is how to use the PPP protocol, and configure the module in router or bridge mode.

- In router mode, the module and the host establish a local network. If is used
 - o IPv4 protocol, the host has a unique local address.
 - IPv6 protocol, the host may have also a global address.
- In bridge mode, the host has the addresses assigned directly by the network operator.

The PPP protocol is available only in router mode.

#NWMODE=0,0,0 default configuration, module set for no inbound data to the host;

<mode>=0: router mode:

<dhcp> =0: DHCP on USB-RNDIS/ECM is disabled.

Host IPv4 address is set manually at 10.0.0.10. The host is also assigned a link-local IPv6 address.

Note: the 10.0.1.10 address (see section 15.1.4.2) is active when PPP is running. Therefore, the host may have both addresses 10.0.1.10 and 10.0.0.10 if PPP is running, and USB is active.

<dmz> =0: module server services are accessible from outside. The host cannot be accessed from outside (no inbound data to the host).

The start of the PPP protocol triggers the PDP context activation, see section 15.1.1.

If the PPP protocol is not running, the host can use the USB-RNDIS/ECM connection to reach the external network. The PDP context must be active.

#NWMODE=0.0.2 module set for inbound data to the host;

<mode>=0: router mode;

<dhcp> =0: DHCP on USB-RNDIS/ECM is disabled.



Host IPv4 address is set manually at 10.0.0.10. The host is also assigned a link-local v6 address.

Note: The 10.0.1.10 address (see section 15.1.4.2) is active when PPP is running. Therefore, the host may have both addresses 10.0.1.10 and 10.0.0.10 if PPP is running, and USB is active.

The start of the PPP protocol triggers the PDP context activation, see section 15.1.1.

If the PPP protocol is not running, the host can use the USB-RNDIS/ECM connection to reach the external network. The PDP context must be active.

#NWMODE=0,1,0 network operator assigns to the host the global address IPv6;

<mode>=0: router mode;

<dhcp> =1: DHCP on USB-RNDIS/ECM is enabled as in a local network.

Host IPv4 address is automatically set at 10.0.0.10.

The host is also assigned the global and link-local IPv6 addresses. The global address prefix is allocated by the network operator.

<dmz> =0: module server services are accessible from outside. The host cannot be accessed from outside (no inbound data to the host),
The host can use the USB-RNDIS/ECM connection to reach the external network. The PDP context must be active.

The PPP protocol is not available in bridge mode.

#NWMODE=1,1,1 network operator assigns to the host the IPv4, and the global address IPv6. The module works like a modem;

<mode>=1: bridge mode;

<dhcp> =1: DHCP on USB-RNDIS/ECM is enabled, in this configuration the host sees the module like a modem, which means that #SD, #HTTP, #FTP, and #SSL AT commands are not available.

A Host IP address is automatically set using the IP address provided by the network operator. To the host are also assigned the global and link local IPv6 addresses. The global address prefix is assigned by the network operator.



<dmz> =1: server services in the host are accessible from outside via
USB-RNDIS/ECM connection (inbound data to the host). <dhcp> must be set
to 1. PDP context must be active.

17.8. Obsolete Commands

Historically, IP Easy Extension is an improvement of the first IP Easy environment. To underline the differences between IP Easy and IP Easy Extension environments, here is the correspondence table between the obsolete commands of the IP Easy environment and the new commands of the IP Easy Extension environment. It is strongly recommended to use only the commands set of the IP Easy Extension environment, and

recommended to use only the commands set of the IP Easy Extension environment, and do not mix obsolete and new commands. In chapter 3, IP Easy term indicates the IP Easy Extension.

IP Easy Extension

IP Easy	IP Easy Extension	
Obsolete Commands	New Commands	Operation Description
AT#SKTOP	AT#SGACT; AT#SD	socket open
AT#SKTD	AT#SD	socket dial
AT#SKTL	AT#SL	socket listen
AT#SKTSET	not required	
AT#SKTSAV	not required	
AT#GPRS	AT#SGACT	activation of context
+++ after AT#SKTD	+++; AT#SH	socket close
+++ after AT#SKTOP	+++; AT#SH; AT#SGACT	
AT#USERID	AT#SGACT	authentication
AT#PASSWD	AT#SGACT	
AT#PKTSZ	AT#SCFG	socket configuration
AT#DST0	AT#SCFG	
AT#SKTTO	AT#SCFG	
AT#SKTCT	AT#SCFG	

Table 34: Obsolete and New AT Commands



Warning: Obsolete commands are not available on Platform Version ID 30, 37.

Obsolete commands in a Multi-socket environment

#SKTD and #SKTL obsolete commands (IP Easy) are available also on modules providing the Multi-socket feature (IP Easy Extension). They work in the old-fashioned: when a connection is opened with #SKTD, it cannot be suspended, and the escape sequence (+++) closes definitively the connection.

#SKTOP must be not use with the new Multi-socket commands because it deactivates the context when the connection is closed, this could close the suspended sockets.

CMUX and obsolete commands



Using the CMUX tool, the module provides three virtual serial lines connected to three AT parsers, refer to document [6]. Assume that one HTTP (or SMTP, FTP) session is already opened on a CMUX virtual port. If you try to open a second HTTP client connection on another CMUX virtual port, the HTTP command returns an error message. When the old HTTP connection is closed, the new one can be opened.

CMUX protocol allows the use of three virtual ports to enter AT commands, refer to document [6]. #SKTD allows opening three simultaneous connections. The connections are closed using the escape sequence (+++).

#SKTOP is a mono-socket command and works only with <cid>=1 and <connId>=1, therefore it can be used only on one virtual port of CMUX.



18. Product and Safety Information

18.1. Copyrights and Other Notices

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Although reasonable efforts have been made to ensure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from the use of the information contained herein. The information in this document has been carefully checked and is believed to be reliable. Telit reserves the right to make changes to any of the products described herein, to revise it and to make changes from time to time with no obligation to notify anyone of such revisions or changes. Telit does not assume any liability arising from the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

This document may contain references or information about Telit's products (machines and programs), or services that are not announced in your country. Such references or information do not necessarily mean that Telit intends to announce such Telit products, programming, or services in your country.

18.1.1. Copyrights

This instruction manual and the Telit products described herein may include or describe Telit's copyrighted material, such as computer programs stored in semiconductor memories or other media. Laws in Italy and in other countries reserve to Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive righ to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any of Telit's or its licensors' copyrighted material contained herein or described in this instruction manual, shall not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of the owner. Furthermore, the purchase of Telit's products shall not be deemed to grant in any way, neither directly nor by implication, or estoppel, any license.

18.1.2. Computer Software Copyrights

Telit and the 3rd Party supplied Software (SW) products, described in this instruction manual may include Telit's and other 3rd Party's copyrighted computer programs stored in semiconductor memories or other media. Laws in Italy and in other countries reserve to Telit and other 3rd Party SW exclusive rights for copyrighted computer programs,



including – but not limited to – the exclusive right to copy or reproduce in any form the copyrighted products. Accordingly, any copyrighted computer programs contained in Telit's products described in this instruction manual shall not be copied (reverse engineered) or reproduced in any manner without the express written permission of the copyright owner, being Telit or the 3rd Party software supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or in any other way, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use arising by operation of law in the sale of a product.

18.2. Usage and Disclosure Restrictions

18.2.1. License Agreements

The software described in this document is owned by Telit and its licensors. It is furnished by express license agreement only and shall be used exclusively in accordance with the terms of such agreement.

18.2.2. Copyrighted Materials

The Software and the documentation are copyrighted materials. Making unauthorized copies is prohibited by the law. The software or the documentation shall not be reproduced, transmitted, transcribed, even partially, nor stored in a retrieval system, nor translated into any language or computer language, in any form or by any means, without prior written permission of Telit.

18.2.3. High Risk Materials

Components, units, or third-party goods used in the making of the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: operations of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems ("High-Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness eligibility for such High Risk Activities.

18.2.4. Trademarks

TELIT and the Stylized T-Logo are registered in the Trademark Office. All other product or service names are property of their respective owners.



18.2.5. 3rd Party Rights

The software may include 3rd Party's software Rights. In this case the user agrees to comply with all terms and conditions imposed in respect of such separate software rights. In addition to 3rd Party Terms, the disclaimer of warranty and limitation of liability provisions in this License, shall apply to the 3rd Party Rights software as well.

TELIT HEREBY DISCLAIMS ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED FROM ANY 3RD PARTY REGARDING ANY SEPARATE FILES, ANY 3RD PARTY MATERIALS INCLUDED IN THE SOFTWARE, ANY 3RD PARTY MATERIALS FROM WHICH THE SOFTWARE IS DERIVED (COLLECTIVELY "OTHER CODES"), AND THE USE OF ANY OR ALL OTHER CODES IN CONNECTION WITH THE SOFTWARE, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE.

NO 3RD PARTY LICENSORS OF OTHER CODES MUST BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST OF PROFITS), HOWEVER CAUSED AND WHETHER MADE UNDER CONTRACT, TORT OR OTHER LEGAL THEORY, ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE OTHER CODES OR THE EXERCISE OF ANY RIGHTS GRANTED UNDER EITHER OR BOTH THIS LICENSE AND THE LEGAL TERMS APPLICABLE TO ANY SEPARATE FILES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

18.2.6. Waiver of Liability

IN NO EVENT WILL TELIT AND ITS AFFILIATES BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY INDIRECT DAMAGE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO REIMBURSEMENT OF COSTS, COMPENSATION OF ANY DAMAGE, LOSS OF PRODUCTION, LOSS OF PROFIT, LOSS OF USE, LOSS OF BUSINESS, LOSS OF DATA OR REVENUE, WHETHER OR NOT THE POSSIBILITY OF SUCH DAMAGES COULD HAVE BEEN REASONABLY FORESEEN, CONNECTED IN ANY WAY TO THE USE OF THE PRODUCT/S OR TO THE INFORMATION CONTAINED IN THE PRESENT DOCUMENTATION, EVEN IF TELIT AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE OR FOR CLAIMS BY ANY THIRD PARTY.

18.3. Safety Recommendations

Make sure the use of this product is allowed in your country and in the environment required. The use of this product may be dangerous and has to be avoided in areas where:

IP Easy User Guide



- it can interfere with other electronic devices, particularly in environments such as hospitals, airports, aircrafts, etc.
- there is a risk of explosion such as gasoline stations, oil refineries, etc. It is the responsibility of the user to enforce the country regulation and the specific environment regulation.

Do not disassemble the product; any mark of tampering will compromise the warranty validity. We recommend following the instructions of the hardware user guides for correct wiring of the product. The product has to be supplied with a stabilized voltage source and the wiring has to be conformed to the security and fire prevention regulations. The product has to be handled with care, avoiding any contact with the pins because electrostatic discharges may damage the product itself. Same cautions have to be taken for the SIM, checking carefully the instruction for its use. Do not insert or remove the SIM when the product is in power saving mode.

The system integrator is responsible for the functioning of the final product. Therefore, the external components of the module, as well as any project or installation issue, have to be handled with care. Any interference may cause the risk of disturbing the GSM network or external devices or having an impact on the security system. Should there be any doubt, please refer to the technical documentation and the regulations in force. Every module has to be equipped with a proper antenna with specific characteristics. The antenna has to be installed carefully in order to avoid any interference with other electronic devices and has to guarantee a minimum distance from the body (20 cm). In case this requirement cannot be satisfied, the system integrator has to assess the final product against the SAR regulation.

The equipment is intended to be installed in a restricted area location.

The equipment must be supplied by an external specific limited power source in compliance with the standard EN 62368-1:2014.

The European Community provides some Directives for the electronic equipment introduced on the market. All of the relevant information is available on the European Community website:

https://ec.europa.eu/growth/sectors/electrical-engineering_en



19. GLOSSARY

USB	Universal Serial Bus	
HS	High Speed	
DTE	Data Terminal Equipment	
UMTS	Universal Mobile Telecommunication System	
UART	Universal Asynchronous Receiver Transmitter	
SIM	Subscriber Identification Module	
SPI	Serial Peripheral Interface	
ADC	Analog – Digital Converter	
DAC	Digital – Analog Converter	
1/0	Input Output	
GPI0	General Purpose Input Output	
MRDY	Master Ready	
CS	Chip Select	
RTC	Real Time Clock	



20. DOCUMENT HISTORY

Revision	Date	Changes
27	2022-05-11	Changed Doc Title. Minor editorial changes
26	2021-07-22	Added chapter MQTT Protocol
25	2021-02-19	The document is fully revised, and chapters are reorganized. A new template is used.
		Added clauses 5.2.4, 5.4.4, 5.8.2, 5.9.2 and 11.3.3.
		Product series added: ME910C1 SERIES, ML865C1 SERIES; ME310G1 SERIES, ME910G1 SERIES, ML865G1 SERIES.
24	2019-07-10	Product series added: LE910Cx
23	2017-10-24	The document is fully revised, and chapters are reorganized. A new template is used.
		Product series removed: GC864, GE864, GT86x, UC864, UE910 V2, and HE910 V2.
		Product series added: LE910 Cat1, LE910 V2, LE866, and ME866A1.
		Revised chapter 6.1 Firewall Setting.
		Added HTTP POST and PUT examples Added: chapters 15.1.4.2 Dial-up Command, Platform ID 23; 16.7 #NWMODE
22	2015-11-10	Updated the table in chapter 6. SW version 12.00.xxx supports IPV6 in IP Easy
21	2014-11-17	Added the note " open a socket with #SD" in chapter 3.2
20	2014-10-21	Chapter 3.2.3: changed the two footnotes
19	2014-09-03	Products added: UE910-EU V2 / 19.10.xx2 UE910-NA V2 / 19.10.xx2 UE910-EU V2 AUTO / 19.10.xx2 HE910-EU V2 / 14.22.xx1 HE910-EUG V2 / 14.22.xx1 HE910-NA V2 / 14.22.xx1 HE910-NAG V2 / 14.22.xx1 HE920-EU AUTO / 14.12.xx1 HE920-NA AUTO / 14.12.xx1
18	2014-07-14	Chapter 6.1.1: correct the syntax of the AT#SL command listed in the first table of the chapter.
17	2014-04-18	Added chapters 8 and 10 Chapter 3.7.1 "IP Easy- HTTP client application" was renamed to "IP Easy HTTP client with #SD"





		Chapter 3.7.2. – "IP Easy - EMAIL sending application" was renamed to "IP Easy - EMAIL sending with #SD" and part with AT#SMTPCL / AT#EMAILD was removed Chapter 3.7.3 - "IP Easy -EMAIL receiving application" was renamed to "IP Easy -EMAIL receive with #SD" IPv6 table updated in chapter 6 "Notes concerning IPV6 Implementation
16	2014-03-06	Changed sentence in Chapter 10.5.4 Products added
15	2013-02-19	Updated Applicability Table and chapter 1.4 Added IPV6 parameter value relating +CGDCONT command in chapter 3.1 Modified max number of bytes from 1024 to 1500 in chapter 7.3. Added chapter 16.1
14	2013-02-07	Removed a note in chapter 3.5.1. Updated Applicability Table.
13	2012-10-09	Updated Applicability and SW Versions tables. Modified values range of the <srmode> parameter of the AT#SCFGEXT command. Added new commands #FTPAPPEXT, #SLASTCLOSURE</srmode>
12	2011-10-20	Update related to differences relating to SW versions starting from 12.00.xx1
11	2011-10-17	Updated software versions Corrected mistake in note at par 2.1.3
10	2011-03-09	Added new features related to sw release 10.0.04 such as:
		 AT#SMTPCL command, it allows to send an email with different types of attachments. #SMTPCL handles attachment, managing MIME headers and encoding if required.
		Updated all references from "GPRS" to "GPRS/UMTS/HSPA"(or removed when not required)
		Correction on #SSENDEXT referenced wrongly as "#SSEND" at page 78; par. 5.2.3
		Correction on par. 5.2.1(pag.74), reference to #SD / cmd mode (was wrongly indicated as "Atem")
		Added general note regarding availability of commands on different SW version
		Changed title from EASY GPRS User Guide to IP Easy User Guide
9	2010-10-04	Added GL865-DUAL to applicability table
8	2010-07-26	Added new features related to sw release 7.03.02 or 7.02.07 such as: - added new socket configuration parameters (see new #SCFGEXT2 command) - added new command #SSENDEXT for sending data in command mode






7		
		Added new features related to sw release 7.03.02 ,7.02.07 or 10.0.02 such as: - AT#PADFWD and AT#PADCMD commands Removed parameter no more present in #EMAILD command from the example (page 61) Added new features related to SW release 10.0.03 such as: - AT#BASE64 command - AT#SGACTCFGEXT command Added note in Easy GSM chapter, about COPS and CSURV commands
7	2009-08-24	Added new features related to sw release 7.03.01 or 7.02.06 such as: - automatic context activation, - direct control on TCP/IP settings, - Listen auto-response, UDP Listen, - command mode data sending in Hex format, - ICMP/PING handling.
6	2009-07-31	Applied new layout – shifted paragraphs accordingly Added explanation about escape sequence guard time
5	2009-07-20	Added new features related to sw release 7.03.01 or 7.02.06 such as: FTP in command mode (par. 3.3.4.2, 3.3.5, 3.3.6)
4	2008-07-16	Added new features related to sw release 7.03.00 or 7.02.05 such as: command mode connections and Easy GPRS over GSM
3	2007-11-29	This document has been integrated with Multi-socket User Guide and is valid from the 7.02.03 SW release
2	2007-09-03	updated applicability table new disclaimer
1	2007-03-14	2.3.2 Easy GPRS – Email sending application: added new examples
0	2007-02-01	Initial release

From Mod.0817 rev.1



www.telit.com



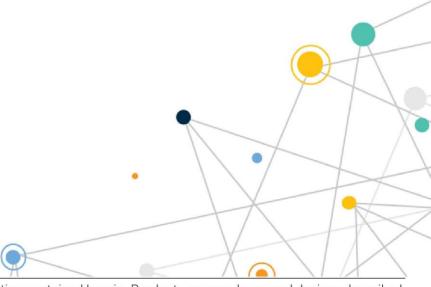

Telit reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. The information contained herein is provided "as is". No warranty of any kind, either express or implied, is made in relation to the accuracy, reliability, fitness for a particular purpose or content of this document. This document may be revised by Telit at any time. For most recent documents, please visit www.telit.com

Copyright © 2022, Telit